

Similar video tutorial



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for: MERCEDES-BENZ E-Class T-modell (S124) E 300 TD (124.191), MERCEDES-BENZ E-Class T-modell (S124) E 280 T (124.088), MERCEDES-BENZ E-Class T-modell (S124) E 320 T (124.092), MERCEDES-BENZ E-Class T-modell (S124) E 250 TD (124.186)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: MERCEDES-BENZ E-Class Saloon (W124) E 250 D (124.126, 124.129)

[club.autodoc.co.uk](http://club.autodoc.co.uk)

1-14

Replacement: coil springs - MERCEDES-BENZ E-Class T-modell (S124). Tools you'll need:



- Wire brush
- WD-40 spray
- All-purpose cleaning spray
- Ceramic grease
- Torque wrench
- Combination spanner #13
- Combination spanner #19
- Combination spanner #22
- Drive socket #13
- Drive socket #19
- HEX bit no.H6
- HEX bit no.H7
- Wheel impact socket #17
- Ratchet wrench
- Tap wrench
- Water pump pliers
- Crow bar
- Strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

[Buy tools](http://club.autodoc.co.uk)

[club.autodoc.co.uk](http://club.autodoc.co.uk)

2-14

Replacement: coil springs - MERCEDES-BENZ E-Class T-modell (S124). AUTODOC experts recommend:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- All work should be done with the engine stopped.

Replacement: coil springs - MERCEDES-BENZ E-Class T-modell (S124). Take the following steps:

1. Secure the wheels with chocks.
2. Loosen the wheel bolts. Use wheel impact socket #17. Use a tap wrench.



3. Raise the car.

AUTODOC recommends:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

[club.autodoc.co.uk](http://club.autodoc.co.uk)

3-14

4

Unscrew the wheel bolts.



AUTODOC recommends:


- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. MERCEDES-BENZ E-Class T-modell (S124)

5

Remove the wheel.



6 Support the steering knuckle. Use a hydraulic transmission jack.

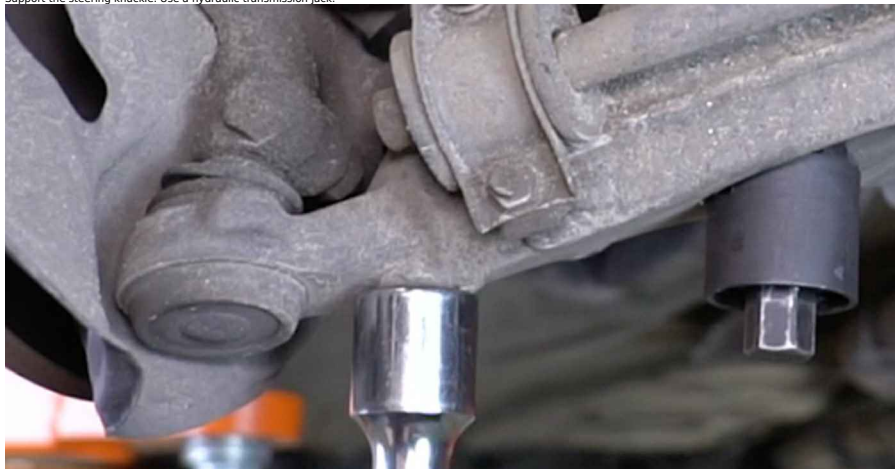

7 Install the coil spring compressor on the coil spring.



[club.autodoc.co.uk](http://club.autodoc.co.uk)  
4-14

AUTODOC recommends:

- Use adapters and jaws of the appropriate size.
- The spring coils should be securely fixed with the coil spring compressor.
- Use high quality coil spring compressors.

8

Compress the spring.





Replacement: coil springs - MERCEDES-BENZ E-Class T-modell (S124). Tip from AUTODOC experts:

- Be careful. The compressed spring is powerful and can cause injury if it comes loose.

9  
Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.



[club.autodoc.co.uk](http://club.autodoc.co.uk)

5-14


10  
Disconnect the wiring from the strut.



11  
Unscrew the lower fasteners on the shock absorber. Use a drive socket #19. Use a ratchet wrench.



12  
Remove the fastening bolts.

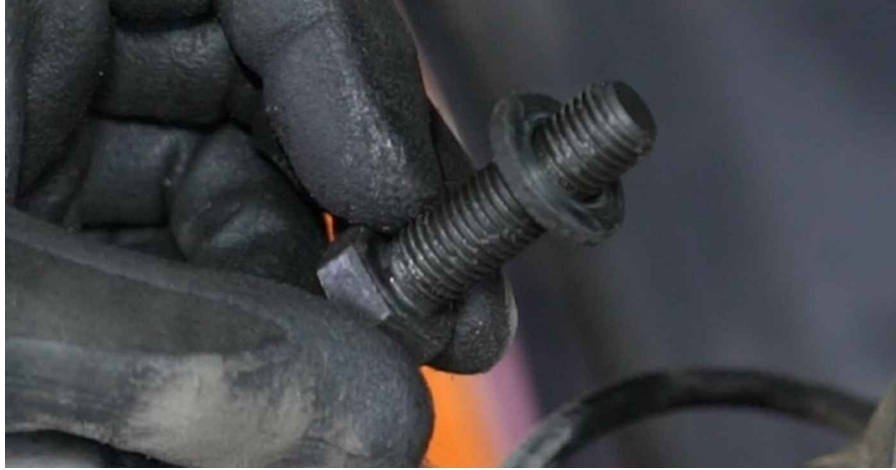

13  
Detach the strut from the steering knuckle. Use a crowbar.



14  
Clean the fasteners of the stabilizer bush brackets. Use a wire brush. Use WD-40 spray.



[club.autodoc.co.uk](http://club.autodoc.co.uk)  
6-14

15  
Unscrew the fasteners of the stabilizer bush brackets. Use a combination spanner #13. Use a drive socket #13. Use a ratchet wrench.



16  
Remove the fastening bolts.



17  
Remove the stabilizer bush brackets.



18  
Remove the coil spring together with the coil spring compressor.



[club.autodoc.co.uk](http://club.autodoc.co.uk)  
7-14

Replacement: coil springs - MERCEDES-BENZ E-Class T-modell (S124). AUTODOC experts recommend:

- While the spring is compressed, do not do any operations on it.

19  
Decompress the spring.



20  
Put the coil spring compressor on the new spring.





Replacement: coil springs - MERCEDES-BENZ E-Class T-modell (S124). Tip from AUTODOC:

- The position of the compressor on the new coil spring should be the same as on the old one.

21  
Compress the spring.




[club.autodoc.co.uk](http://club.autodoc.co.uk)  
8-14


AUTODOC recommends:

- Be careful. The compressed spring is powerful and can cause injury if it comes loose.

22  
Clean the coil spring mounting seats. Use a wire brush. Use all-purpose cleaning spray.

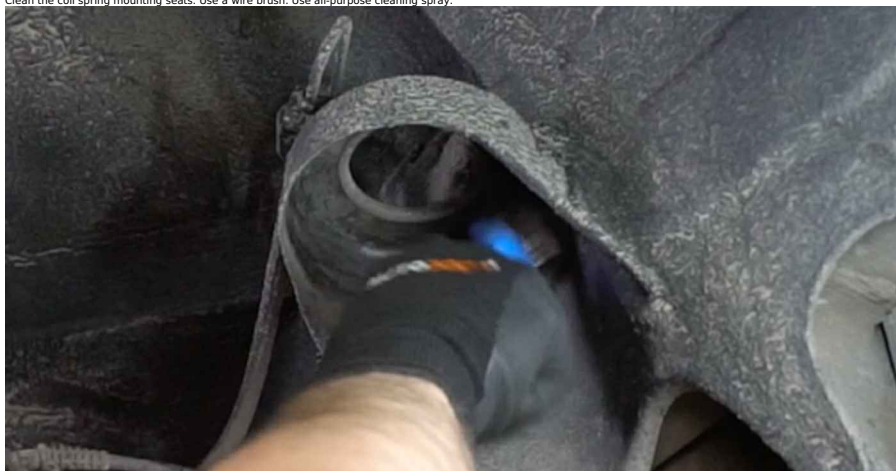

23  
Install the spring together with the compressor.

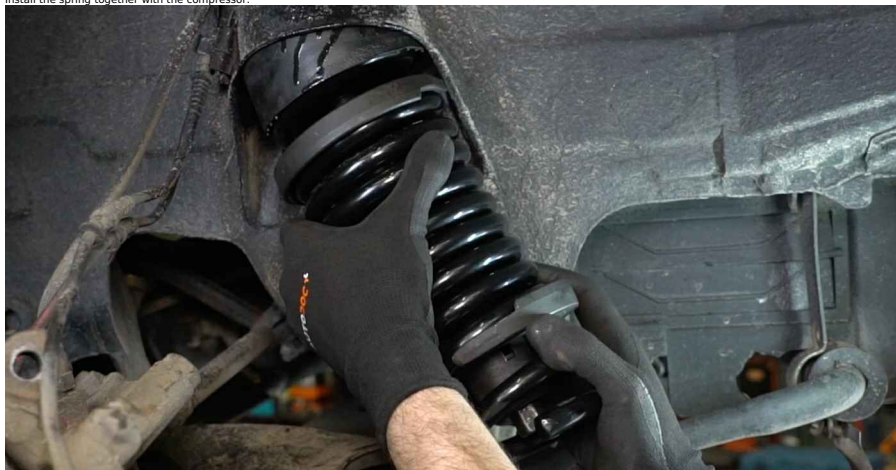

AUTODOC recommends:

- Make sure that the coil spring is correctly positioned in its mounting seats.

24  
Install the fastening bolts.



[club.autodoc.co.uk](http://club.autodoc.co.uk)  
9-14


25  
Tighten the lower fasteners on the shock absorbers. Use a drive socket #19. Use a torque wrench. Tighten it to 110 Nm torque.



26  
Remove the support from under the steering knuckle.


AUTODOC recommends:  
• Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.

27  
Secure the wiring to the strut.

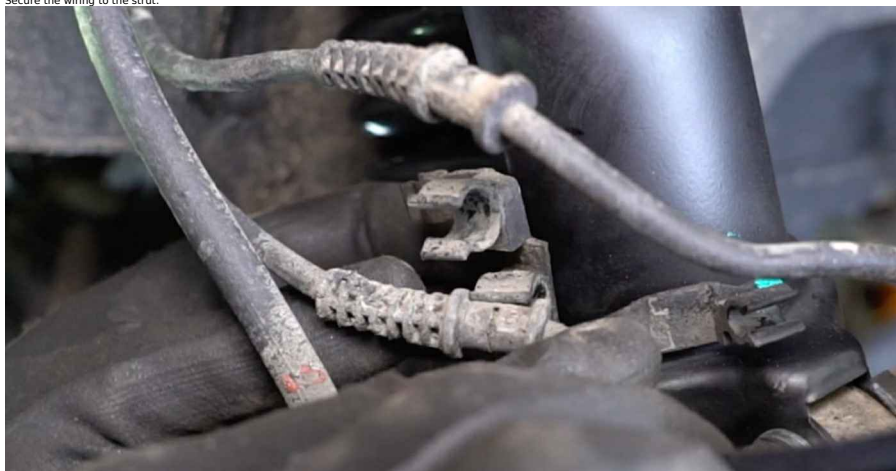

28  
Install the stabilizer bush brackets. Use water pump pliers.

29  
Install the fastening bolts.

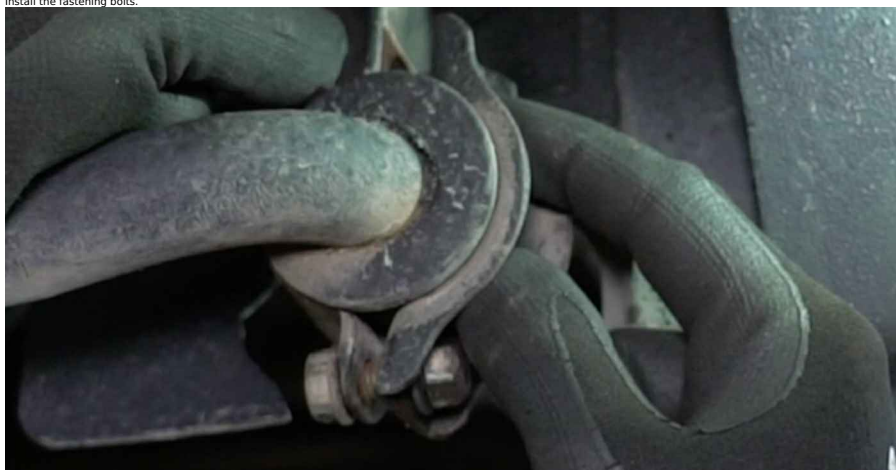

[club.autodoc.co.uk](http://club.autodoc.co.uk)  
10-14

30  
Tighten the fasteners on the anti-roll bar bush brackets. Use a combination spanner #13. Use a drive socket #13. Use a torque wrench. Tighten it to 20 Nm torque.





31  
Decompress the spring.



32  
Remove the coil spring compressor.



33  
Clean the wheel rim mounting seat. Use a wire brush. Use all-purpose cleaning spray.



[club.autodoc.co.uk](http://club.autodoc.co.uk)  
11-14  
34  
Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.





35  
Install the wheel.




Replacement: coil springs - MERCEDES-BENZ E-Class T-modell (S124). AUTODOC recommends:  
• To avoid injury, hold up the wheel when screwing in the fastening bolts.

36  
Screw in the wheel bolts. Use wheel impact socket #17. Use a ratchet wrench.



[club.autodoc.co.uk](http://club.autodoc.co.uk)  
12-14

37  
Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 110 Nm torque.

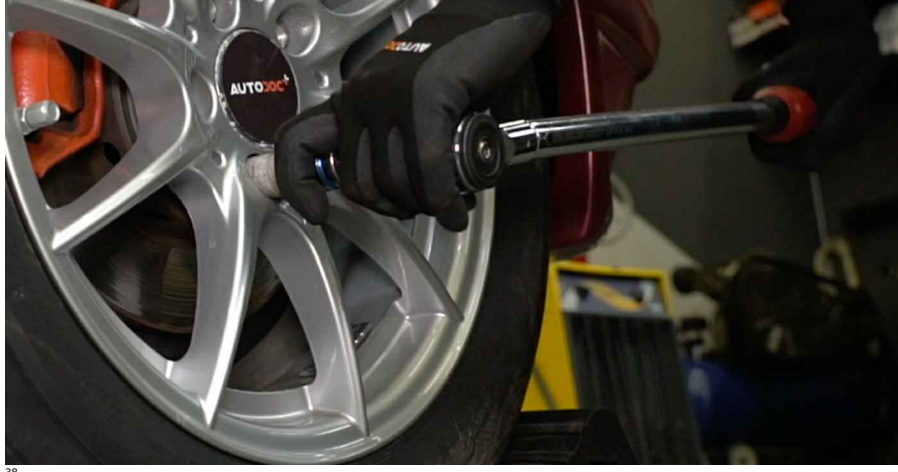

38  
Remove the jacks and chocks.



Well done!  
[View more tutorials](#)  
[club.autodoc.co.uk](http://club.autodoc.co.uk)  
13-14

AUTODOC — top quality and affordable car parts online  
[AUTODOC mobile app: Great deals and convenient shopping](#)

**+ AUTODOC**

GET IT ON  
Google Play

Download on the  
App Store

Download

[A great selection of spare parts for your car](#)  
[Coil springs: a wide selection](#)  
Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 - All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

[club.autodoc.co.uk](http://club.autodoc.co.uk)  
14-14