



How to change rear coil
springs on **MERCEDES-
BENZ E-Class T-modell
(S210)** – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:


MERCEDES-BENZ E-Class T-modell (S210) E 200 T (210.235), MERCEDES-BENZ E-Class T-modell (S210) E 230 T (210.237), MERCEDES-BENZ E-Class T-modell (S210) E 290 T Turbo-D (210.217), MERCEDES-BENZ E-Class T-modell (S210) E 250 T D (210.210), MERCEDES-BENZ E-Class T-modell (S210) E 270 T CDI, MERCEDES-BENZ E-Class T-modell (S210) E 320 T (210.265), MERCEDES-BENZ E-Class T-modell (S210) E 300 T Turbo-D (210.225), MERCEDES-BENZ E-Class T-modell (S210) E 250 T Turbo-D (210.215), MERCEDES-BENZ E-Class T-modell (S210) E 280 T (210.263), MERCEDES-BENZ E-Class T-modell (S210) E 240 T (210.261), MERCEDES-BENZ E-Class T-modell (S210) E 200 T Kompressor (210.245), MERCEDES-BENZ E-Class T-modell (S210) E 220 T CDI (210.206), MERCEDES-BENZ E-Class T-modell (S210) E 320 T CDI (210.226), MERCEDES-BENZ E-Class T-modell (S210) E 270 T CDI (210.216), MERCEDES-BENZ E-Class T-modell (S210) E 200 T Kompressor (210.248), (+ 1)

The steps may slightly vary depending on the car design.

Please note that this tutorial was created based on the replacement procedure for this car part on a car with a similar design.

This tutorial was created based on the replacement procedure for a similar car part on: MERCEDES-BENZ E-Class Saloon (W210) E 430 (210.070)

REPLACEMENT: COIL SPRINGS – MERCEDES-BENZ E-CLASS T-MODELL (S210). TOOLS YOU MIGHT NEED:

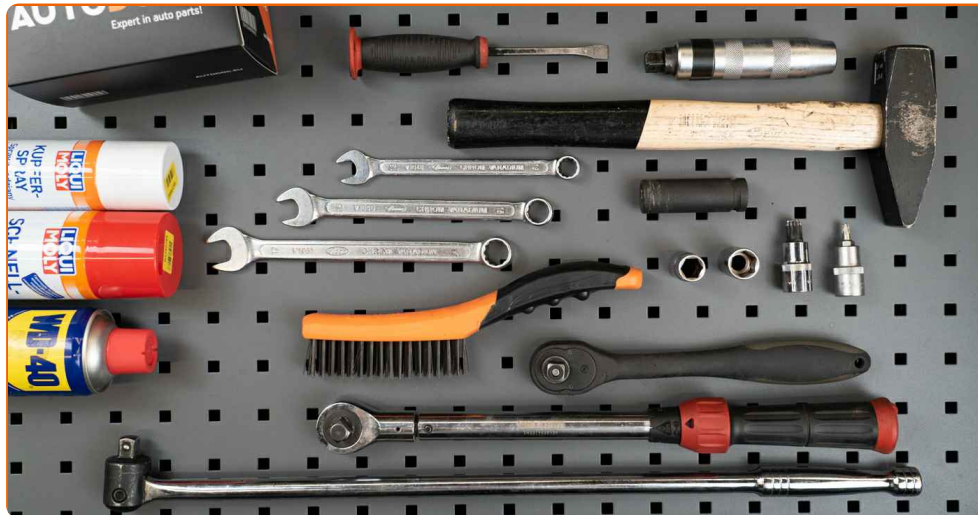

- Wire brush
- WD-40 spray
- Copper grease
- Combination spanner #19
- Drive socket # 10
- Drive socket # 19
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Strut spring compressor
- Hydraulic transmission jack
- Wheel chock

[Buy tools](#)

Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S210). Tip from AUTODOC:

- Both coil springs of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the rear suspension.
- Please note: all work on the car – MERCEDES-BENZ E-Class T-modell (S210) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.

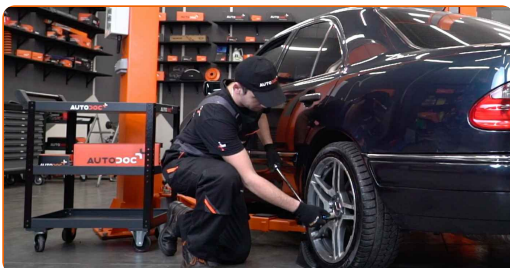

3

Raise the rear of the car and secure on supports.

4

Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
MERCEDES-BENZ E-Class T-modell (S210)


5

Remove the wheel.




6

Unscrew the fasteners of the control arm cover. Use a drive socket #10. Use a ratchet wrench.

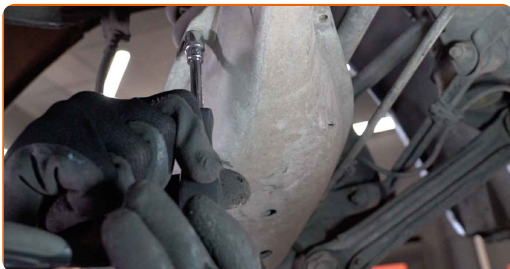


7

Remove the control arm cover.

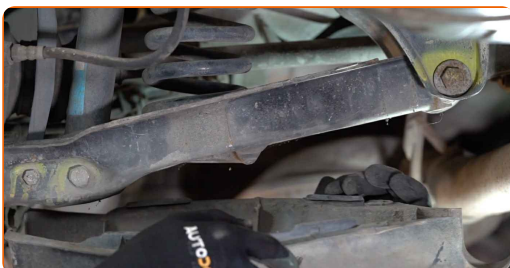


8

Clean the control arm fasteners. Use a wire brush. Use WD-40 spray.

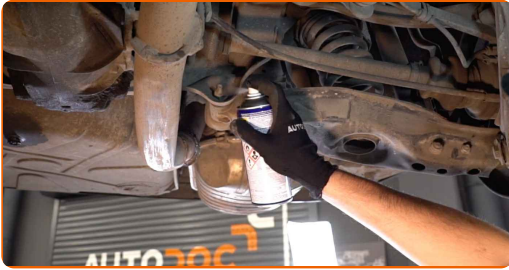

9

Loosen the fastener connecting the control arm to the rear subframe. Use a combination spanner #19. Use a drive socket #19. Use a tap wrench.

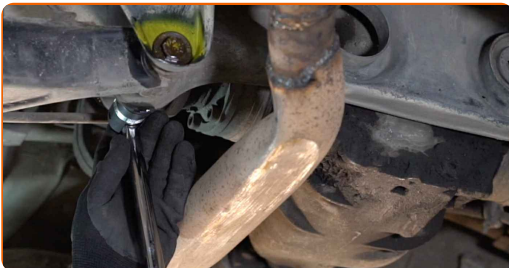

10

Support the arm. Use a hydraulic transmission jack.



11

Install the coil spring compressor on the coil spring.



Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S210).
Professionals recommend:

- Use adapters and jaws of the appropriate size.
- The spring coils should be securely fixed with the coil spring compressor.
- Use high quality coil spring compressors.

12

Compress the spring.




AUTODOC recommends:

- Compress the coil spring compressor until there is enough room to remove the spring. Do not compress the tool to the full: the spring coils must not touch each other.
- Be careful. The compressed spring is powerful and in case of disrupting ties, straightening, it can cause injury.


13

Unscrew the fastener connecting the control arm to the rear subframe. Use a drive socket #19. Use a ratchet wrench.

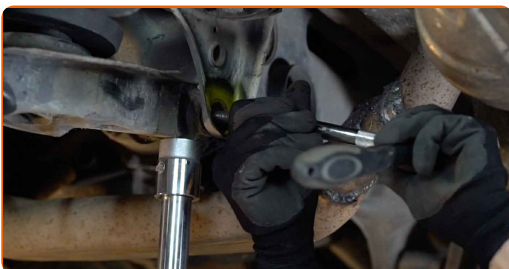


14

Remove the fastening bolt.

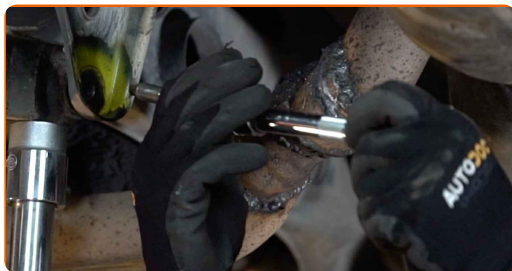

15

Lower the hydraulic transmission jack by 10-15 cm.

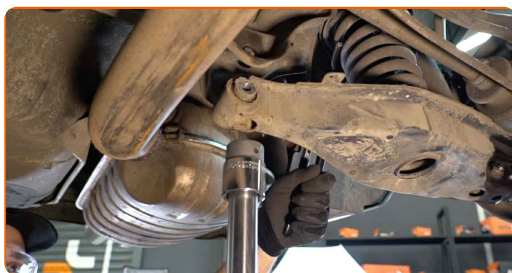


AUTODOC recommends:

- Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S210). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

16

Pull down the suspension control arm. Remove the coil spring together with the coil spring compressor.

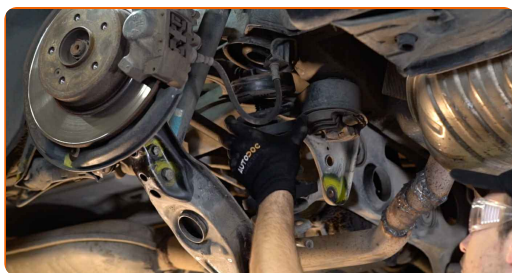

AUTODOC recommends:

- While the spring is compressed, do not do any operations on it.

17 Release the coil spring. Remove the spring.




18 Remove the rubber spring spacer.



19 Install the rubber spacer on the new coil spring.



20 Install a new coil spring on the coil spring compressor.

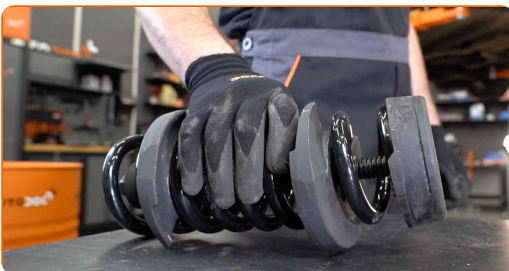

Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S210).
AUTODOC experts recommend:

- Use adapters and jaws of the appropriate size.

21 Compress the spring.

22 Pull down the suspension control arm. Install the spring.




AUTODOC recommends:

- Make sure that the coil spring is correctly positioned in its mounting seats.


23 Support the arm. Use a hydraulic transmission jack.



24 Install the fastening bolt. Use a crowbar.

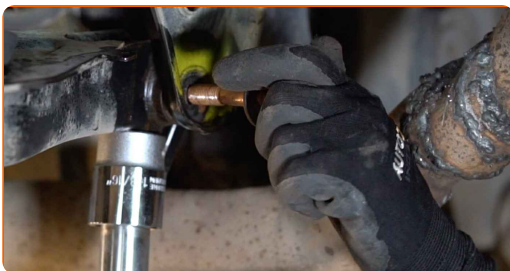

25 Remove the support from under the arm.

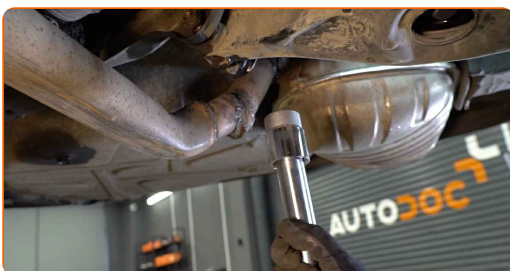

AUTODOC recommends:

- MERCEDES-BENZ E-Class T-modell (S210) – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.


26

Screw in the fastener connecting the control arm to the rear subframe. Use a combination spanner #19. Use a drive socket #19.




27

Support the arm. Use a hydraulic transmission jack.

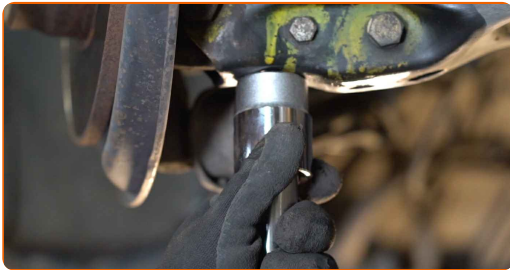


28

Tighten the fastener connecting the control arm to the rear subframe. Use a combination spanner #19. Use a drive socket #19. Use a torque wrench. Tighten it to 90 nm torque.

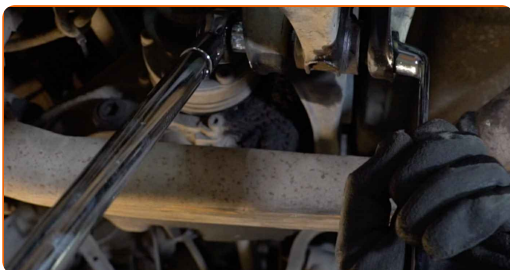

29

Remove the support from under the arm.

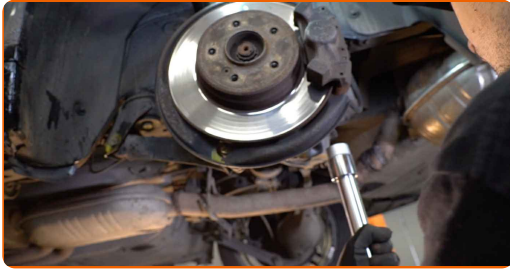


AUTODOC recommends:

- Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S210). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


30

Remove the coil spring compressor.

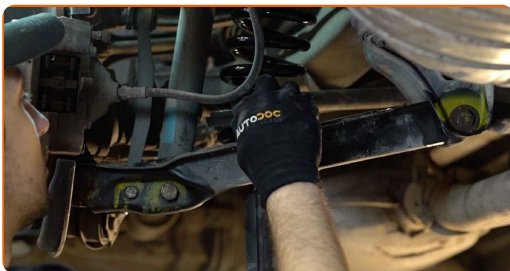


31

Install the control arm cover.

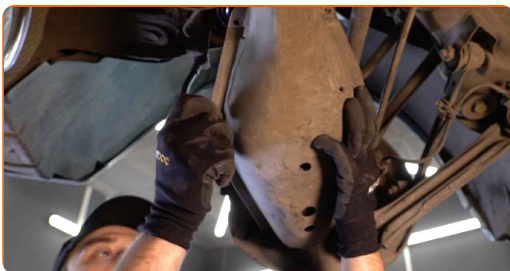

32

Screw in the fasteners of the control arm cover. Use a drive socket #10. Use a ratchet wrench.

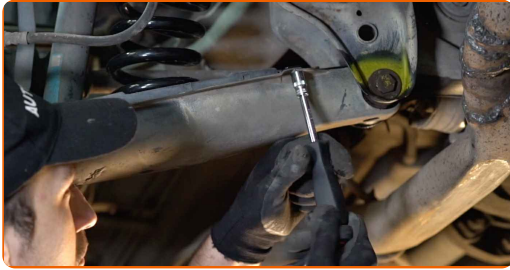

33

Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.



34

Install the wheel.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. MERCEDES-BENZ E-Class T-modell (S210)


35

Screw in the wheel bolts. Use wheel impact socket #17.

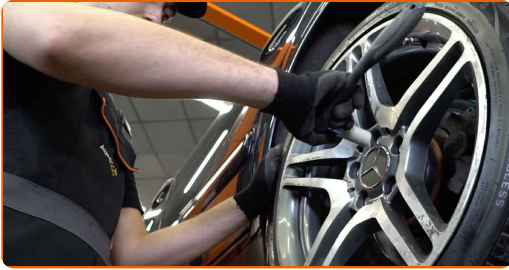


36

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 112 Nm torque.

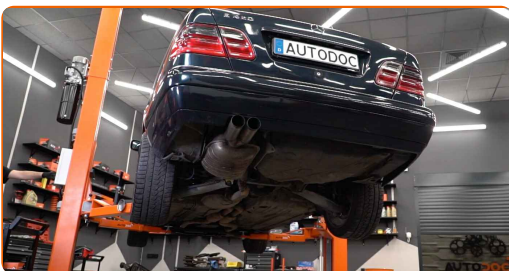

37

Remove the jacks and chocks.

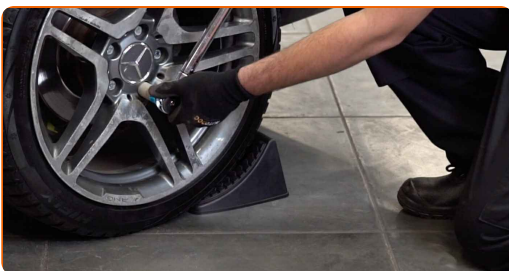

WELL DONE! 👍

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON
 **Google Play**

Download on the
 **App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

COIL SPRINGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.