



How to change front coil
springs on **MERCEDES-**
BENZ E-Class T-modell
(S211) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

MERCEDES-BENZ E-Class T-modell (S211) E 220 T CDI, MERCEDES-BENZ E-Class T-modell (S211) E 240 T (211.261), MERCEDES-BENZ E-Class T-modell (S211) E 200 T Kompressor (211.242), MERCEDES-BENZ E-Class T-modell (S211) E 220 T CDI (211.206, 211.606), MERCEDES-BENZ E-Class T-modell (S211) E 220 T CDI (211.208), MERCEDES-BENZ E-Class T-modell (S211) E 200 Kompressor (211.241), MERCEDES-BENZ E-Class T-modell (S211) E 220 CDI (211.206), MERCEDES-BENZ E-Class T-modell (S211) E 200 CDI (211.207), MERCEDES-BENZ E-Class T-modell (S211) E 230 T (211.252)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: MERCEDES-BENZ E-Class Saloon (W211) E 270 CDI (211.016)

REPLACEMENT: COIL SPRINGS – MERCEDES-BENZ E-CLASS T-MODELL (S211). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Combination spanner #21
- HEX bit No.H6.
- HEX bit No.H12.
- Drive socket # 10
- Drive socket # 13
- Drive socket # 17
- Drive socket # 18
- Drive socket # E18
- Drive socket # 21
- Shock absorber socket #DD6
- Wheel impact socket #17
- Ratchet wrench
- Crow bar
- Hammer
- Pin punch
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

[Buy tools](#)

Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S211). Tip:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- Please note: all work on the car – MERCEDES-BENZ E-Class T-modell (S211) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.



4 Loosen the upper fastener of the shock strut mount. Use a drive socket #13. Use a ratchet wrench.



5 Secure the wheels with chocks.

6 Loosen the wheel mounting bolts. Use wheel impact socket #17.



7 Raise the front of the car and secure on supports.

8 Unscrew the wheel bolts.



Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S211). Tip from AUTODOC experts:

- To avoid injury, hold up the wheel when unscrewing the bolts.

9 Remove the wheel.



10

Undo the fasteners of the oil pan lower cover. Use a drive socket #10. Use a ratchet wrench.



11

Remove the oil pan cover.



12

Clean all joints of the arm. Clean the shock strut fasteners. Clean the stabiliser link fasteners. Use a wire brush.
Use WD-40 spray.



AUTODOC recommends:

- Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S211). After applying the spray, wait a few minutes.

- 13** Unscrew the fastener connecting the shock strut to the suspension control arm. Use a combination spanner #21. Use a drive socket #21. Use a ratchet wrench.




- 14** Remove the fastening bolt.



- 15** Unscrew the arm fastening from the subframe. Use a combination spanner #21. Use a drive socket #E18. Use a ratchet wrench.



- 16** Detach the control arm. Use a crowbar.

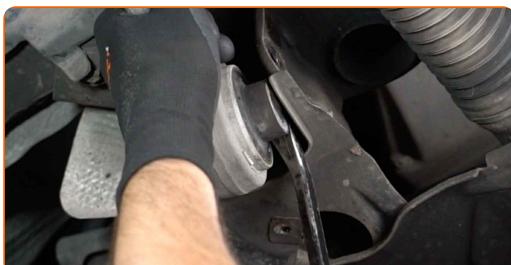

17


Remove the fastening bolt. Use a pin punch. Use a hammer.

**18**

Detach the bottom part of the shock strut. Use a crowbar.

**19**

Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #21. Use HEX No.H12. Use a ratchet wrench.

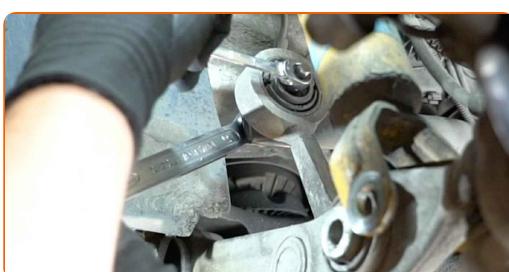**20**

Remove the stabilizer rod.

**21**

Unscrew the top fastening of the shock strut mount.




AUTODOC recommends:

- Important! Hold the suspension strut while unscrewing the fastening bolts.
MERCEDES-BENZ E-Class T-modell (S211)


22

Remove the suspension strut.

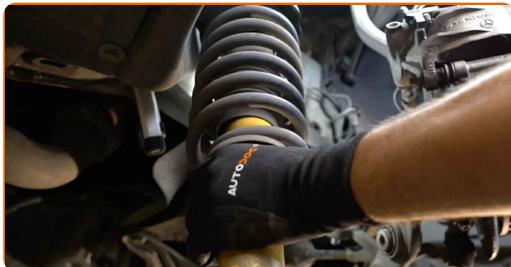

23

Set the shock absorber strut on the spring compressor tool.

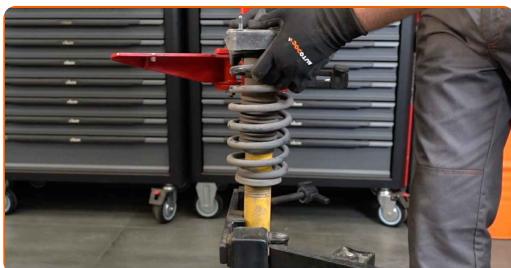

Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S211). Tip from AUTODOC experts:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

24

Compress the spring.

**25**

Remove the protective cap of the shock absorber mount.

26

Treat the shock strut rod. Use a wire brush. Use WD-40 spray.

**27**

Remove the strut piston rod nut. Use a drive socket #17. Use HEX No.H6. Use a ratchet wrench.

**28**

Remove the top strut mount.




29

Release the coil spring.



30

Remove the spring.

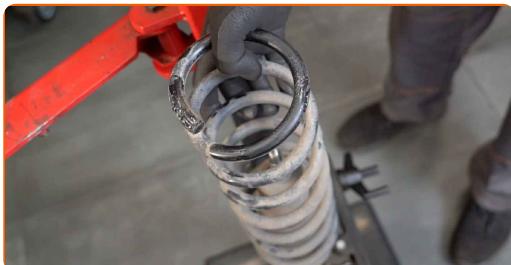

31

Remove the shock absorber dust cap and the bump stop.

AUTODOC recommends:

- Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S211). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

32

Install the spring on the shock absorber.



33

Install the boot and a bump stop onto the shock absorber.



34

Compress the spring.



35

Install the upper strut mount and the strut mount bearing.



36

Tighten the shock strut piston rod nut. Use a shock absorber socket #DD6. Use a drive socket #18. Use a torque wrench. Tighten it to 23 Nm torque.



Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S211). Tip:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

37

Treat the shock strut rod. Use copper grease.

**38**

Install the protective shock absorber mounting cap.

39

Decompress the spring.

**40**

Remove the assembled shock strut.

41

Clean the mounting seats of the shock strut.

**42**

Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.

43

Install the shock strut into the wheel arch.



44

Screw the top fastening of the shock strut mount.




AUTODOC recommends:

- Important! Hold the suspension strut while screwing in the fastening bolts.
MERCEDES-BENZ E-Class T-modell (S211)

45

Install the transverse stabilizer link.

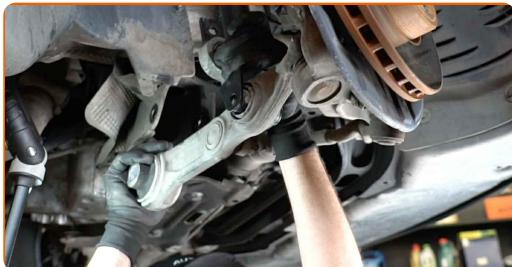

46

Tighten the stabiliser link fastener. Use a combination spanner #21. Use HEX No.H12. Use a ratchet wrench.



47

Attach the bottom part of the shock strut.

48

Install the fastening bolt.



49

Attach the control arm.

50

Support the arm. Use a crowbar. Use a hydraulic transmission jack.



51

Install the fastening bolt.



52


Remove the support from under the arm.

AUTODOC recommends:

- Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S211). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

53

Support the arm. Use a hydraulic transmission jack.

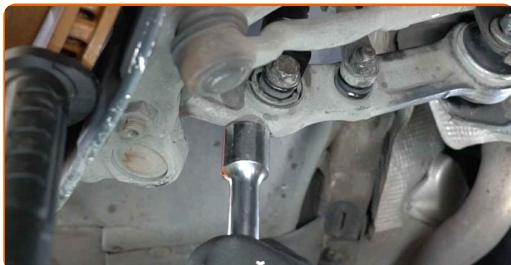

54

Screw the fastener connecting the control arm to the subframe. Use a combination spanner #21. Use a drive socket #E18. Use a ratchet wrench.



55

Tighten the arm fastening to the subframe. Use a combination spanner #21. Use a drive socket #E18. Use a torque wrench. Tighten it to 80 Nm torque.+120°



AUTODOC recommends:

- Important! Be sure to use new fasteners.

56

Tighten the fastener connecting the shock strut to the suspension control arm. Use a combination spanner #21. Use a drive socket #21. Use a torque wrench. Tighten it to 165 Nm torque.




57

Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #21. Use a torque wrench. Tighten it to 62 Nm torque.



58

Remove the support from under the arm.

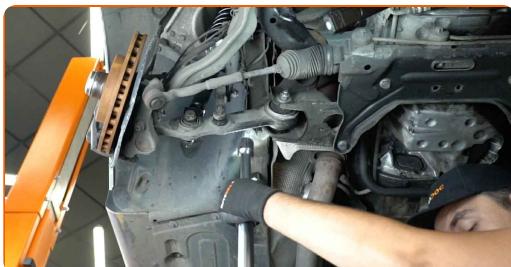


AUTODOC recommends:

- Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S211). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

59

Treat the shock strut fasteners.

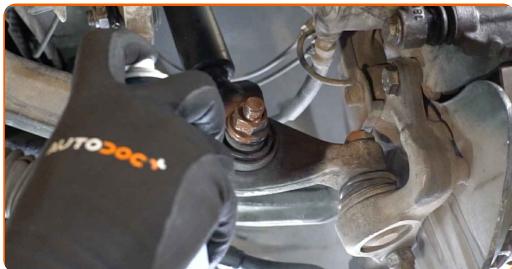**60**

Treat all joints of the stabiliser link.

61


Treat all joints of the arm. Use copper grease.

62

Reinstall the oil pan lower cover.

**63**

Tighten the fasteners of the oil pan lower cover. Use a drive socket #10. Use a ratchet wrench.

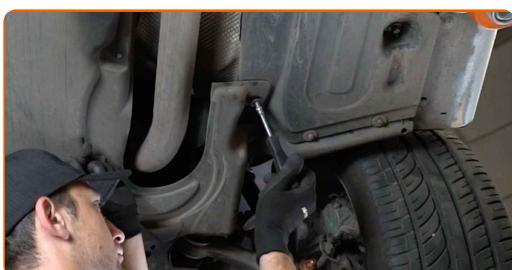**64**

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



65

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: coil springs – MERCEDES-BENZ E-Class T-modell (S211). After applying the spray, wait a few minutes.

66

Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. MERCEDES-BENZ E-Class T-modell (S211)

67

Screw in the wheel bolts. Use wheel impact socket #17.



68

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 130 Nm torque.

**69**

Remove the jacks and chocks.

**70**

Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #13. Use a torque wrench. Tighten it to 30 Nm torque.

**71**

Treat the fasteners of the shock strut mount. Use copper grease.

**72**

Remove the fender protection cover.

73

Close the hood.

WELL DONE! [VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON Google Play

Download on the App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

COIL SPRINGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.