



How to change front coil
springs on **MERCEDES-
BENZ VIANO (W639)** –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

MERCEDES-BENZ VIANO (W639) 3.0 (140 KW / 190 PS), MERCEDES-BENZ VIANO (W639) 3.2 (639.713, 639.813, 639.815), MERCEDES-BENZ VIANO (W639) CDI 2.2 (639.711, 639.713, 639.811, 639.813, 639.815), MERCEDES-BENZ VIANO (W639) CDI 2.0 (639.711, 639.713, 639.811, 639.813, 639.815), MERCEDES-BENZ VIANO (W639) 3.7 (639.815), MERCEDES-BENZ VIANO (W639) CDI 3.0 (639.811, 639.813, 639.815), MERCEDES-BENZ VIANO (W639) 3.5 (639.811, 639.813, 639.815)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: MERCEDES-BENZ VITO Bus (W639) 115 CDI 2.2

REPLACEMENT: COIL SPRINGS – MERCEDES-BENZ VIANO (W639). TOOLS YOU'LL NEED:

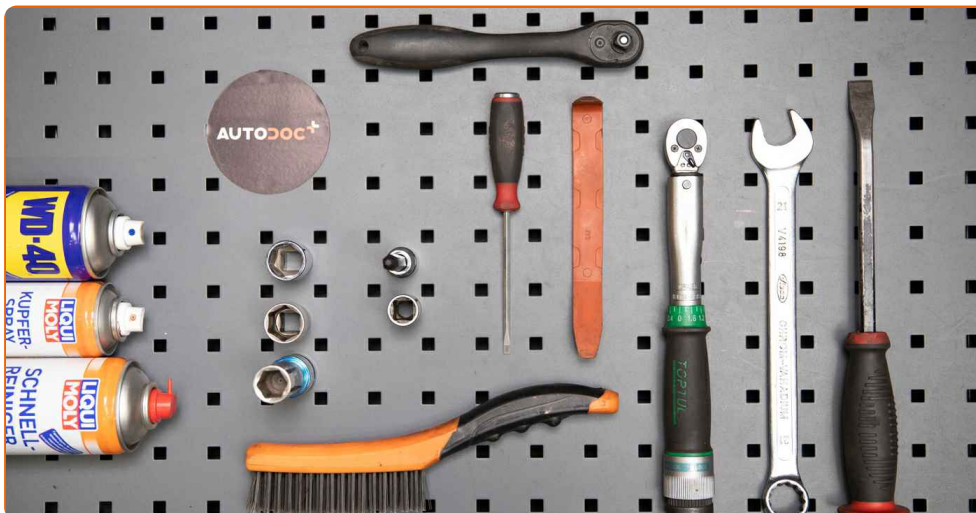

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Torx bit T25
- Combination spanner #21
- Drive socket # 13
- Drive socket # 20
- Drive socket # 21
- Wheel impact socket #17
- Ratchet wrench
- Flat Screwdriver
- Ear clamp pliers
- Crow bar
- Hydraulic strut spring compressor
- Fender cover
- Wheel chock

Buy tools

Replacement: coil springs – MERCEDES-BENZ VIANO (W639). Tip from AUTODOC experts:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- All work should be done with the engine stopped.

REPLACEMENT: COIL SPRINGS – MERCEDES-BENZ VIANO (W639). TAKE THE FOLLOWING STEPS:

1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the front of the car and secure on supports.

4 Unscrew the wheel bolts.



AUTODOC recommends:


- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
MERCEDES-BENZ VIANO (W639)

5 Remove the wheel.



6 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

7 Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #18. Use a ratchet wrench.

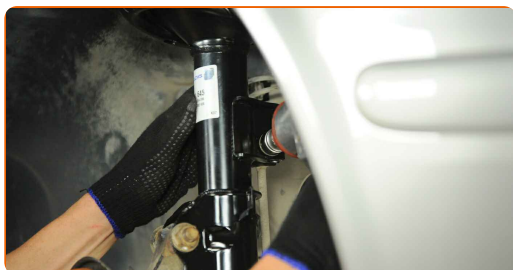


8 Remove the stabilizer rod.



9 Detach the brake hose from the shock strut. Use a flat screwdriver.



10 Release the ABS sensor wiring harness from the holder on the shock absorber. Disconnect the fastener of the brake pad wear sensor wire from the suspension strut.

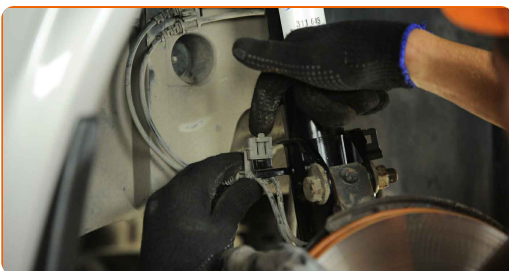


11 Disconnect the ABS sensor wiring.


12 Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.




- 13 Unscrew the fasteners connecting the suspension strut to the steering knuckle. Use a combination spanner #21. Use a drive socket #21. Use a ratchet wrench.

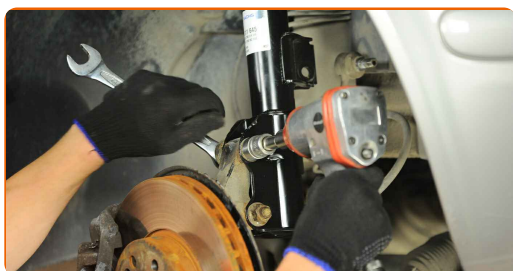

- 14 Remove the fastening bolts.

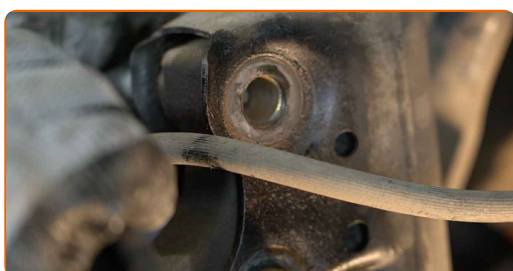

- 15 Disconnect the steering knuckle from the shock absorber strut.

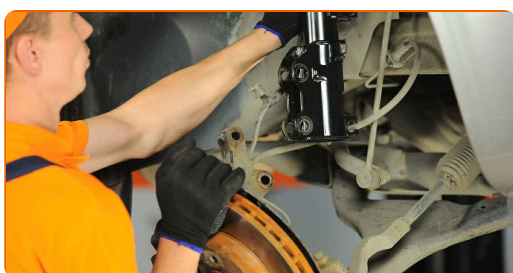

- 16 Lower the car.


- 17 Open the bonnet.

- 18 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

- 19 Unscrew the fasteners of the cowl grille. Use Torx T25. Use a ratchet wrench.



20 Remove the clips of the plastic cowl grille. Use a flat screwdriver. Use ear clamp pliers.

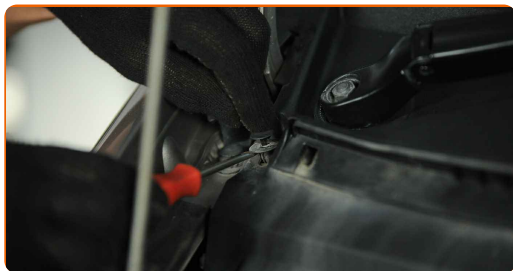

21 Unscrew the fasteners of the windscreen wiper arms. Use a drive socket #13. Use a ratchet wrench.




22 Remove the wiper arms.



23 Detach the windscreen washer nozzle hose.




24 Raise up and remove the cowl grille. Use a flat screwdriver.

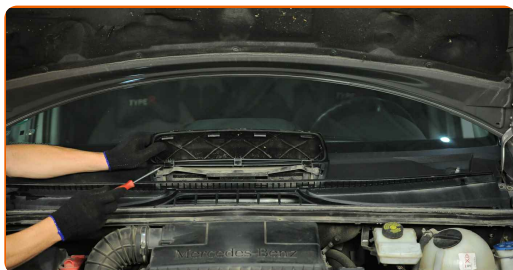


25 Take out the cabin filter bracket. Use Torx T25. Use a ratchet wrench.




26 Remove the lower wiper plastic cowl grille.

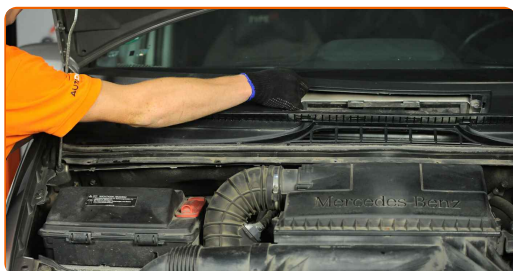


27 Detach the windscreen washer nozzle hose.

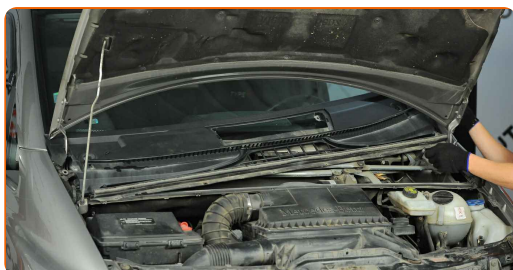


28 Unscrew the fasteners of the windscreen wiper linkage panel. Use a drive socket #13. Use a ratchet wrench.

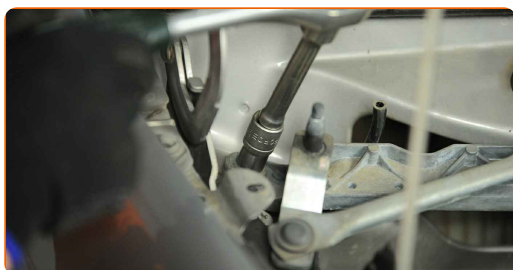


29 Remove the panel assembled with the windscreen wiper linkage.

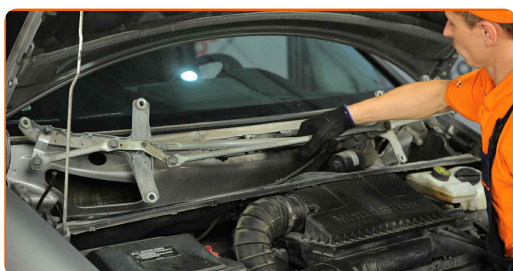

30 Unplug the wiper motor connector. Use a flat screwdriver.

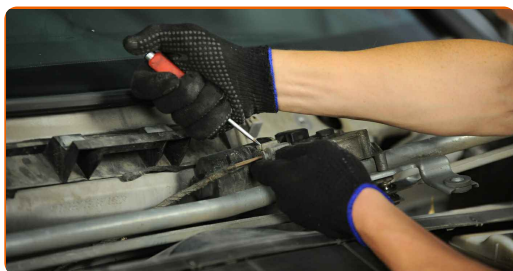


31 Remove the suspension strut mount cap. Use a flat screwdriver.

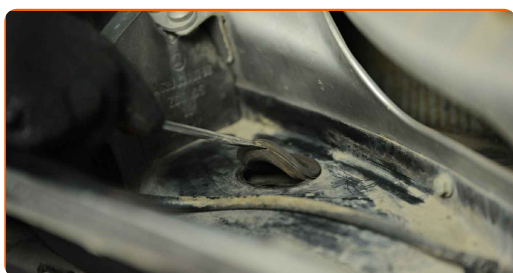

32 Clean the upper fastener of the suspension strut mount. Use a wire brush. Use WD-40 spray.

33 Unscrew the top fastening of the shock strut mount. Use a drive socket #21. Use a ratchet wrench.

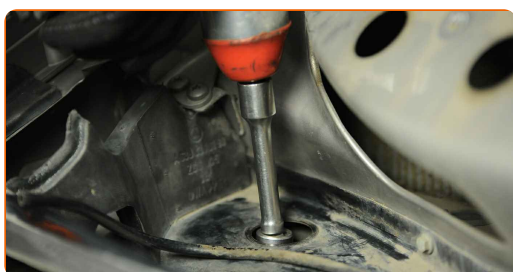

Replacement: coil springs – MERCEDES-BENZ VIANO (W639). AUTODOC recommends:

- To avoid injuries, hold the shock strut when undoing the fastening bolts.


34

Remove the suspension strut.



35

Set the shock absorber strut on the spring compressor tool.

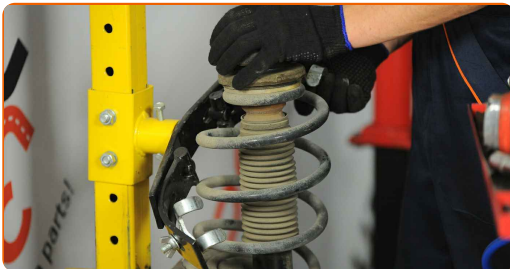


Replacement: coil springs – MERCEDES-BENZ VIANO (W639). Tip:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

36

Compress the spring.

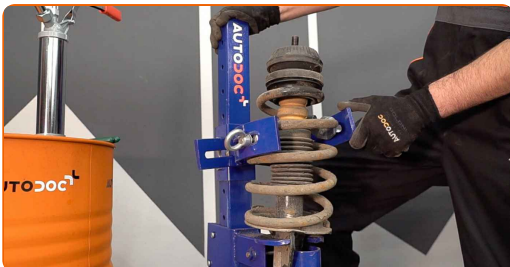

37

Treat the shock strut rod. Use WD-40 spray.



38

Remove the strut piston rod nut. Use a drive socket #20. Use a ratchet wrench.



39

Remove the shock absorber mount, dust boot, and bump stop. Use a flat screwdriver.




AUTODOC recommends:

- Replacement: coil springs – MERCEDES-BENZ VIANO (W639). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.


40

Release the coil spring.

41 Remove the spring.

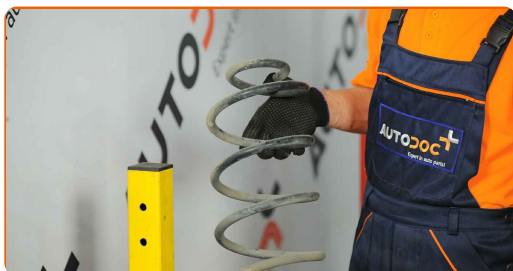


42 Install the spring on the shock absorber.

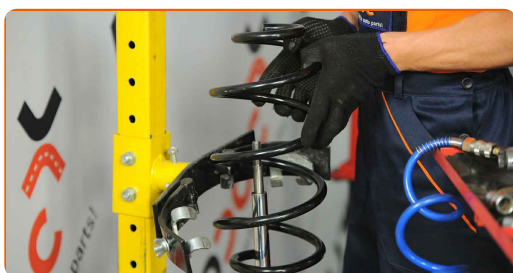

43 Compress the spring.

44 Install the mount, the boot and the bump stop on the shock absorber.

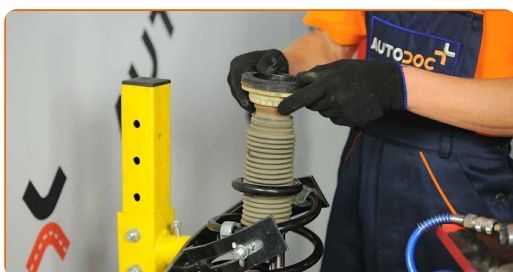

45 Tighten the shock strut piston rod nut. Use a drive socket #20. Use a torque wrench. Tighten it to 56 Nm torque.




Replacement: coil springs – MERCEDES-BENZ VIANO (W639). Professionals recommend:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

46 Decompress the spring.

47 Remove the assembled shock strut.

48 Install the shock strut into the wheel arch.

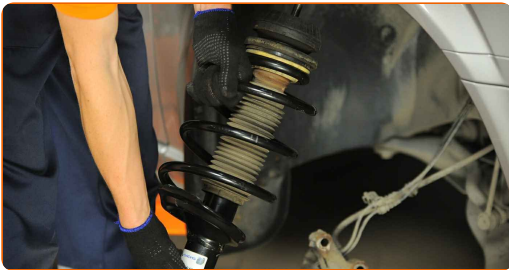

49 Screw the top fastening of the shock strut mount.


AUTODOC recommends:

- MERCEDES-BENZ VIANO (W639) – To avoid injury, hold the shock absorber while screwing in the fastening bolts.

50 Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #21. Use a torque wrench. Tighten it to 56 Nm torque.



51 Install the shock strut mount cap.

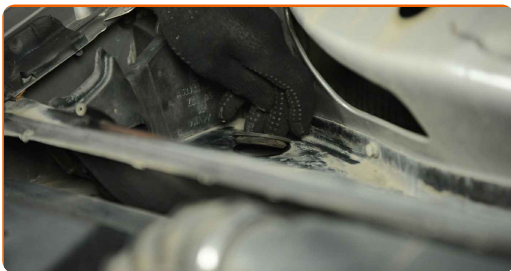


52 Plug in the wiper motor connector.




53 Install the panel assembled with the windscreen wiper linkage.


54 Screw in the fasteners of the windscreen wiper linkage panel. Use a drive socket #13. Use a torque wrench. Tighten it to 27 Nm torque.

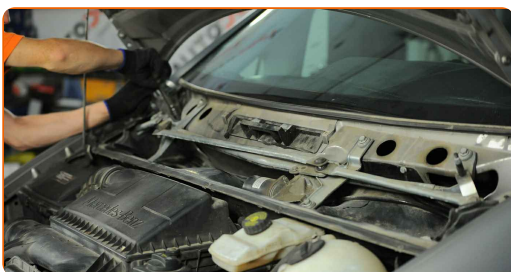


55 Attach the windscreen washer nozzle hose.

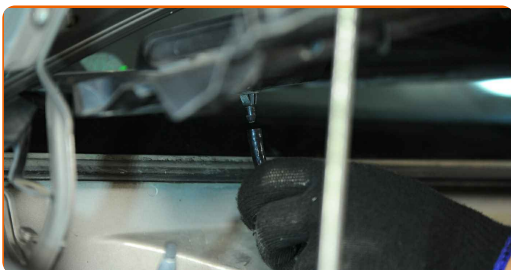


56 Install and secure the cowl grille.

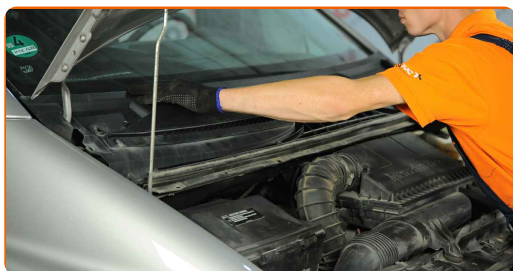

57 Install the cabin filter bracket. Use Torx T25. Use a torque wrench. Tighten it to 11 Nm torque.

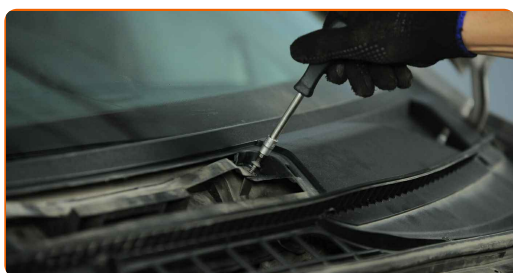


58 Tighten the fasteners of the cowl grille. Use Torx T25. Use a ratchet wrench.

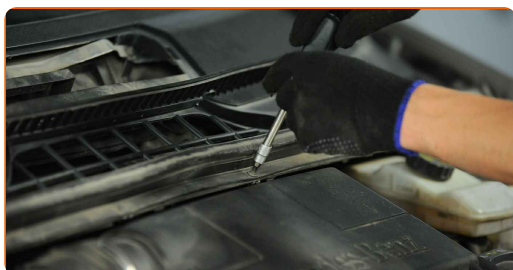


59 Install and secure the cowl grille.




60 Install the fasteners of the wiper plastic cowl grille.

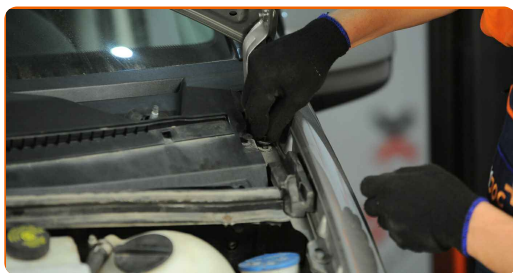

61 Reinstall the wiper arms.

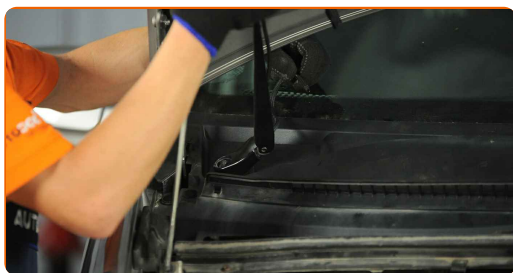

62 Tighten the fasteners of the wiper arms. Use a drive socket #13. Use a torque wrench. Tighten it to 24 Nm torque.

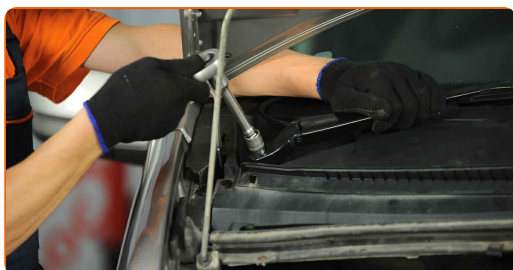

AUTODOC recommends:

- Make sure not to mix up the wiper arms on the driver's and passenger's sides.

63 Attach the windscreen washer nozzle hose.



64 Remove the fender protection cover.

65 Close the hood.


66 Raise the front of the car and secure on supports.

67 Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.

68 Fix the shock absorber strut on the steering knuckle.



69 Install the fastening bolts.

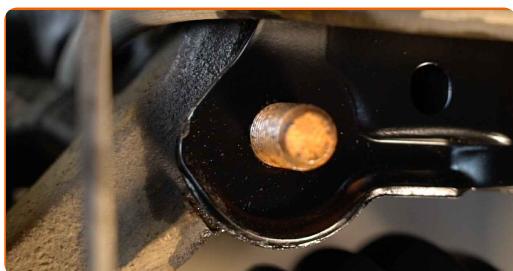

70 Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a combination spanner #21. Use a drive socket #21. Use a torque wrench. Tighten it to 120 Nm torque.+75°



Replacement: coil springs – MERCEDES-BENZ VIANO (W639). AUTODOC experts recommend:

- Important! Be sure to use new fasteners.

71

Fasten the brake hose on the strut. Use a flat screwdriver.




72

Secure the stabilizer link on the suspension strut. Use a crowbar.



73

Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #18. Use a torque wrench. Tighten it to 85 Nm torque.

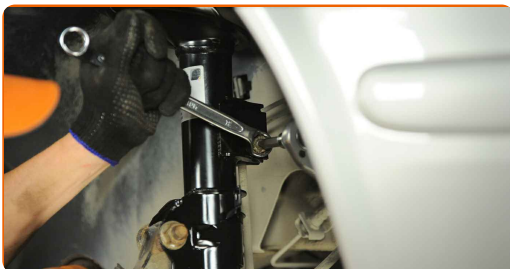


- 74 Connect the fastener of the ABS sensor cable to the shock absorber strut. Connect the fastener of the brake pad wear sensor wire to the suspension strut.



- 75 Connect the ABS sensor wiring.

- 76 Treat the shock strut fasteners. Treat all joints of the stabiliser link. Use copper grease.

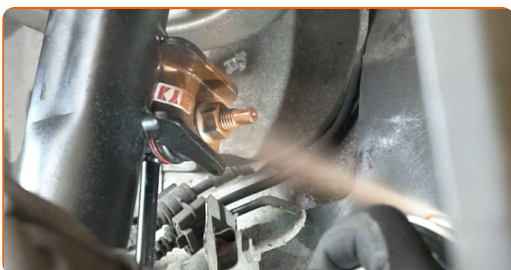

- 77 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



- 78 Clean the brake disk surface. Use a brake cleaner.




Replacement: coil springs – MERCEDES-BENZ VIANO (W639). AUTODOC recommends:

- After applying the spray, wait a few minutes.

79

Install the wheel.

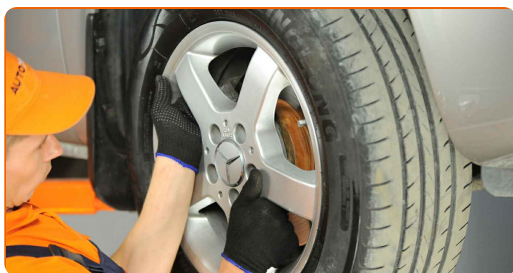

Replacement: coil springs – MERCEDES-BENZ VIANO (W639). Tip from AUTODOC experts:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

80

Screw in the wheel bolts. Use wheel impact socket #17.




81

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 130 Nm torque.



82

Remove the jacks and chocks.

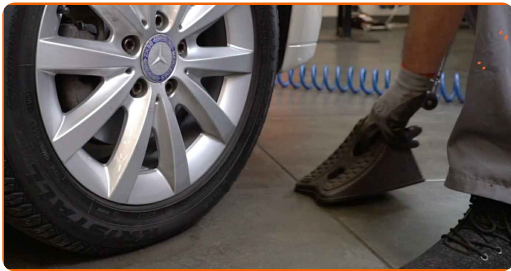

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

COIL SPRINGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.