



How to change
serpentine belt on **Ford
Mondeo Mk3 saloon** –
replacement guide

VIDEO TUTORIAL



ⓘ Important!

This replacement procedure can be used for:

FORD Mondeo Mk3 Saloon (B4Y) 1.8 16V, FORD Mondeo Mk3 Hatchback (B5Y) 1.8 16V, FORD Mondeo Mk3 Estate (BWY) 1.8 16V, FORD Mondeo Mk3 Hatchback (B5Y) 2.0 16V, FORD Mondeo Mk3 Estate (BWY) 2.0 16V, FORD Mondeo Mk3 Hatchback (B5Y) 1.8 SCi, FORD Mondeo Mk3 Estate (BWY) 1.8 SCi, FORD Mondeo Mk3 Saloon (B4Y) 1.8 SCi, FORD Fiesta Mk5 Hatchback (JH1, JD1, JH3, JD3) ST150

The steps may slightly vary depending on the car design.

REPLACEMENT: SERPENTINE BELT – FORD MONDEO
MK3 SALOON. TOOLS YOU MIGHT NEED:



• Combination spanner #15

• Fender cover

BUY TOOLS


Replacement: serpentine belt – Ford Mondeo Mk3 saloon. AUTODOC recommends:

- All work should be done with the engine stopped.

REPLACEMENT: SERPENTINE BELT – FORD MONDEO MK3 SALOON. RECOMMENDED SEQUENCE OF STEPS:


1

Open the hood.

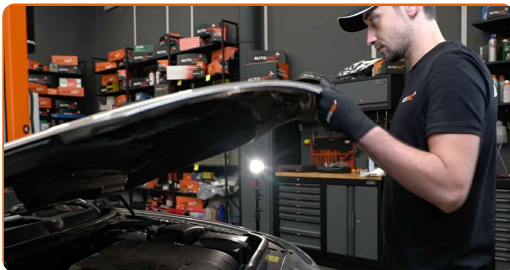

2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

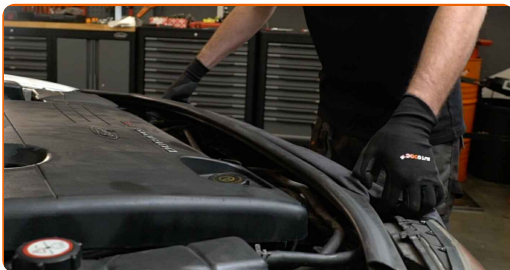

3

Lift the car using a jack or place it over an inspection pit.




4 Pull aside the V-ribbed belt tensioner pulley. Use a combination spanner #15.



5 Remove the V-ribbed belt.



6 Return the tensioner pulley to its initial position.

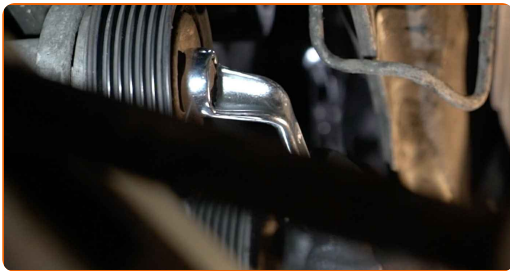

Replacement: serpentine belt – Ford Mondeo Mk3 saloon. Tip:

- Check the condition of the tensioner pulley and idler pulley. Replace them if necessary.

7 Install the V-ribbed belt.



8 Pull aside the V-ribbed belt tensioner pulley. Use a combination spanner #15.


9 Place the serpentine belt on the crankshaft pulley.




Replacement: serpentine belt – Ford Mondeo Mk3 saloon. Tip from AUTODOC experts:

- Make sure that the V-ribbed belt fits all pulleys snugly.
- Make sure that the V-ribbed belt is properly tensioned.

10 Return the tensioner pulley to its initial position.

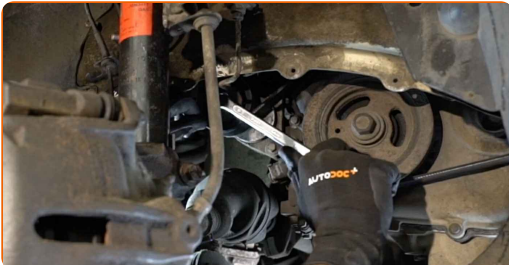

11 Lower the car.

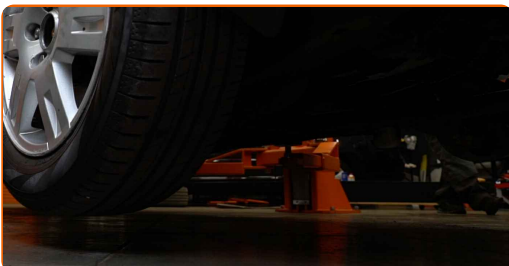


12 Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.




13 Shut off the engine.

14 Remove the fender protection cover.

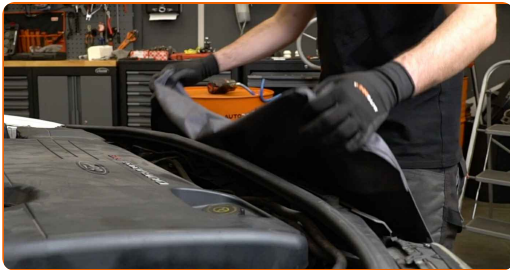

15 Close the hood.

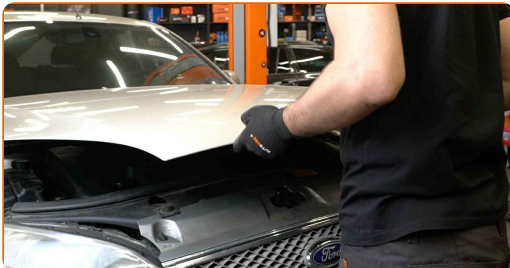

WELL DONE! 👍

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

AUTODOC+

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR FORD

SERPENTINE BELT: A WIDE SELECTION

CHOOSE CAR PARTS FOR FORD MONDEO MK3 SALOON

SERPENTINE BELT FOR FORD: BUY NOW

**SERPENTINE BELT FOR FORD MONDEO MK3 SALOON: THE
BEST DEALS & OFFERS**

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.