



How to change rear coil
springs on **VW Multivan**
T5 – replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 2.0 TDI, VW Multivan V (7HM, 7HN, 7HF, 7EF, 7EM, 7EN) 2.0 TDI, VW Multivan V (7HM, 7HN, 7HF, 7EF, 7EM, 7EN) 2.0, VW Multivan V (7HM, 7HN, 7HF, 7EF, 7EM, 7EN) 3.2 V6, VW Multivan V (7HM, 7HN, 7HF, 7EF, 7EM, 7EN) 2.5 TDI, VW Multivan V (7HM, 7HN, 7HF, 7EF, 7EM, 7EN) 1.9 TDI, VW Transporter V Platform / Chassis (7JD, 7JE, 7JL, 7JY, 7JZ, 7FD) 1.9 TDI, VW Transporter V Platform / Chassis (7JD, 7JE, 7JL, 7JY, 7JZ, 7FD) 2.5 TDI, VW Transporter V Platform / Chassis (7JD, 7JE, 7JL, 7JY, 7JZ, 7FD) 2.0, VW Transporter V Platform / Chassis (7JD, 7JE, 7JL, 7JY, 7JZ, 7FD) 3.2 V6, VW Transporter V Van (7HA, 7HH, 7EA, 7EH) 1.9 TDI, VW Transporter V Van (7HA, 7HH, 7EA, 7EH) 2.5 TDI, VW Transporter V Van (7HA, 7HH, 7EA, 7EH) 2.0, VW Transporter V Van (7HA, 7HH, 7EA, 7EH) 3.2 V6, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 1.9 TDI, (+ 10)

The steps may slightly vary depending on the car design.

REPLACEMENT: COIL SPRINGS – VW MULTIVAN T5.
LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Ceramic grease
- Copper grease
- Torque wrench
- Combination spanner #21
- Drive socket # 21
- Wheel impact socket #19
- Ratchet wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

BUY TOOLS


Replacement: coil springs – VW Multivan T5. AUTODOC recommends:

- Both coil springs of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the rear suspension.
- All work should be done with the engine stopped.

REPLACEMENT: COIL SPRINGS – VW MULTIVAN T5. USE THE FOLLOWING PROCEDURE:


1

Secure the wheels with chocks.

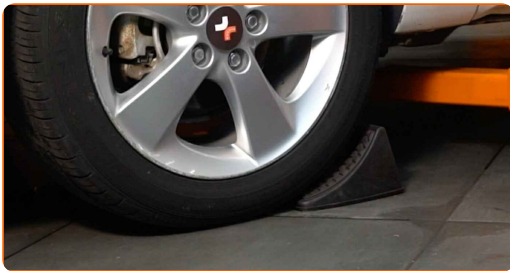

2

Loosen the wheel mounting bolts. Use wheel impact socket #19.

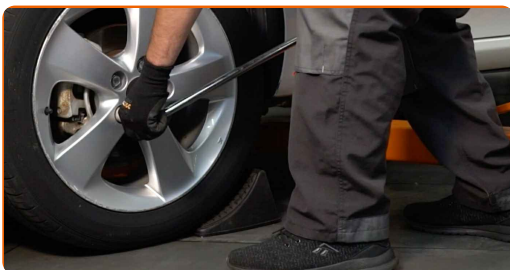


3

Raise the rear of the car and secure on supports.



4 Unscrew the wheel bolts.

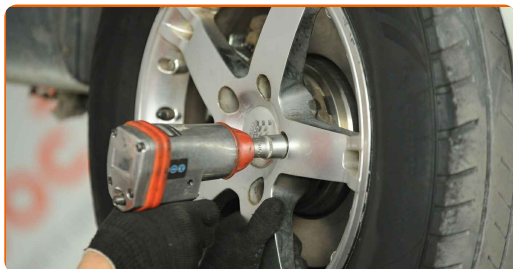


AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. VW Multivan T5

5 Remove the wheel.




6 Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.

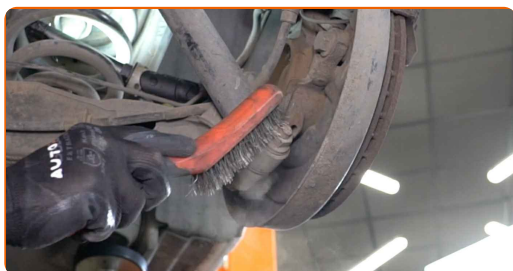

7 Unscrew the lower fastener of the shock absorber. Use a combination spanner #21. Use a drive socket #21. Use a ratchet wrench.




8 Support the arm. Use a hydraulic transmission jack.

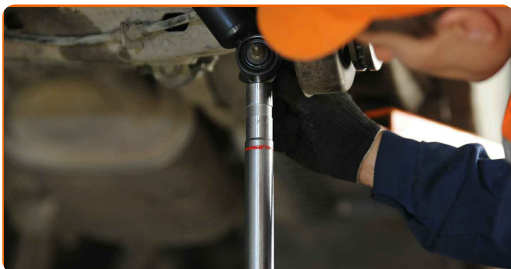

9 Remove the fastening bolt.



10 Remove the support from under the arm.

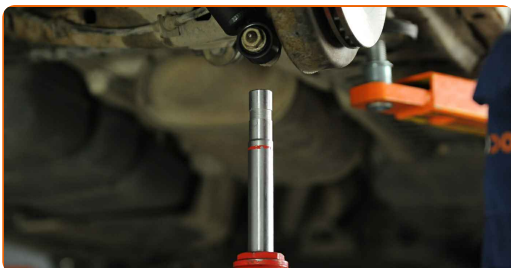


AUTODOC recommends:

- Replacement: coil springs – VW Multivan T5. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

11 Pull down the suspension control arm.

12 Take out the spring.

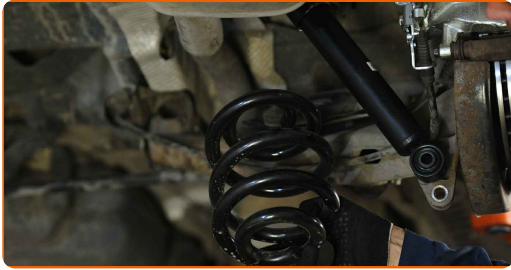

13 Clean the coil spring mounting seats. Use a wire brush. Use WD-40 spray.

14 Pull down the suspension control arm. Use a crowbar.

15 Install the spring.




16 Support the arm. Use a hydraulic transmission jack.




AUTODOC recommends:

- For tightening the fasteners correctly, you have to jack up the suspension components to their working position.

17 Install the fastening bolt.

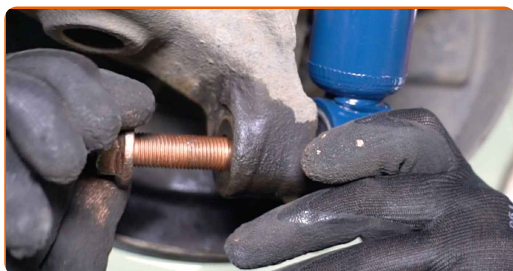


18 Tighten the lower fastener of the shock absorber. Use a combination spanner #21. Use a drive socket #21. Use a torque wrench. Tighten it to 120 Nm torque. +90°

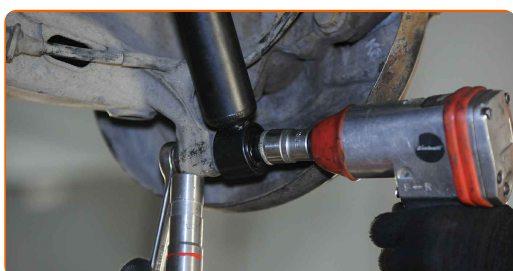

AUTODOC recommends:

- Important! Be sure to use new fasteners.

19 Remove the support from under the arm.

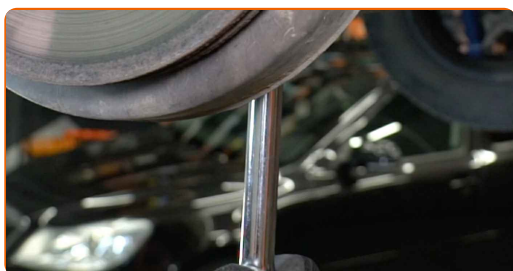

AUTODOC recommends:

- Replacement: coil springs – VW Multivan T5. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

20 Treat the shock absorber fasteners. Use copper grease.

21 Clean the wheel rim mounting seat. Use a wire brush.

22 Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.



23 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: coil springs – VW Multivan T5. After applying the spray, wait a few minutes.

24 Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. VW Multivan T5


25

Screw in the wheel bolts. Use wheel impact socket #19.




26

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 180 Nm torque.

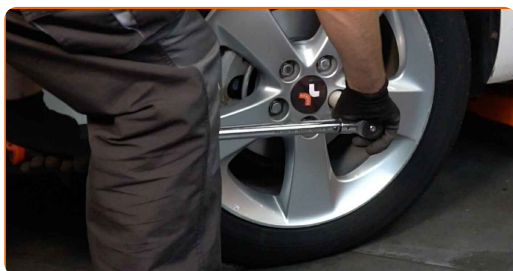

27

Remove the jacks and chocks.

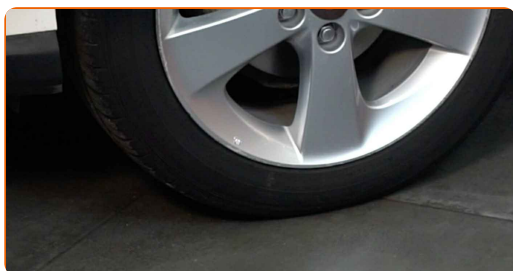

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VW

COIL SPRINGS: A WIDE SELECTION

CHOOSE CAR PARTS FOR VW MULTIVAN T5

COIL SPRINGS FOR VW: BUY NOW

COIL SPRINGS FOR VW MULTIVAN T5: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.