



How to change track rod
end on **NISSAN Interstar
Van (X70)** – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

NISSAN INTERSTAR Box (X70) 1.9 dCi 80, NISSAN INTERSTAR Box (X70) 2.2 dCi 90, NISSAN INTERSTAR Box (X70) dCi 115, NISSAN INTERSTAR Box (X70) 3.0 dCi 140, NISSAN INTERSTAR Box (X70) 2.5 dCi 100, NISSAN INTERSTAR Box (X70) dCi 120, NISSAN INTERSTAR Box (X70) dCi 150, NISSAN INTERSTAR Box (X70) dCi 100

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT MASTER II Box (FD) 2.2 dCi 90

REPLACEMENT: TRACK ROD END – NISSAN INTERSTAR VAN (X70). TOOLS YOU MIGHT NEED:

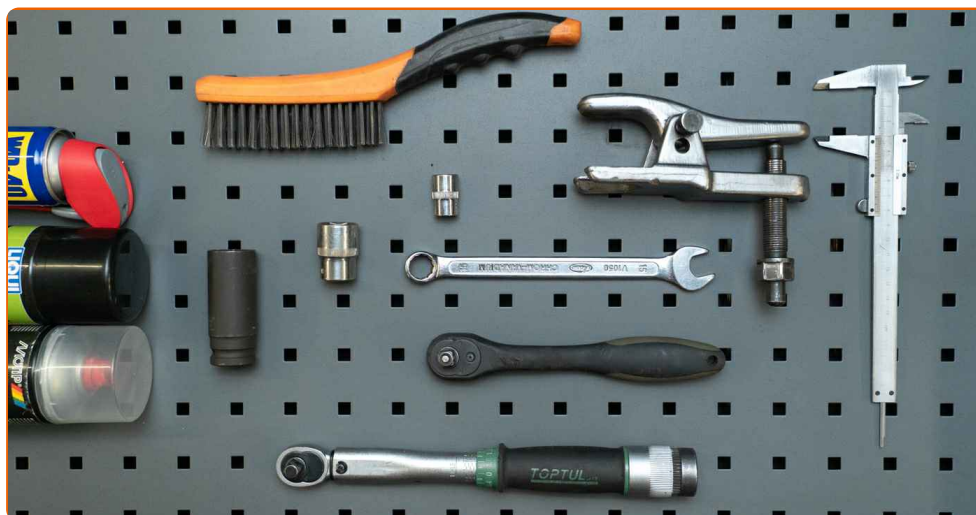

- Wire brush
- WD-40 spray
- All-purpose cleaning spray
- Ceramic grease
- Torque wrench
- 15 mm combination spanner
- 13 mm socket
- 22 mm socket
- 24 mm wheel impact socket
- Ratchet wrench or power tool for removal/installation of threaded fasteners
- Tommy bar
- Vernier caliper
- Ball joint separator
- Car lift or jack with jack stands, and wheel chocks

[Buy tools](#)


Replacement: track rod end – NISSAN Interstar Van (X70). Professionals recommend:

- Replace the tie rod ends in pairs.
- The replacement procedure is identical for the left and right tie rod ends.
- All the work should be carried out with the engine switched off.

REPLACEMENT: TRACK ROD END – NISSAN INTERSTAR VAN (X70). RECOMMENDED SEQUENCE OF STEPS:

1

Secure the wheels with chocks.

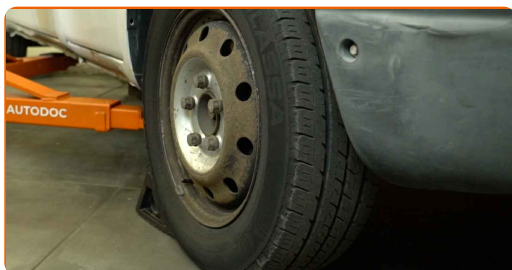

2

Loosen the wheel fasteners. Use a 24 mm wheel impact socket. Use a tommy bar.



3


Raise the car.

Replacement: track rod end – NISSAN Interstar Van (X70). AUTODOC recommends:

- If you are using a jack, make sure the car is parked on a hard, flat surface.
- Make sure to additionally secure the car with jack stands.

4

Unscrew the wheel fasteners.

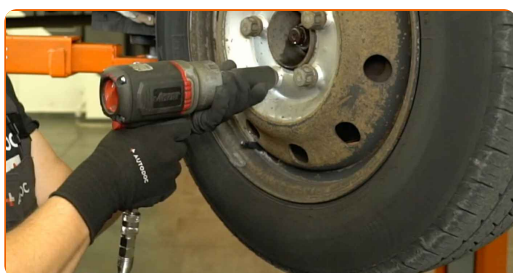

Caution!

- To avoid injury, hold up the wheel when unscrewing the fasteners.


5

Remove the wheel.



6

Clean all tie rod end connections. Use a wire brush. Use WD-40 spray.

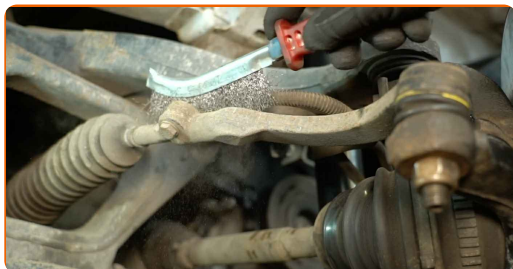


7

Unscrew the nut connecting the tie rod end to the steering knuckle. Use a 22 mm socket. Use a ratchet wrench.




8

Loosen the bolt connecting the tie rod end to the tie rod. Use an 13 mm socket. Use a ratchet wrench.

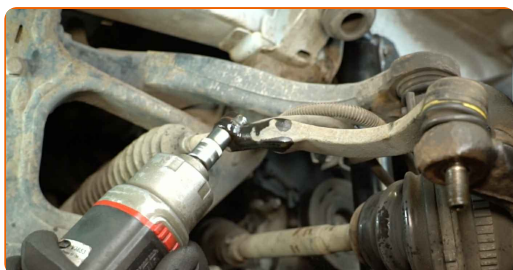


9

Measure and note down the length of the exposed portion of the tie rod thread or the number of turns the tie rod end made when being unscrewed to prevent wheel misalignment during reassembly. Use a vernier caliper.

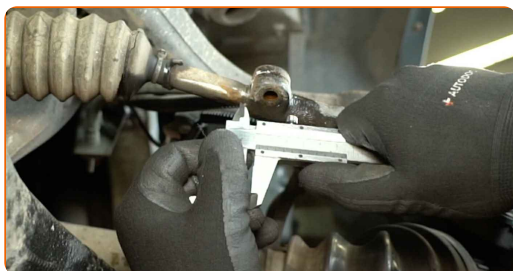


10

Disconnect the tie rod end from the steering knuckle. Use a ball joint separator.

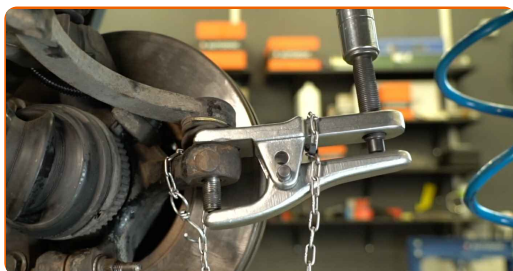


11

Unscrew the tie rod end from the tie rod.

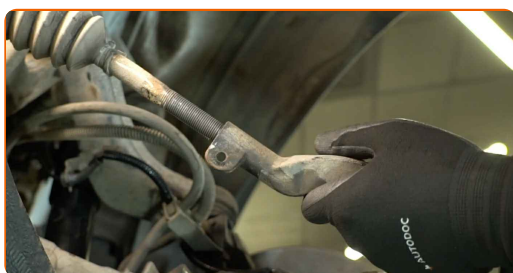


12

Clean the mounting seats of the tie rod end. Use a wire brush. Use an all-purpose cleaning spray.

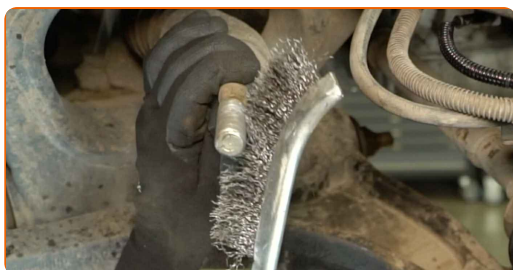

13

Screw on a new tie rod end.

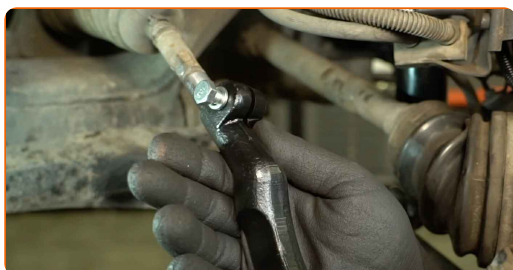


Replacement: track rod end – NISSAN Interstar Van (X70). Tip from AUTODOC experts:

- When installing the tie rod end, remember to maintain the same length of the exposed tie rod thread or turn the tie rod end the same number of times.

14

Connect the tie rod end to the steering knuckle.

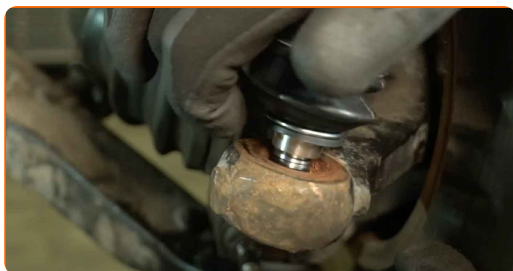


15

Tighten the bolt connecting the tie rod end to the tie rod. Use an 13 mm socket. Use a torque wrench. Tightening torque: 53 N·m.



16

Tighten the nut connecting the tie rod end to the steering knuckle. Use a 22 mm socket. Use a torque wrench. Tightening torque: 41 N·m.

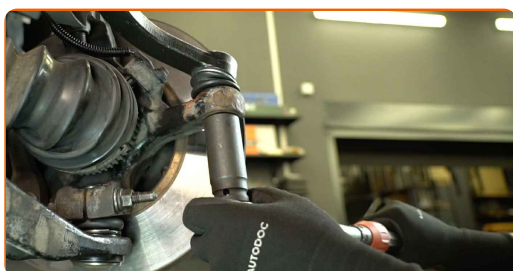

17

Clean the wheel rim mounting seat. Use a wire brush. Use an all-purpose cleaning spray.



18

Treat the brake disc surface that contacts the wheel rim. Use ceramic grease.



19

Install the wheel.



Replacement: track rod end – NISSAN Interstar Van (X70). Tip from AUTODOC:

- To avoid injury, hold up the wheel when screwing in the fasteners.

20

Screw in the wheel fasteners. Use a 24 mm wheel impact socket. Use a ratchet wrench.




21

Lower the car and tighten the wheel fasteners in a criss-cross pattern. Use a 24 mm wheel impact socket. Use a torque wrench. Tightening torque: 172 N·m.



22

Remove the jack and wheel chocks.

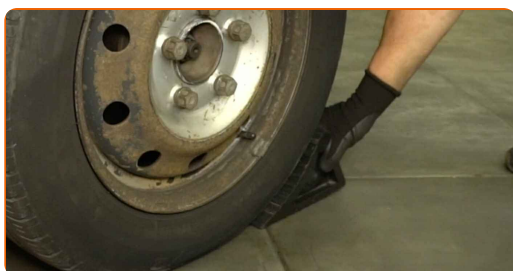

AUTODOC recommendation:


- After replacing the tie rod ends, it is necessary to have the wheels aligned.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

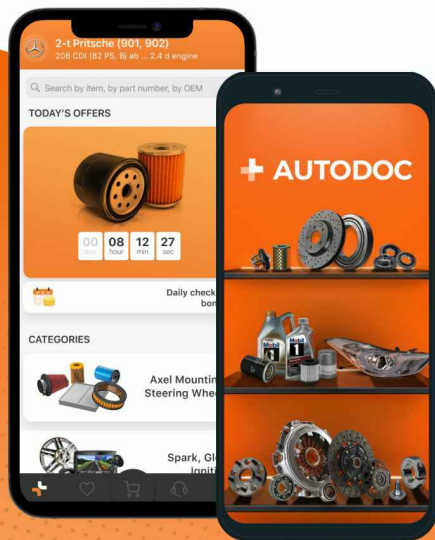



 GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

TRACK ROD END: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2025 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.