



How to change front  
lower arm on **NISSAN**  
**Kubistar Van (X76)** –  
replacement guide

### SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

#### **Important!**

This replacement procedure can be used for:

NISSAN Kubistar Van (X76) 1.5 dCi, NISSAN Kubistar Van (X76) 1.2, NISSAN Kubistar Van (X76) 1.2 16V, NISSAN Kubistar Van (X76) 1.6 16V

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT CLIO II (BB0/1/2\_, CB0/1/2\_) 1.2

**REPLACEMENT: FRONT LOWER ARM – NISSAN KUBISTAR VAN (X76). LIST OF THE TOOLS YOU'LL NEED:**



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #16
- Combination spanner #18
- Drive socket # 12
- Drive socket # 13
- Drive socket # 16
- Drive socket # 18
- Torx bit T40
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Tap wrench
- Hammer
- Flat chisel
- Crow bar
- Wheel chock

**Buy tools**

**Replacement: front lower arm – NISSAN Kubistar Van (X76). Tip:**

- The replacement procedure is identical for the left and right lower control arms.
- All work should be done with the engine stopped.

**REPLACEMENT: FRONT LOWER ARM – NISSAN KUBISTAR VAN (X76). TAKE THE FOLLOWING STEPS:****1**

Secure the wheels with chocks.


**2**

Loosen the wheel mounting bolts. Use wheel impact socket #19.

**3**

Raise the front of the car and secure on supports.


**4** Unscrew the wheel bolts.

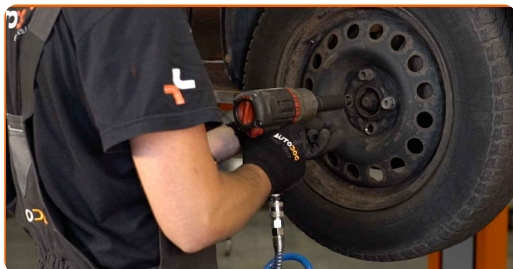


**AUTODOC recommends:**

- Important! Hold the wheel while unscrewing the fastening bolts. NISSAN Kubistar Van (X76)


**5** Remove the wheel.

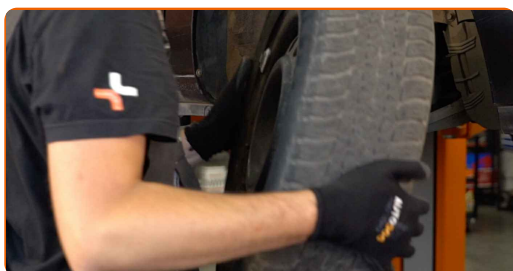

**6** Unscrew the wheel arch cover fasteners. Move the part aside.

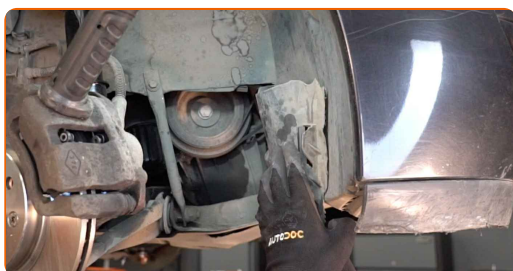


**7** Clean the fasteners of the bumper reinforcement bar and of its bracket. Use a wire brush. Use WD-40 spray.

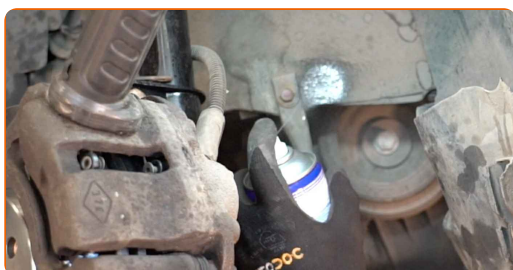


**8** Unscrew the fasteners of the bumper reinforcement bar bracket. Use a drive socket #18. Use a tap wrench.




**9** Unscrew the fasteners of the bumper reinforcement bar bracket. Use a drive socket #12. Use a tap wrench.

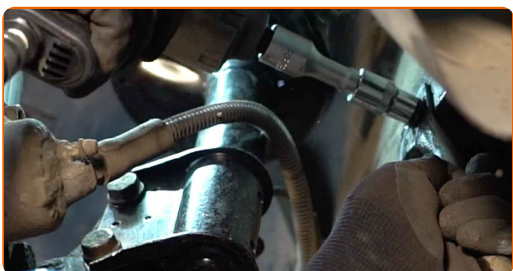

**10** Remove the bumper reinforcement bar.

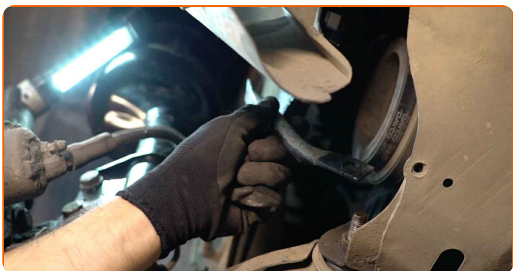


**11** Clean all joints of the arm. Use a wire brush. Use WD-40 spray.

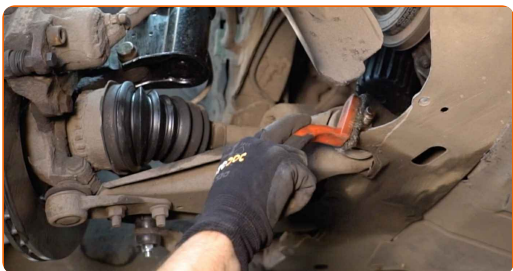



12

Unscrew the front arm fastener. Use a drive socket #18. Use a tap wrench.

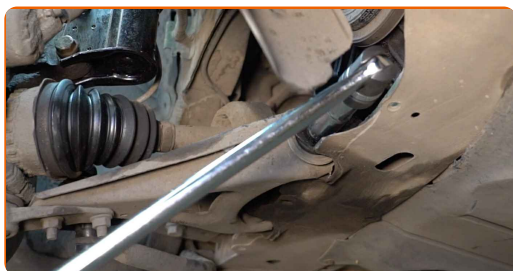


13

Unscrew the stabilizer rod fasteners. Use a drive socket #13.



14

Remove the stabilizer rod.

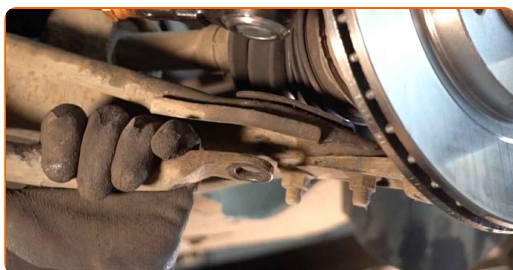


15

Clean all joints of the arm. Use a wire brush. Use WD-40 spray.



**16** Unscrew the rear arm fastener. Use a combination spanner #18. Use a drive socket #18. Use a tap wrench.

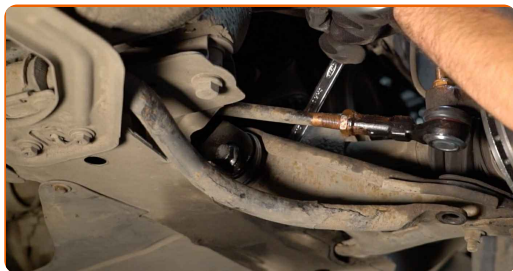


**17** Clean the fastener connecting the ball joint to the steering knuckle. Use a wire brush. Use WD-40 spray.



**18** Unscrew the ball joint fastening to the steering knuckle. Use a combination spanner #16. Use a drive socket #16.



**19** Remove the fastening bolt.

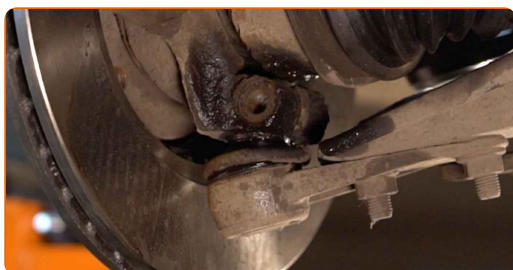



- 20 Release the fastener that connects the control arm ball joint to the steering knuckle. Use a flat metal-working chisel. Use a hammer.



- 21 Disconnect the lower arm from the steering knuckle.




- 22 Remove the fastening bolts.



- 23 Remove the arm. Use a crowbar.



- 24 Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.

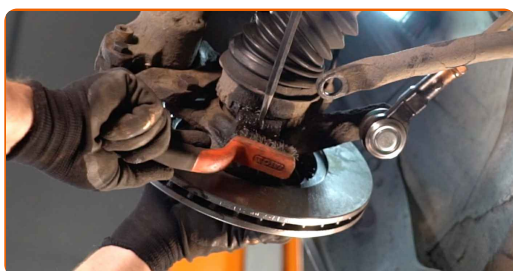

25

Install a new arm.



Replacement: front lower arm – NISSAN Kubistar Van (X76). Professionals recommend:

- During the installation process, use only new bolts and nuts.
- Do not damage the ball joint cover.

26

Install the fastening bolts.




27


Connect the lower arm to the steering knuckle.




**28** Support the arm. Use a hydraulic transmission jack.

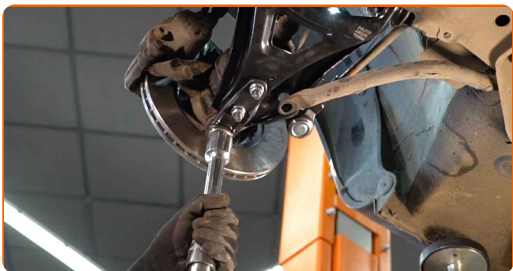

**29** Install the fastening bolt.

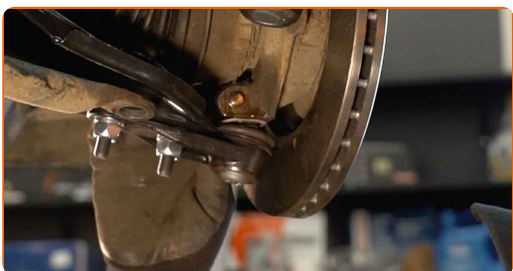

**30** Remove the support from under the arm.

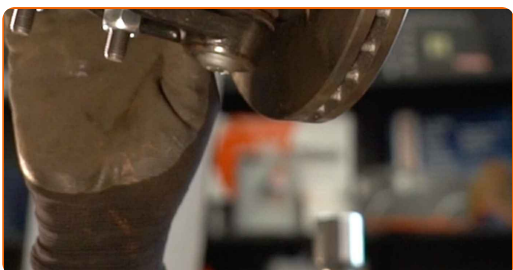


**AUTODOC recommends:**

- NISSAN Kubistar Van (X76) – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.


**31** Screw the fasteners of the ball joint. Use a drive socket #16. Use a combination spanner #16.




**32** Screw the front arm fastener. Use a combination spanner #18. Use a drive socket #18. Use a tap wrench.

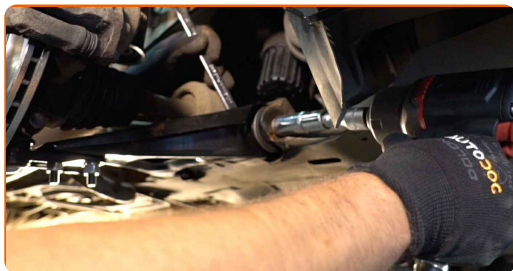

**33** Screw the rear fastener connecting the control arm to the subframe. Use a combination spanner #18. Use a drive socket #18.

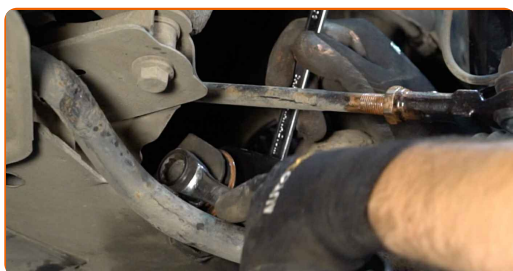

**34** Support the arm. Use a hydraulic transmission jack.

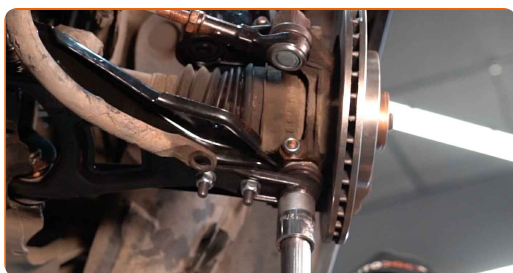

**35** Tighten the front fastener connecting the control arm to the subframe. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 90 Nm torque.




**36**

Tighten the rear fastener of the control arm. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 90 nm torque.



**37**

Remove the support from under the arm.

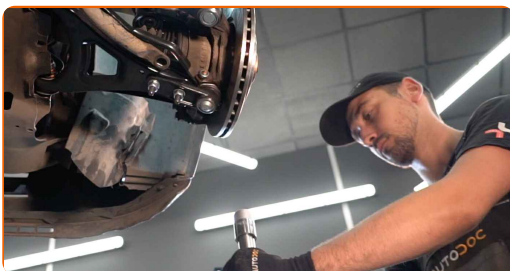

**AUTODOC recommends:**

- Replacement: front lower arm – NISSAN Kubistar Van (X76). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


**38**

Tighten the ball joint fastener. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 55 Nm torque.







**39** Install the bumper reinforcement bar.

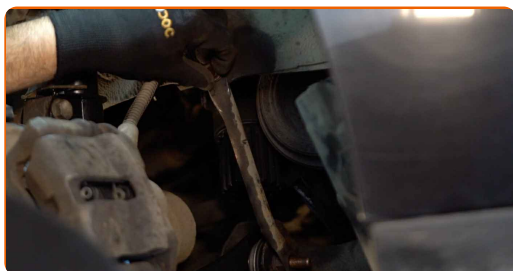


**40** Screw in the fastener of the bumper reinforcement bar bracket. Use a drive socket #12. Use a ratchet wrench.

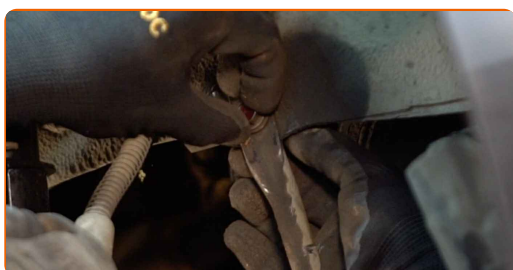


**41** Screw in the fastener of the bumper reinforcement bar bracket. Use a drive socket #18. Use a torque wrench. Tighten it to 70 Nm torque.

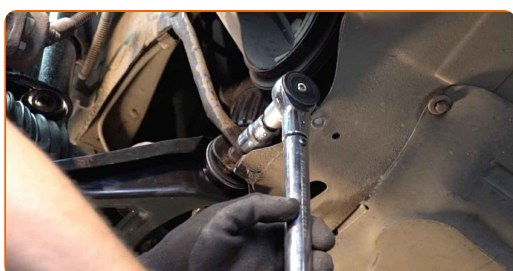

**42** Treat the bumper support bracket. Use copper grease.

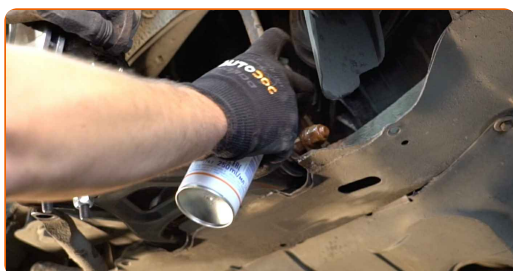


**43** Install the wheel arch cover to its mounting seat.

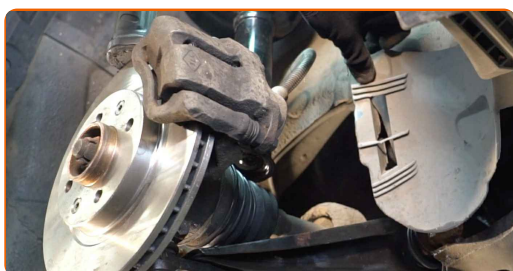




**44** Install the transverse stabilizer link. Use a crowbar.

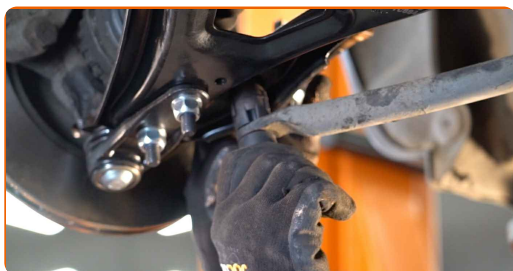


**45** Tighten the stabiliser link fastener. Use Torx T40. Use a drive socket #13. Use a torque wrench. Tighten it to 14 Nm torque.




**46** Treat all joints of the arm. Use copper grease.

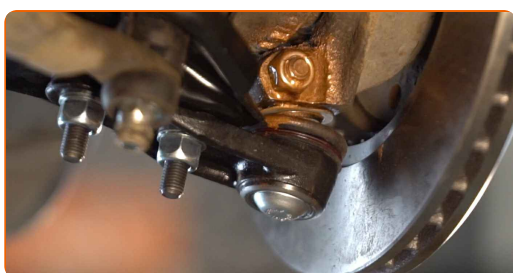

**47** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

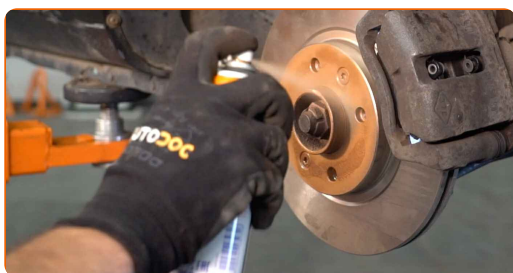

**48** Clean the brake disk surface. Use a brake cleaner.

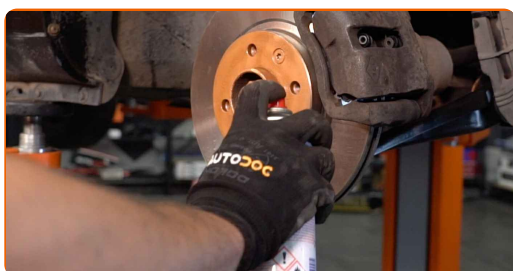

**AUTODOC recommends:**

- Replacement: front lower arm – NISSAN Kubistar Van (X76). After applying the spray, wait a few minutes.

**49**

Install the wheel.



**AUTODOC recommends:**

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. NISSAN Kubistar Van (X76)


**50**

Screw in the wheel bolts. Use wheel impact socket #19.



**51**

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 90 nm torque.

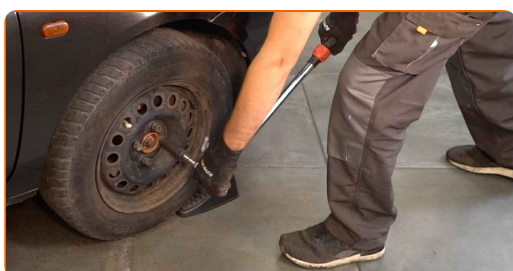

52

Remove the jacks and chocks.



**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
 **Google Play**

Download on the  
 **App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**CONTROL ARM: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.