How to change pollen filter on **OPEL Astra Classic Saloon (A04)** – replacement guide



SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: OPEL Astra Classic Saloon (A04) 1.6, OPEL Astra Classic Saloon (A04) 1.8 (L69)


The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Astra H Saloon (A04) 1.6 (L69)

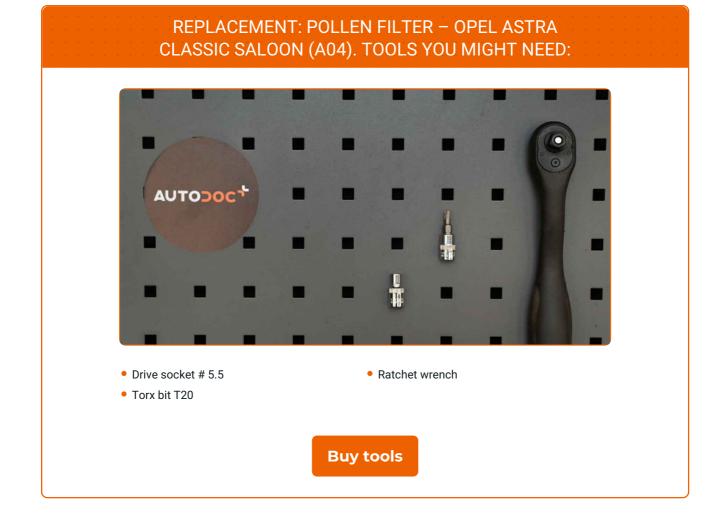

•

O

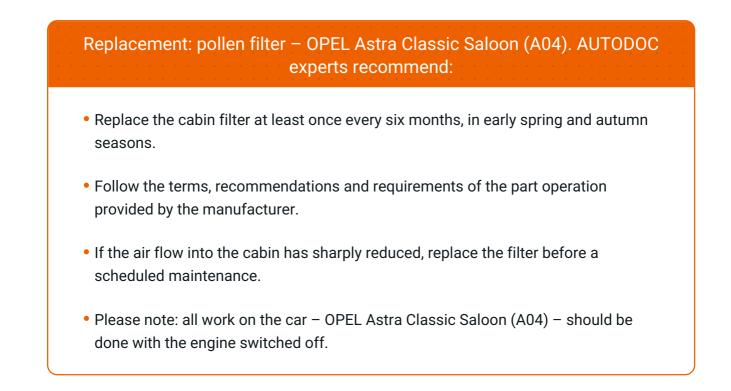

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Move the passenger seat fully backwards.





Spread a cloth under the cabin filter cover to protect the interior upholstery from getting dirty.

3

Open the glove box.





4

Unscrew the glove box fastening screws. Use Torx T20.



5

Remove the glovebox.



Replacement: pollen filter – OPEL Astra Classic Saloon (A04). Tip from AUTODOC:

• Be careful to avoid damaging the glove compartment fasteners.

6

Unplug the glove box light connector.



7

Unscrew the fasteners of the passenger side kick panel.





8

Remove the cover under the glove box.



9

Unscrew the fasteners of the cabin filter housing cover. Use a drive socket #5.5. Use a ratchet wrench.



10

Remove the cabin filter cover.



11

Remove the cabin filter.



Replacement: pollen filter – OPEL Astra Classic Saloon (A04). Tip:

• Do not attempt to clean and reuse the filter - it will affect the quality of air cleaning inside the car.



12

Install the cabin filter to its mounting seat.



Replacement: pollen filter – OPEL Astra Classic Saloon (A04). Tip from AUTODOC:

- Follow the air flow direction arrow on the filter.
- Check out the correct location of the filter element. Do not skew.
- Attention! Use quality filters OPEL Astra Classic Saloon (A04).



Install the filter cover.



14

Screw in the fasteners of the cabin filter housing cover. Use a drive socket #5.5. Use a ratchet wrench.





15

Install and secure the cover under the glove box.



16

Screw in the fasteners of the passenger side kick panel.



17

Plug in the glove box light connector.



18

Install the glove box.



19

Screw the glove box fastening screws. Use Torx T20.







Close the glove box.





Remove the cloth.

22

Return the passenger seat to its initial position.





Switch on the ignition.

24 Switch on the air conditioning system. This is necessary in order to make sure that the component operates properly.




Switch off the ignition.



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

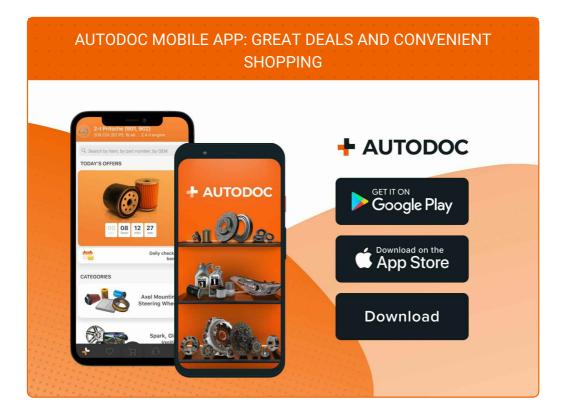

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

POLLEN FILTER: A WIDE SELECTION

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.