



How to change third
brake light on **OPEL**
Vivaro A Van (X83) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

OPEL Vivaro A Van (X83) 1.9 DI (F7), OPEL Vivaro A Van (X83) 1.9 DTI (F7), OPEL Vivaro A Van (X83) 2.0 16V (F7), OPEL Vivaro A Van (X83) 2.5 DTI (F7), OPEL Vivaro A Van (X83) 2.0 ECOTEC (F7), OPEL Vivaro A Van (X83) 2.0 CDTI (F7), OPEL Vivaro A Van (X83) 2.5 CDTI (F7)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Vivaro A Combi (X83) 2.5 CDTI (F7, J7, A07)

REPLACEMENT: THIRD BRAKE LIGHT – OPEL VIVARO A VAN (X83). TOOLS YOU'LL NEED:



- Electronic spray
- 8 mm socket
- 10 mm socket
- Ratchet wrench
- Masking tape
- Plastic trim removal tool
- Slotted screwdriver
- Clip removal tool
- Transmission jack
- Wide wooden block

[Buy tools](#)

Replacement: third brake light – OPEL Vivaro A Van (X83). AUTODOC recommends:

- All the work should be carried out with the ignition switched off.

REPLACEMENT: THIRD BRAKE LIGHT – OPEL VIVARO A VAN (X83). USE THE FOLLOWING PROCEDURE:

1

Secure the third brake light. Use masking tape.



2

Open the rear door.



3

Unscrew the fastener of the third brake light. Use an 8 mm socket. Use a ratchet wrench.




4 Close the rear door.

5 Remove the masking tape.



6 Remove the third brake light. Use a plastic trim removal tool.

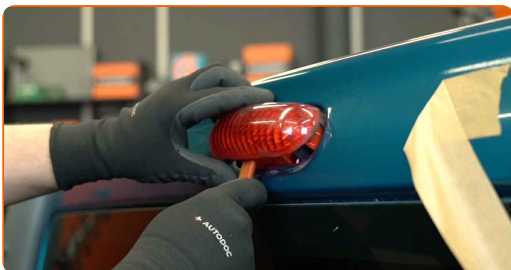


7 Detach the connector from the third brake light.



Replacement: third brake light – OPEL Vivaro A Van (X83). AUTODOC experts recommend:

- If necessary, use a slotted screwdriver to release the connector.

- 8 Treat the third brake light connector. Use an electronic spray.

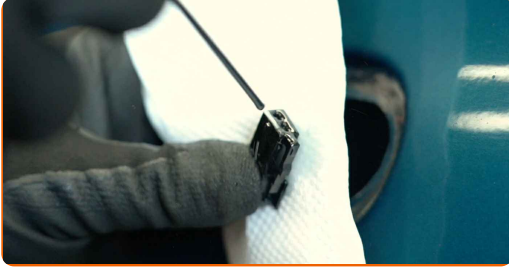

- 9 Install the bulb in the new third brake light.



- 10 Attach the connector to the new third brake light.



- 11 Install the new third brake light.




- 12 Secure the third brake light. Use masking tape.



13 Open the rear door.


14 Screw on the fastener of the third brake light. Use an 8 mm socket. Use a ratchet wrench.

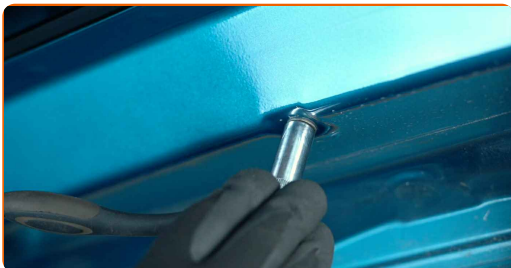

15 Close the rear door.

16 Remove the masking tape.

17 Check that the new component is working.

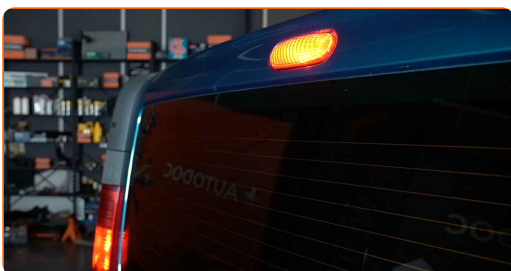

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

THIRD BRAKE LIGHT: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2025 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.