



How to change front anti
roll bar links on
PEUGEOT 306
Convertible –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

PEUGEOT 306 Convertible 1.8, PEUGEOT 306 Convertible 2.0, PEUGEOT 306 Convertible 1.6, PEUGEOT 306 Convertible 1.8 16V, PEUGEOT 306 Convertible 2.0 16V

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: CITROËN Berlingo / Berlingo First Van (M_) 1.9 D

REPLACEMENT: ANTI ROLL BAR LINKS – PEUGEOT 306 CONVERTIBLE. TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Ceramic grease
- Copper grease
- Torque wrench
- Combination spanner #17
- Drive socket # 17
- HEX No.H6 bit socket
- Wheel impact socket #19
- Ratchet wrench
- Wheel chock

Buy tools

Replacement: anti roll bar links – PEUGEOT 306 Convertible. Tip from AUTODOC:

- Replace the stabiliser links on PEUGEOT 306 Convertible in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- Please note: all work on the car – PEUGEOT 306 Convertible – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Secure the wheels with chocks.

2 Loosen the wheel mounting bolts. Use wheel impact socket #19.




3 Raise the car.

AUTODOC recommends:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.


4 Unscrew the wheel bolts.

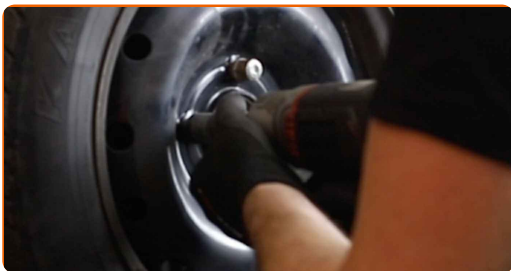


AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
PEUGEOT 306 Convertible

5 Remove the wheel.

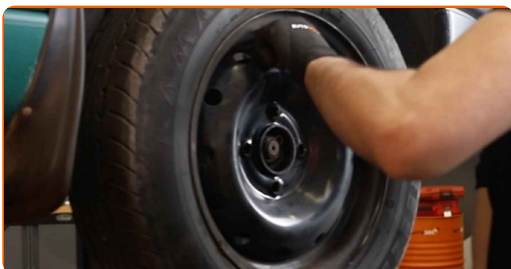

6 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

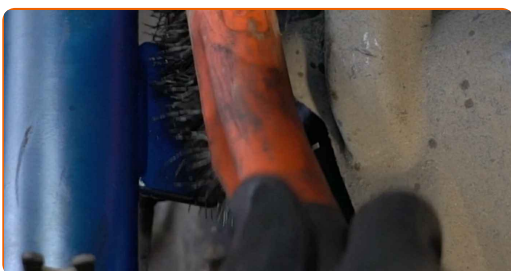

7 Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a ratchet wrench.



- 8** Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #17. Use HEX No.H6. Use a ratchet wrench.




- 9** Remove the stabiliser link.



Replacement: anti roll bar links – PEUGEOT 306 Convertible. Professionals recommend:

- Examine stabiliser bushes. Replace them if needed.

- 10** Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.

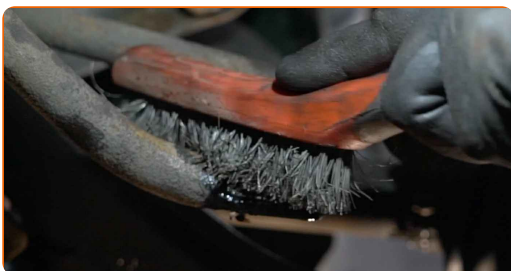


11 Treat the thread of the sway bar link fasteners. Use copper grease.



12 Install a new stabiliser link and tighten the fasteners. Use a drive socket #17. Use a ratchet wrench.




13 Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #17. Use a torque wrench. Tighten it to 40 Nm torque.

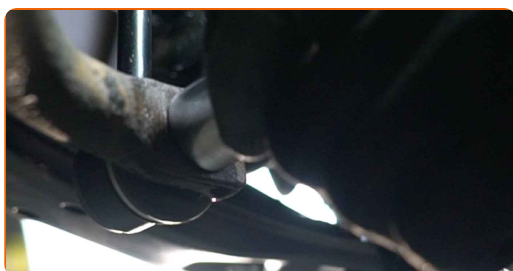

14 Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a torque wrench. Tighten it to 40 Nm torque.



15 Treat all joints of the stabiliser link. Use copper grease.

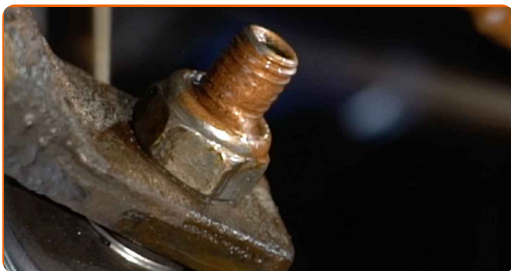

16 Clean the wheel rim mounting seat. Use a wire brush.

17 Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.



18 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: anti roll bar links – PEUGEOT 306 Convertible. After applying the spray, wait a few minutes.

19 Install the wheel.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. PEUGEOT 306 Convertible

20 Screw in the wheel bolts. Use wheel impact socket #19.



21 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 90 Nm torque.

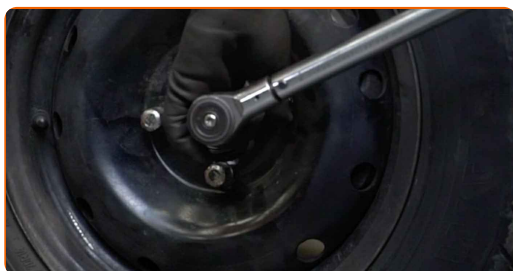

22

Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

ANTI ROLL BAR LINKS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.