



How to change front
windshield wipers on
PEUGEOT Partner III
Van (K9) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

PEUGEOT Partner III Van (K9) 1.5 BlueHDI 130, PEUGEOT Partner III Van (K9) 1.6 BlueHDI 75, PEUGEOT Partner III Van (K9) 1.6 BlueHDI 100, PEUGEOT Partner III Van (K9) 1.6 16V Flex, PEUGEOT Partner III Van (K9) 1.5 BlueHDI 100, PEUGEOT Partner III Van (K9) 1.2 PureTech 110, PEUGEOT Partner III Van (K9) 1.2 PureTech 130, PEUGEOT Partner III Van (K9) 1.5 BlueHDI 75, PEUGEOT Partner III Van (K9) 1.6 HDi 92, PEUGEOT Partner III Van (K9) e-Partner

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: PEUGEOT 307 SW (3H) 2.0 HDi 135

Replacement: windshield wipers – PEUGEOT Partner III Van (K9). AUTODOC recommends:

- Always replace front wiper blades together. It will ensure efficient and uniform cleaning of the windshield.
- Don't confuse the wiper blades of the driver and passenger side.
- The replacement procedure for both wiper blades is identical.
- Warning! Shut down the engine before starting any work – PEUGEOT Partner III Van (K9)

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Switch on the ignition. Set the windscreen wipers to the service position.



2


Switch off the ignition. In the service mode, the wipers will be in the upper position.



3 Prepare the new windscreen wipers.




4 Pull the wiper arm away from the glass surface until it stops.

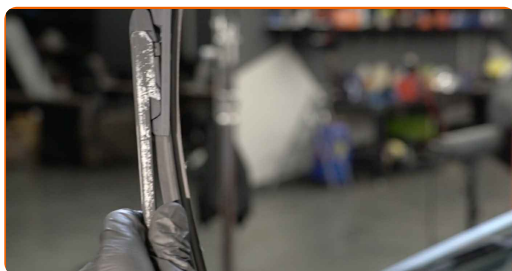

5 Press the clip.



6 Remove the blade from the wiper arm.

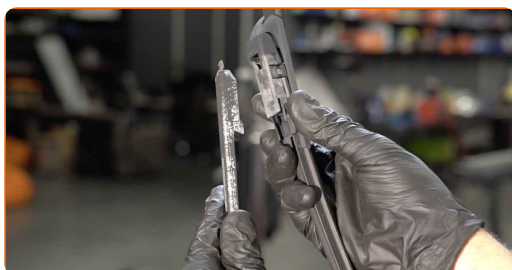


Replacement: windshield wipers – PEUGEOT Partner III Van (K9).
Professionals recommend:

- When replacing the wiper blade, take caution to prevent the spring-loaded wiper arm from hitting the glass.

7

Install the new wiper blade and carefully press the wiper arm down to the glass.

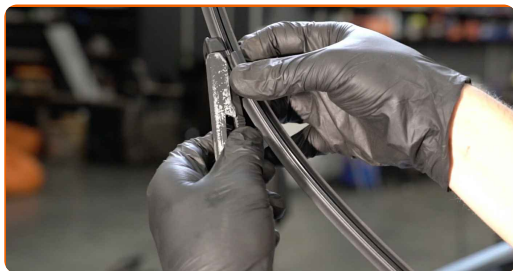

Replacement: windshield wipers – PEUGEOT Partner III Van (K9). AUTODOC experts recommend:

- Don't touch the wiper blade at the working rubber edge to prevent damage to the graphite coating.
- Ensure that the blade rubber strip fits tightly to the glass along the entire length.

8

Switch on the ignition.

9

Pull the windscreen wiper stalk to the downward position. By doing so, you will switch the windscreen wipers from the service mode to the operation mode.

10

After installation check the wipers performance. The blades shouldn't intersect or bump against the windshield seal.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING





 GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

WINDSHIELD WIPERS: A WIDE SELECTION

ⓘ **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.