



How to change front anti roll bar links on **RENAULT Laguna II Sport Tourer (KG)** – replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

RENAULT Laguna II Sport Tourer (KG) 1.6 16V, RENAULT Laguna II Sport Tourer (KG) 1.8 16V, RENAULT Laguna II Sport Tourer (KG) 3.0 V6 24V, RENAULT Laguna II Sport Tourer (KG) 1.9 dCi, RENAULT Laguna II Sport Tourer (KG) 2.0 16V IDE, RENAULT Laguna II Sport Tourer (KG) 1.9 dCi, RENAULT Laguna II Sport Tourer (KG) 2.2 dCi, RENAULT Laguna II Sport Tourer (KG) 2.0 16V, RENAULT Laguna II Sport Tourer (KG) 2.0 16V Turbo, RENAULT Laguna II Sport Tourer (KG) 2.0 dCi, RENAULT Laguna II Sport Tourer (KG) 1.6 Bifuel, RENAULT Laguna II Sport Tourer (KG) 2.9 V6 24V

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT Clio III Hatchback (BR0/1, CR0/1) 1.5 dCi

REPLACEMENT: ANTI ROLL BAR LINKS – RENAULT LAGUNA II SPORT TOURER (KG). TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Combination spanner #16
- Drive socket # 16
- Drive socket # 17
- HEX bit No.H6.
- Wheel impact socket #17
- Ratchet wrench
- Wheel chock


Buy tools

Replacement: anti roll bar links – RENAULT Laguna II Sport Tourer (KG). Tip from AUTODOC:

- Replace the stabiliser links on RENAULT Laguna II Sport Tourer (KG) in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- Warning! Shut down the engine before starting any work – RENAULT Laguna II Sport Tourer (KG)

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Secure the wheels with chocks.

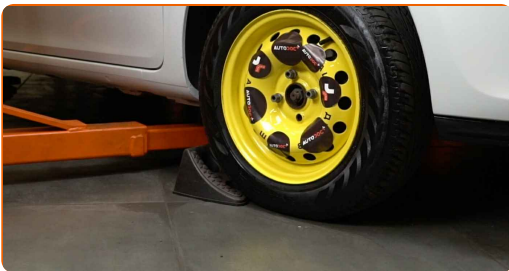

2 Loosen the wheel mounting bolts. Use wheel impact socket #17.



3 Raise the front of the car and secure on supports.

4

Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
RENAULT Laguna II Sport Tourer (KG)

5

Remove the wheel.



6

Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.



- 7** Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #16. Use HEX No.H6. Use a ratchet wrench.



- 8** Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #16. Use a ratchet wrench.



- 9** Remove the stabilizer rod.



Replacement: anti roll bar links – RENAULT Laguna II Sport Tourer (KG). Tip:

- Examine stabiliser bushes. Replace them if needed.

10 Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.



11 Install the transverse stabilizer link.




12 Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #17. Use a torque wrench. Tighten it to 44 Nm torque.



13 Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a torque wrench. Tighten it to 44 Nm torque.




14 Treat all joints of the stabiliser link. Use copper grease.

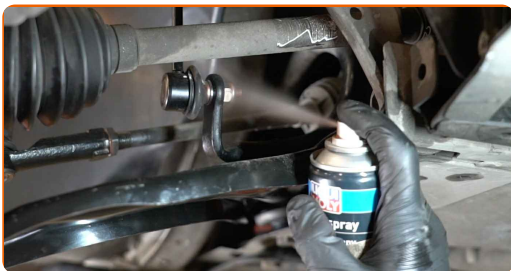

15 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.




16 Clean the brake disk surface. Use a brake cleaner.

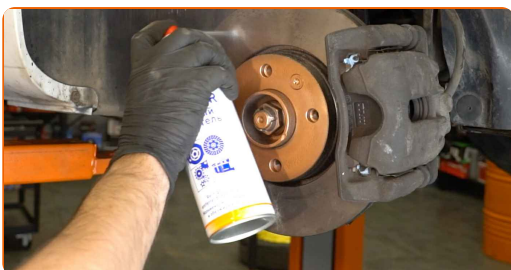

Replacement: anti roll bar links – RENAULT Laguna II Sport Tourer (KG). Tip from AUTODOC experts:

- After applying the spray, wait a few minutes.

17 Install the wheel.

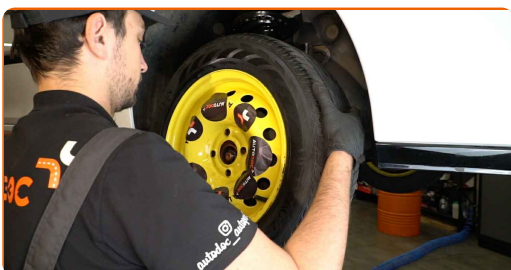

AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. RENAULT Laguna II Sport Tourer (KG)

18

Screw in the wheel bolts. Use wheel impact socket #17.



19

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 105 nm torque.

20

Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

ANTI ROLL BAR LINKS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.