



How to change fog lights  
on **RENAULT Master II**  
**Minibus** – replacement  
guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### **Important!**

This replacement procedure can be used for:

RENAULT MASTER II Bus (JD) 2.5 D, RENAULT MASTER II Bus (JD) 2.8 dTi, RENAULT MASTER II Bus (JD) 2.2 dCi 90, RENAULT MASTER II Bus (JD) 1.9 dTi, RENAULT MASTER II Bus (JD) 2.5 dCi 120, RENAULT MASTER II Bus (JD) 1.9 dCi 80

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT MASTER II Box (FD) 2.2 dCi 90

## REPLACEMENT: FOG LIGHTS – RENAULT MASTER II MINIBUS. TOOLS YOU'LL NEED:



- Electronic spray
- T20 Torx bit
- T30 Torx bit
- 10 mm socket
- Ratchet wrench or power tool for removal/installation of threaded fasteners
- Ratchet screwdriver

[Buy tools](#)

Replacement: fog lights – RENAULT Master II Minibus. AUTODOC experts recommend:

- The procedure for replacing the right and left fog lights is identical.
- All the work should be carried out with the ignition switched off.

## REPLACEMENT: FOG LIGHTS – RENAULT MASTER II MINIBUS. USE THE FOLLOWING PROCEDURE:


1

Unscrew the fog light fasteners. Use a T20 Torx bit. Use a ratchet screwdriver.



2


Remove the fasteners.

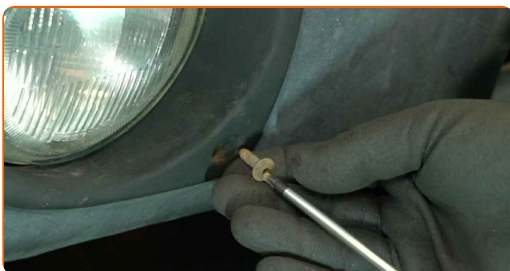

**3** Pull out the fog light.




**4** Detach the fog light connector.

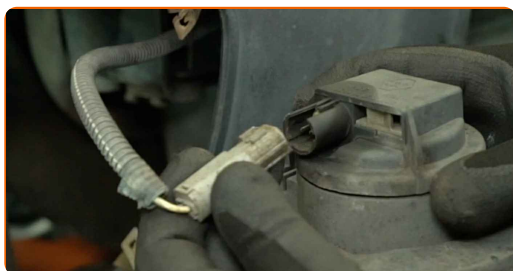

**5** Unscrew the fog light housing fasteners. Use a T30 Torx bit. Use a ratchet screwdriver.



**6** Remove the fasteners.

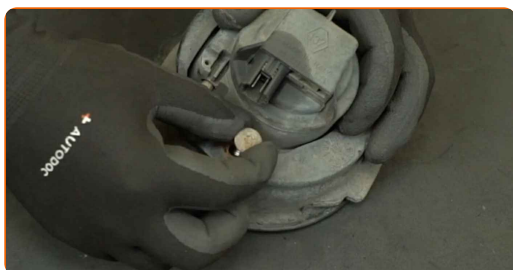


**7** Remove the fog light from the housing.




- 8 Remove the fog light rear cover by turning it anticlockwise.




- 9 Detach the fog light bulb connector.

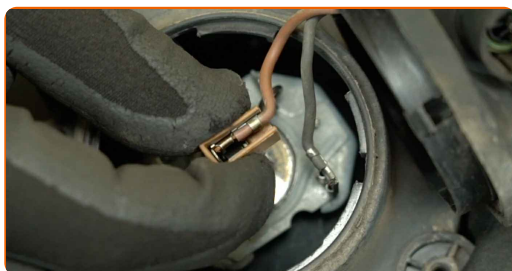

- 10 Pull aside the fog light bulb retainer.

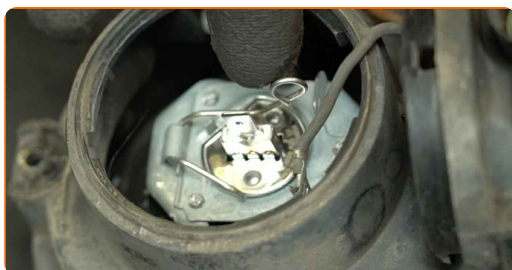

- 11 Remove the fog light bulb.

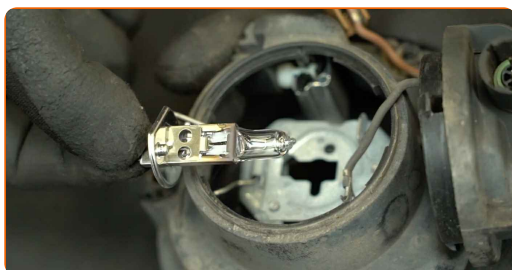

- 12 Install the bulb into the new fog light.



- 13** Secure the fog light bulb with the retainer.



- 14** Attach the fog light bulb connector.



- 15** Install the fog light rear cover by turning it clockwise.



- 16** Install the new fog light into the housing.



- 17** Install the fasteners.





- 18** Tighten the fog light housing fasteners. Use a 10 mm socket. Use a ratchet wrench.



- 19** Treat the fog light connector. Use an electronic spray.



- 20** Attach the connector to the fog light.



- 21** Install the new fog light.



- 22** Install the fasteners.





**23**

Screw in the fog light fasteners. Use a T20 Torx bit. Use a ratchet screwdriver.

**24**

Check that the new component is working.

**WELL DONE!** 

**VIEW MORE TUTORIALS**

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**





 GET IT ON  
Google Play

 Download on the  
App Store

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**FOG LIGHTS: A WIDE SELECTION**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2025 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.