



How to change auxiliary
indicator on **RENAULT**
Megane I Convertible
(EA) – replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

RENAULT MEGANE I Cabriolet (EA0/1_) 1.6 e, RENAULT MEGANE I Cabriolet (EA0/1_) 2.0 16V, RENAULT MEGANE I Cabriolet (EA0/1_) 2.0, RENAULT MEGANE I Cabriolet (EA0/1_) 1.6 16V (EA04, EA0B, EA11, EA1J), RENAULT MEGANE I Cabriolet (EA0/1_) 2.0 i (EA0G), RENAULT MEGANE I Cabriolet (EA0/1_) 1.4 16V, RENAULT MEGANE I Cabriolet (EA0/1_) 2.0 16V IDE

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT MASTER II Box (FD) 2.2 dCI 90

REPLACEMENT: AUXILIARY INDICATOR – RENAULT MEGANE I CONVERTIBLE (EA). TOOLS YOU MIGHT NEED:

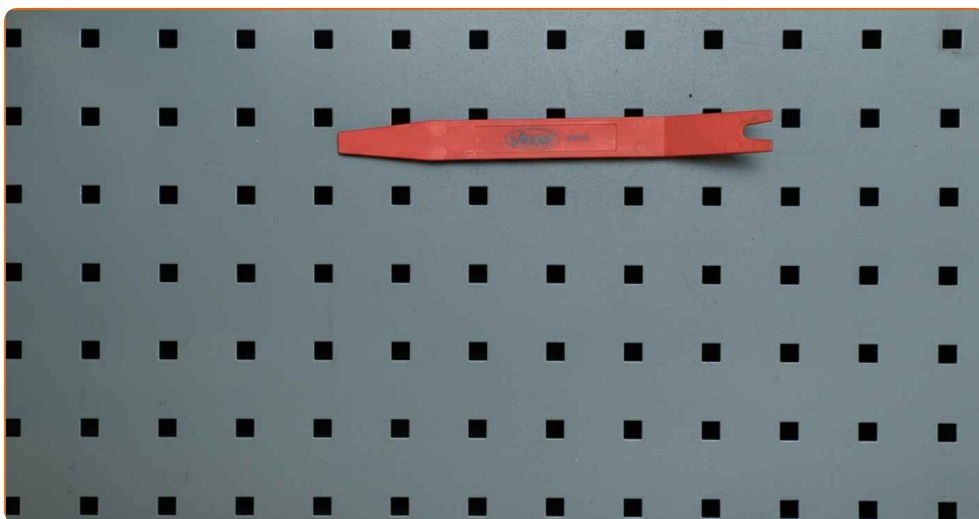

- Plastic trim removal tool

[Buy tools](#)

Replacement: auxiliary indicator – RENAULT Megane I Convertible (EA).
AUTODOC recommends:


- The procedure for replacing the right and left side indicators is identical.
- All the work should be carried out with the ignition switched off.

REPLACEMENT: AUXILIARY INDICATOR – RENAULT MEGANE I CONVERTIBLE (EA). RECOMMENDED SEQUENCE OF STEPS:


1 Remove the side indicator light. Use a plastic trim removal tool.



2 Detach the bulb holder from the side indicator light.

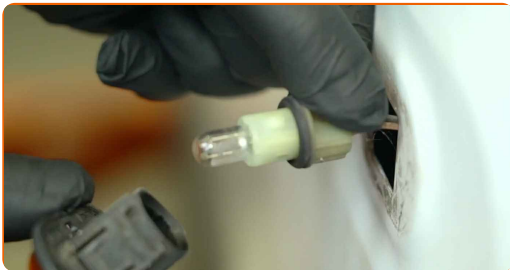

3 Attach the bulb holder to a new side indicator light.

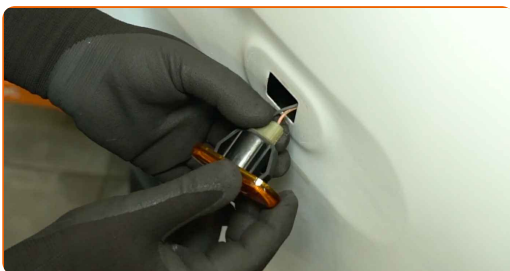

4

Install the new side indicator light.


**5**

Check that the new component is working.

WELL DONE! **[VIEW MORE TUTORIALS](#)**

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

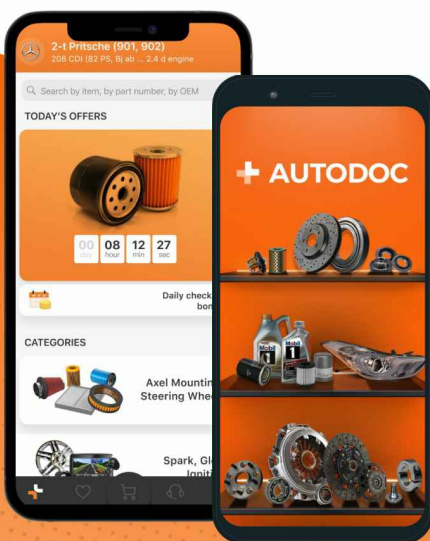

+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

AUXILIARY INDICATOR: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2025 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.