




How to change front  
suspension strut on  
**RENAULT MEGANE II**  
**(BM0/1\_, CM0/1\_) –**  
replacement guide

### SIMILAR VIDEO TUTORIAL

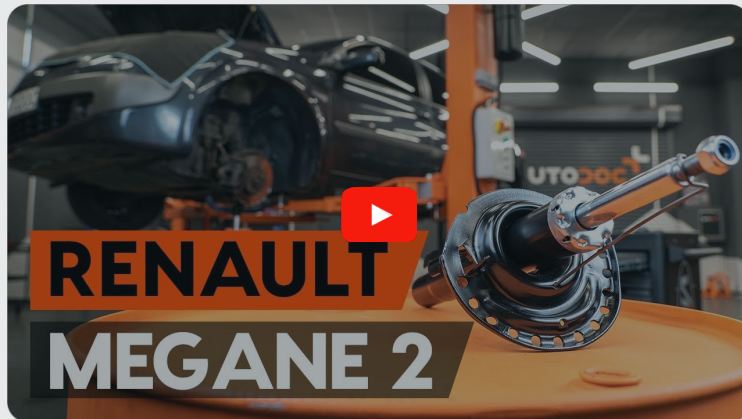

This video shows the replacement procedure of a similar car part on another vehicle

### Important!

This replacement procedure can be used for:

RENAULT MEGANE II (BM0/1\_, CM0/1\_) 1.4 16V, RENAULT MEGANE II (BM0/1\_, CM0/1\_) 1.6 16V, RENAULT MEGANE II (BM0/1\_, CM0/1\_) 2.0 16V, RENAULT MEGANE II (BM0/1\_, CM0/1\_) 1.5 dCi, RENAULT MEGANE II (BM0/1\_, CM0/1\_) 1.9 dCi, RENAULT MEGANE II (BM0/1\_, CM0/1\_) 1.5 dCi (BM02, BM13, BM2A, CM02, CM13), RENAULT MEGANE II (BM0/1\_, CM0/1\_) 2.0 16V Turbo, RENAULT MEGANE II (BM0/1\_, CM0/1\_) 1.5 dCi (BM1F, CM1F), RENAULT MEGANE II (BM0/1\_, CM0/1\_) 1.5 dCi (BM1E, CM1E), RENAULT MEGANE II (BM0/1\_, CM0/1\_) 1.5 dCi (BM16, CM16), RENAULT MEGANE II (BM0/1\_, CM0/1\_) 1.6, RENAULT MEGANE II (BM0/1\_, CM0/1\_) 1.6 Flex-Fuel, RENAULT MEGANE II (BM0/1\_, CM0/1\_) 2.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT MEGANE II Saloon (LM0/1\_) 1.4

**REPLACEMENT: SUSPENSION STRUT – RENAULT MEGANE II (BM0/1\_, CM0/1\_). TOOLS YOU'LL NEED:**



- Wire brush
- WD-40 spray
- Copper grease
- Drive socket # 13
- Drive socket # 19
- HEX bit No.H6.
- Combination spanner #17
- Combination spanner #18
- Combination spanner #19
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Tap wrench
- Hammer
- Flat chisel
- Clip removal tool
- Crow bar
- Hydraulic transmission jack
- Hydraulic strut spring compressor
- Fender cover
- Wheel chock

**Buy tools**

Replacement: suspension strut – RENAULT MEGANE II (BM0/1\_, CM0/1\_).  
Professionals recommend:

- Both shock struts of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right shock struts of the front suspension.
- Warning! Shut down the engine before starting any work – RENAULT MEGANE II (BM0/1\_, CM0/1\_)

**CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:**

**1** Open the bonnet.

**2** Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


**3** Remove the retainers of the shock strut mount cap. Use a clip removal tool.



**4** Raise a little the shock strut mount cap. Treat the fasteners of the shock strut mount. Use WD-40 spray.




**5** Loosen the upper fastener of the shock strut mount. Use a drive socket #13. Use a ratchet wrench.

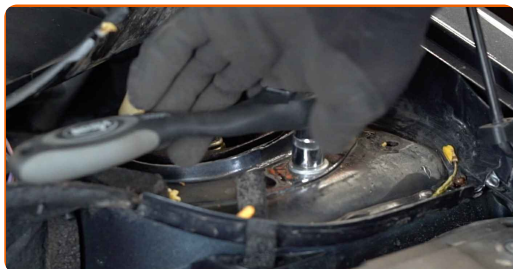

**6** Secure the wheels with chocks.




**7** Loosen the wheel mounting bolts. Use wheel impact socket #19.

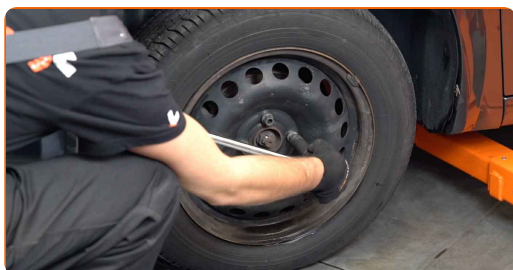

**8** Raise the front of the car and secure on supports.

**9** Unscrew the wheel bolts.

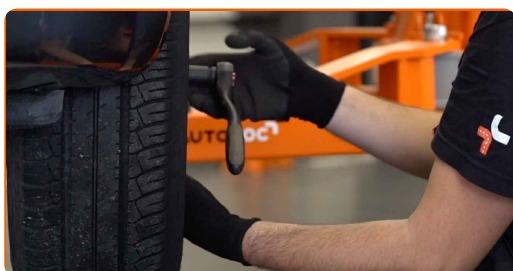


AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.  
RENAULT MEGANE II (BM0/1\_, CM0/1\_)

10

Remove the wheel.

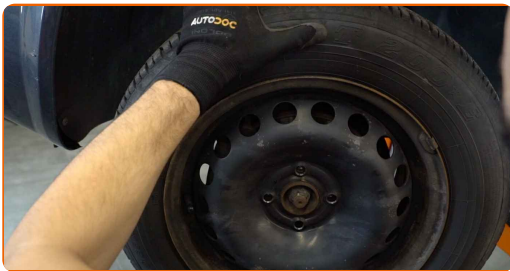


11

Disconnect the wiring and the brake hose from the bracket on the shock strut. Use a crowbar.




12


Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

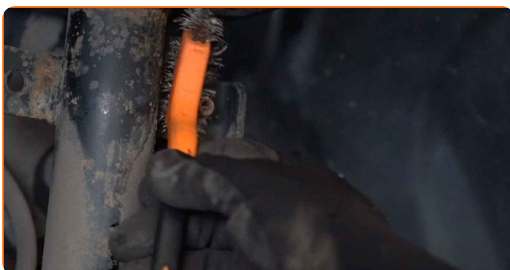


- 13** Unscrew the nut and remove the stabilizer rod from the shock strut. Use HEX No.H6. Use a combination spanner #17. Use a ratchet wrench.

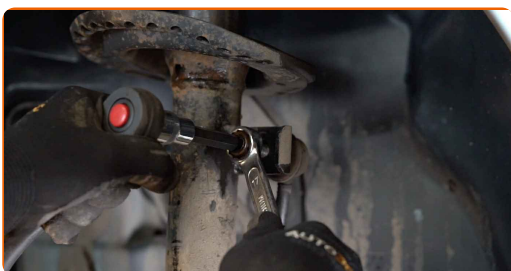


- 14** Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.

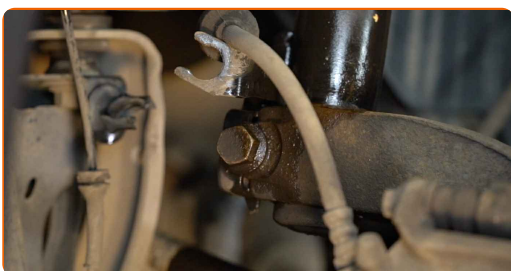

- 15** Unscrew the lower fastener of the shock absorber strut. Use a drive socket #19. Use a tap wrench.

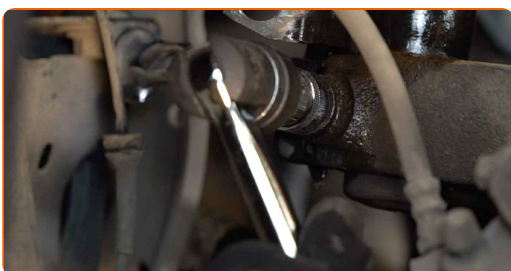

- 16** Remove the fastening bolt.

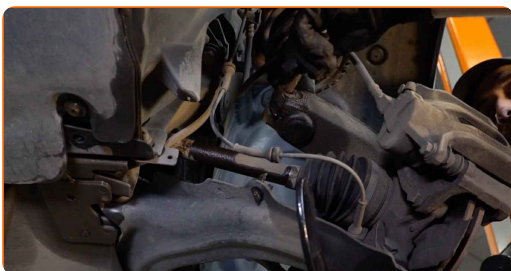



Replacement: suspension strut – RENAULT MEGANE II (BM0/1\_, CM0/1\_). Tip:

- Make sure that the steering knuckle is supported.

17

Disconnect the steering knuckle from the shock absorber strut. Use a hammer. Use a flat metal-working chisel.



18

Unscrew the upper fastening of the shock absorber strut. Use a drive socket #13. Use a ratchet wrench.




Replacement: suspension strut – RENAULT MEGANE II (BM0/1\_, CM0/1\_). Tip from AUTODOC:

- To avoid injuries, hold the shock strut when undoing the fastening bolts.

19

Remove the suspension strut.

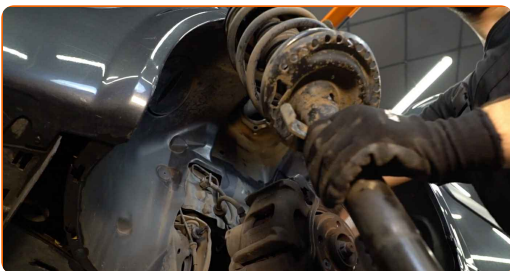



**20**

Set the shock absorber strut on the spring compressor tool.




**Replacement: suspension strut – RENAULT MEGANE II (BM0/1\_, CM0/1\_).  
AUTODOC experts recommend:**

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

**21**

Compress the spring.

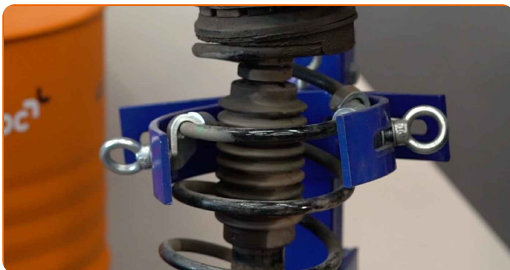

**22**

Remove the strut piston rod nut. Use HEX No.H6. Use a combination spanner #18. Use a ratchet wrench.



**23** Remove the top strut mount.




**24** Release the coil spring.




**25** Remove the spring.



**26** Remove the shock absorber dust cap and the bump stop.

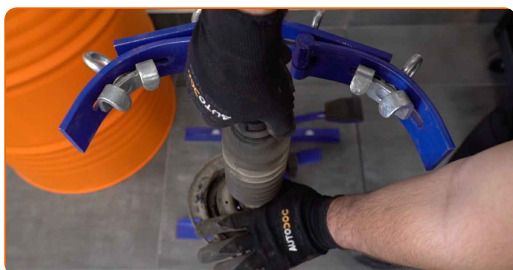

**27** Remove the old shock absorber from the hydraulic coil spring compressor.

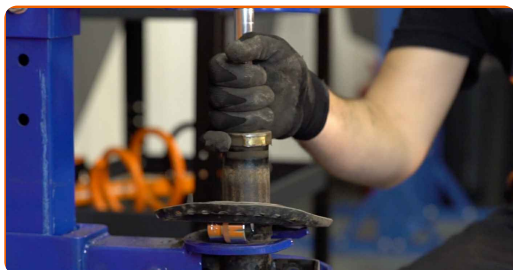


**AUTODOC recommends:**

- Replacement: suspension strut – RENAULT MEGANE II (BM0/1\_, CM0/1\_). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.
- Before installing a new shock absorber you should pump it manually 3-5 times.


**28**

Install the new shock absorber on the hydraulic coil spring compressor.

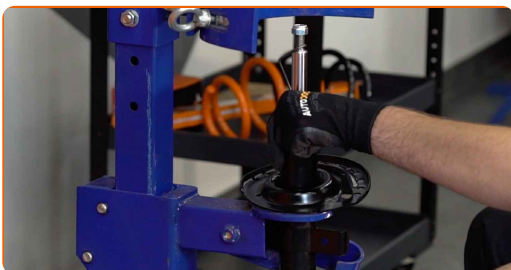

**29**

Install the dust sleeve and the bump stop on the new shock absorber.

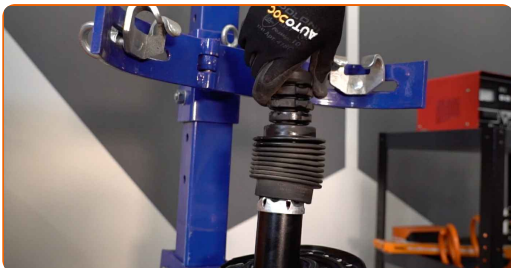

**30**


Install the spring on the shock absorber.




**31** Compress the spring.



**32** Install the upper strut mount and the strut mount bearing.

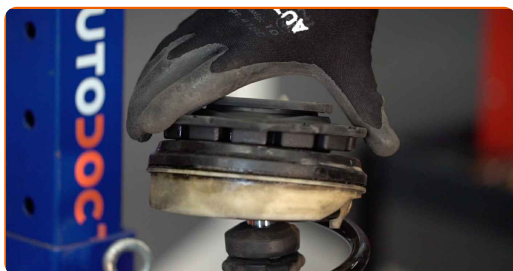

**33** Tighten the shock strut piston rod nut. Use HEX No.H6. Use a combination spanner #18. Use a torque wrench. Tighten it to 62 Nm torque.

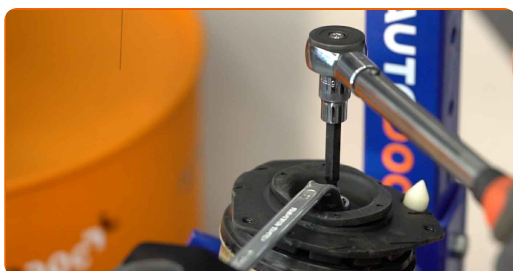


Replacement: suspension strut – RENAULT MEGANE II (BM0/1\_, CM0/1\_).  
AUTODOC recommends:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.
- Important! Be sure to use new fasteners.


**34** Decompress the spring.




**35** Remove the assembled shock strut.

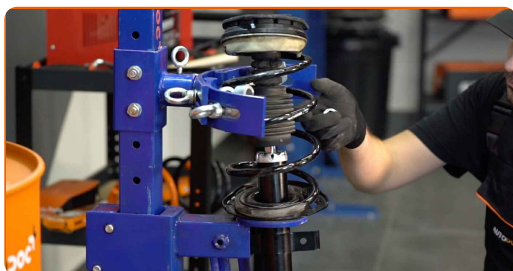

**36** Install the shock strut into the wheel arch.

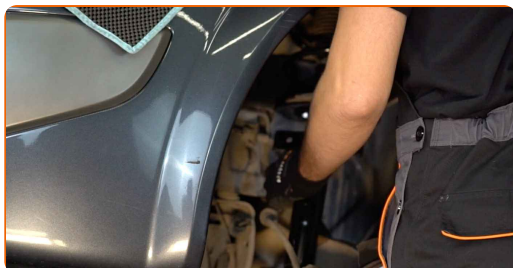

**37** Secure the upper fasteners of the shock strut (3 pieces). Do not tighten it.

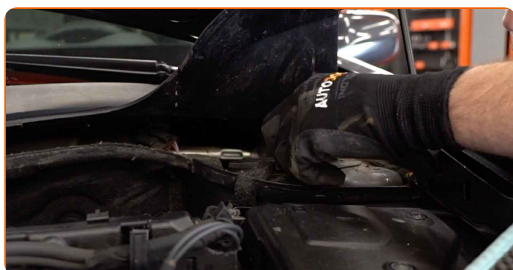


**AUTODOC recommends:**

- RENAULT MEGANE II (BM0/1\_, CM0/1\_) – To avoid injury, hold the suspension strut while screwing in the fastening bolts.


**38**

Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.

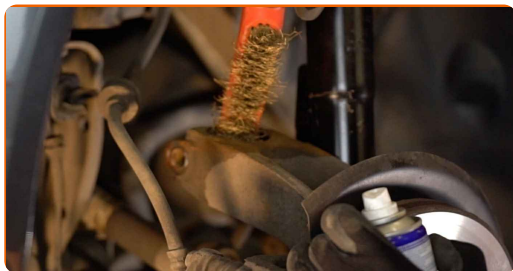

**39**

Fix the shock absorber strut on the steering knuckle.

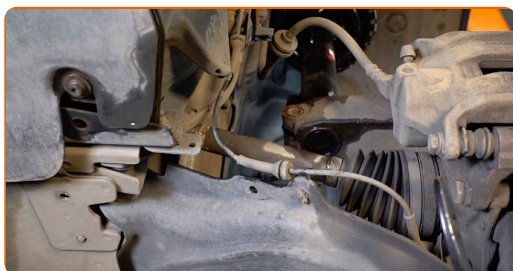


**40**

Prop up the steering knuckle. Use a hydraulic transmission jack.



**41**

Install and tighten a new bolt of the steering knuckle. Use a drive socket #19. Use a combination spanner #19. Use a torque wrench. Tighten it to 105 Nm torque.

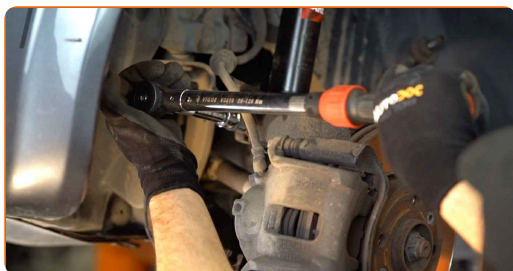




**42** Remove the support from under the steering knuckle.




**AUTODOC recommends:**

- Replacement: suspension strut – RENAULT MEGANE II (BM0/1\_, CM0/1\_). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

**43** Connect the fastener of the ABS sensor cable to the shock absorber strut. Fasten the brake hose on the strut.

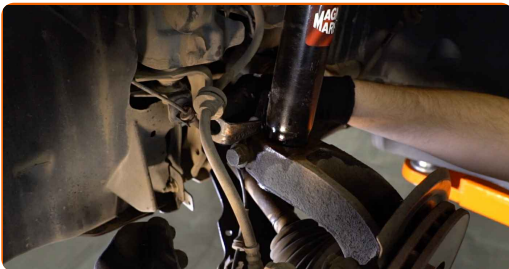

**44** Secure the stabilizer link on the suspension strut. Use HEX No.H6. Use a combination spanner #17. Use a torque wrench. Tighten it to 44 Nm torque.

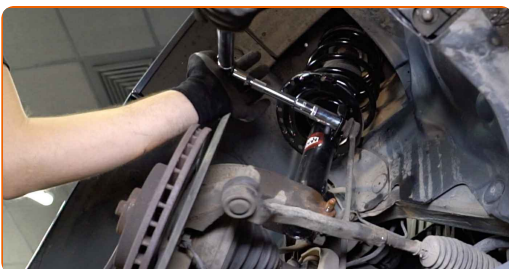



45

Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.



46

Install the wheel.




Replacement: suspension strut – RENAULT MEGANE II (BM0/1\_, CM0/1\_). Tip from AUTODOC experts:


- To avoid injury, hold up the wheel when screwing in the fastening bolts.

47


Screw in the wheel bolts. Use wheel impact socket #19.

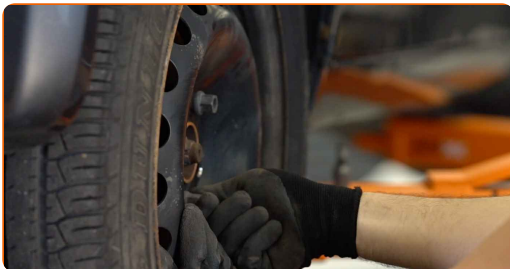


- 48 Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 110 Nm torque.

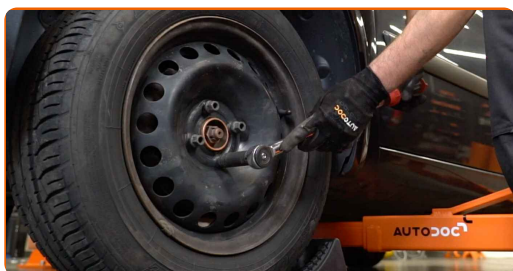


- 49 Tighten the shock strut top mount. Use a drive socket #13. Use a torque wrench. Tighten it to 21 Nm torque.

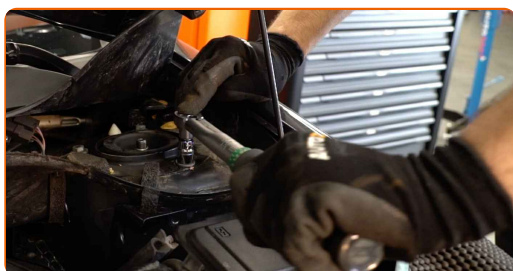

- 50 Install the shock strut mount cap.

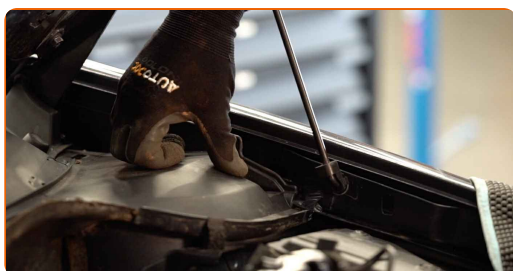

- 51 Install the retainers of the shock strut mount cap.

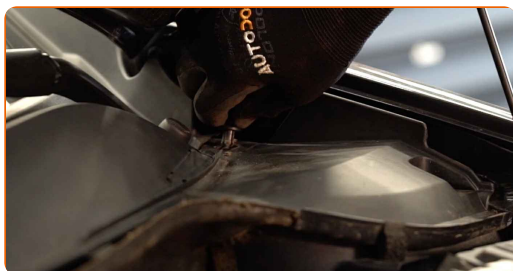

- 52 Remove the fender protection cover.

- 53 Close the hood.

54

Remove the jacks and chocks.



**WELL DONE!** 

**VIEW MORE TUTORIALS**

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**SHOCK ABSORBERS: A WIDE SELECTION**

### **(i) DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.