




How to change rear
brake discs on **RENAULT**
MEGANE II Estate
(KM0/1_) – replacement
guide

SIMILAR VIDEO TUTORIAL

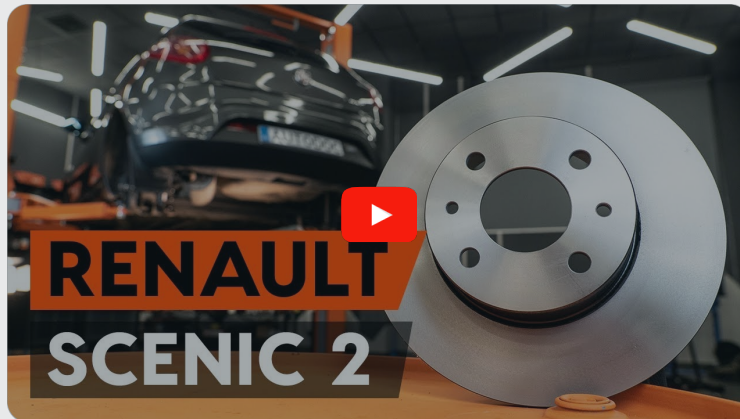

This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

RENAULT MEGANE II Estate (KM0/1_) 1.9 dCi, RENAULT MEGANE II Estate (KM0/1_) 1.4, RENAULT MEGANE II Estate (KM0/1_) 1.6, RENAULT MEGANE II Estate (KM0/1_) 2.0, RENAULT MEGANE II Estate (KM0/1_) 1.5 dCi (KM0F, KM0T, KM2B), RENAULT MEGANE II Estate (KM0/1_) 1.5 dCi (KM02, KM13), RENAULT MEGANE II Estate (KM0/1_) 1.5 dCi, RENAULT MEGANE II Estate (KM0/1_) 1.5 dCi (KM1F), RENAULT MEGANE II Estate (KM0/1_) 1.6 16V, RENAULT MEGANE II Estate (KM0/1_) 1.6 16V Hi-Flex, RENAULT MEGANE II Estate (KM0/1_) 1.6 LPG 16V

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT SCÉNIC II (JM0/1_) 1.9 dCi

REPLACEMENT: BRAKE DISCS – RENAULT MEGANE II ESTATE (KM0/1_). TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #15
- Drive socket # 13
- Drive socket # E16
- Drive socket # 30
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Brake caliper wind back tool
- Tap wrench
- Hammer
- Rubber mallet
- Crow bar
- Wheel chock

Buy tools

Replacement: brake discs – RENAULT MEGANE II Estate (KM0/1_). AUTODOC recommends:

- Replace the brake disks on the car RENAULT MEGANE II Estate (KM0/1_) in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- All work should be done with the engine stopped.

REPLACEMENT: BRAKE DISCS – RENAULT MEGANE II ESTATE (KM0/1_). TAKE THE FOLLOWING STEPS:

1 Open the bonnet. Unscrew the brake fluid reservoir cap.

2 Secure the wheels with chocks.



3 Loosen the wheel mounting bolts. Use wheel impact socket #19.



4 Raise the rear of the car and secure on supports.


5 Unscrew the wheel bolts.



AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. RENAULT MEGANE II Estate (KM0/1_)

6 Remove the wheel.

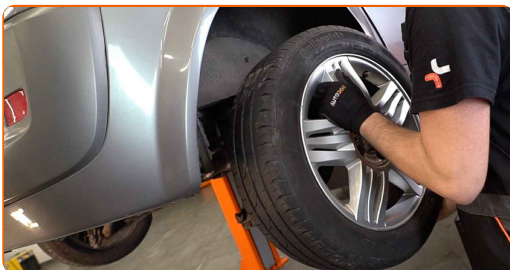

7 Clean the brake caliper fasteners. Use a wire brush. Use a brake cleaner.



Replacement: brake discs – RENAULT MEGANE II Estate (KM0/1_). AUTODOC experts recommend:

- After applying the spray, wait a few minutes.

- 8** Unscrew the brake caliper fastening. Use a combination spanner #15. Use a drive socket #13. Use a ratchet wrench.



- 9** Spread the brake pads. Use a crowbar.

- 10** Remove the brake caliper. Use a crowbar.




Replacement: brake discs – RENAULT MEGANE II Estate (KM0/1_).
Professionals recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.


11

Treat the brake caliper piston. Use WD-40 spray.

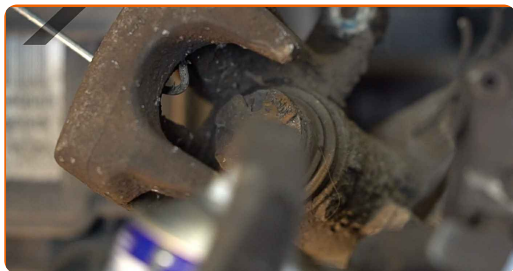


12

Remove the brake pads. Use a crowbar.

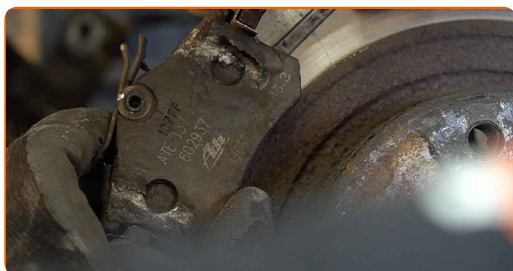

13

Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.

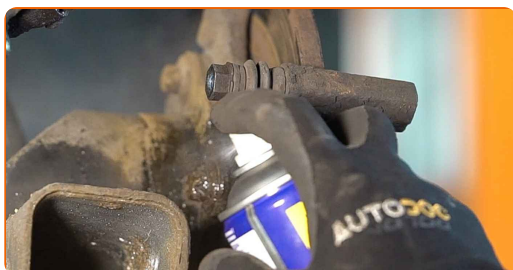

14

Unscrew the caliper bracket fastening. Use a drive socket #E16. Use a tap wrench.



15

Remove the caliper bracket.



16 Clean the brake disk surface. Use a wire brush. Use WD-40 spray.



17 Pry up and remove the wheel hub cap. Use a crowbar. Use a hammer.




AUTODOC recommends:

- Some cars are not equipped with wheel hub caps.

18 Unscrew the wheel hub axle nut. Use a drive socket #30. Use a tap wrench.




19 Remove the brake disc assembled with the wheel hub bearing.

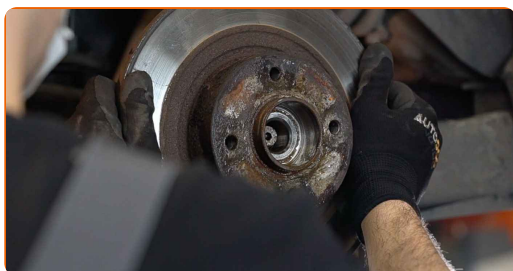

20

Clean the guiding part of the stub axle. Use a wire brush. Use WD-40 spray.

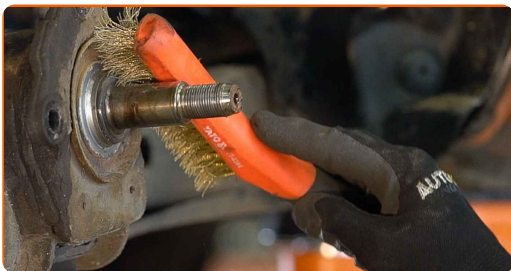

21

Install the brake disc assembled with the wheel hub bearing.



22

Tighten the hub. Use a drive socket #30. Use a torque wrench. Tighten it to 220 Nm torque.



Replacement: brake discs – RENAULT MEGANE II Estate (KM0/1_). Tip:

- The wheel bearing unit must not tilt on the axle pin.

23

Install the cap of the hub nut. Use a rubber mallet.



AUTODOC recommends:

- The cap must always be replaced. When you install the previously used cap the sealing will be lost.


24

Press in the brake caliper piston. Use brake caliper wind back tool.



25


Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.

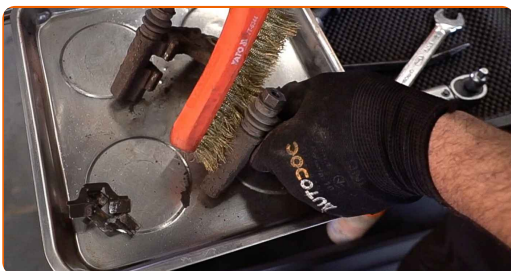


AUTODOC recommends:

- Replacement: brake discs – RENAULT MEGANE II Estate (KM0/1_). After applying the spray, wait a few minutes.

26 Install the brake caliper bracket.

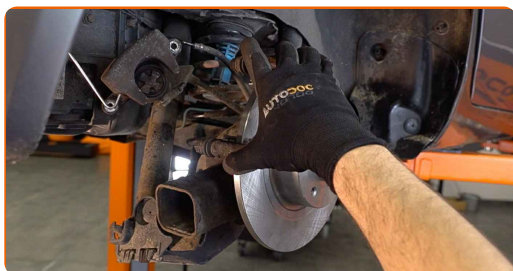

27 Tighten the brake caliper bracket. Use a drive socket #E16. Use a torque wrench. Tighten it to 105 Nm torque.

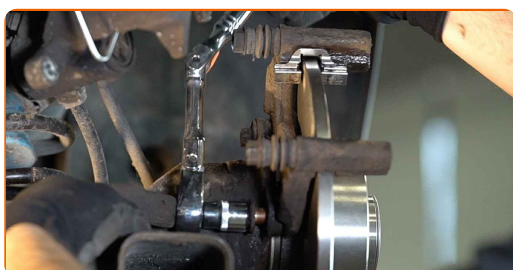


28 Clean the brake disk surface. Use a brake cleaner.




Replacement: brake discs – RENAULT MEGANE II Estate (KM0/1_). AUTODOC recommends:

- After applying the spray, wait a few minutes.


29 Install the brake pads.

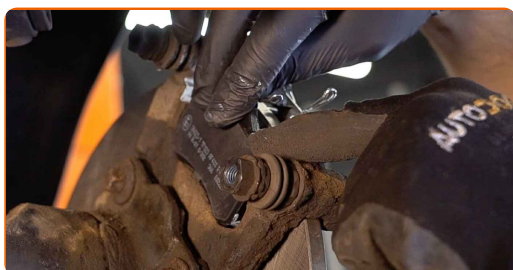

- 30** Install the brake caliper and fix it. Use a combination spanner #15. Use a drive socket #13. Use a torque wrench. Tighten it to 35 Nm torque.

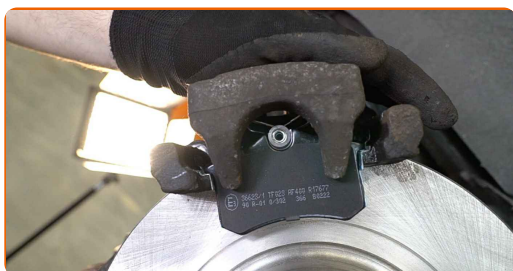

- 31** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

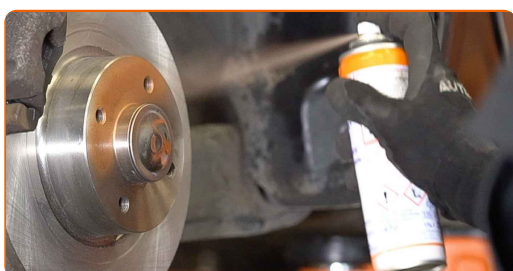

- 32** Clean the brake disk surface. Use a brake cleaner.

AUTODOC recommends:

- Replacement: brake discs – RENAULT MEGANE II Estate (KM0/1_). After applying the spray, wait a few minutes.

- 33** Install the wheel.



Replacement: brake discs – RENAULT MEGANE II Estate (KM0/1_). AUTODOC experts recommend:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.


34

Screw in the wheel bolts. Use wheel impact socket #19.



35

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 110 Nm torque.

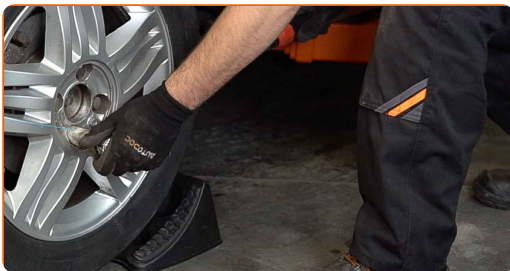

AUTODOC recommends:

- Important! Replacement: brake discs – RENAULT MEGANE II Estate (KM0/1_). Check the brake fluid level in the reservoir and top up if necessary.

36


Tighten the brake fluid reservoir cap. Close the hood.

Replacement: brake discs – RENAULT MEGANE II Estate (KM0/1_).
Professionals recommend:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.

37

Remove the jacks and chocks.

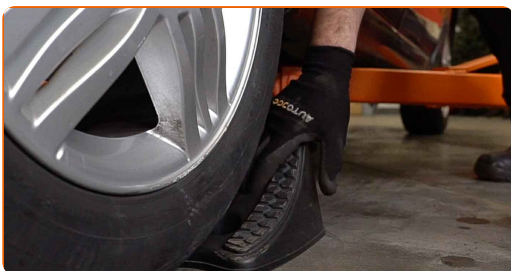

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE DISCS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.