



How to change front anti
roll bar links on **Renault
Scenic 2** – replacement
guide

VIDEO TUTORIAL



i Important!

This replacement procedure can be used for:

RENAULT Megane II Sport Tourer (KM) 1.9 dCi, RENAULT Kangoo II Express (FW) Z.E., RENAULT Kangoo II Be Bop (KW) 1.5 dCi, RENAULT Megane II Saloon (LM) 1.6 Hi-Flex, RENAULT Kangoo II Express (FW) 1.5 dCi 75, RENAULT Kangoo II Express (FW) 1.5 dCi 110, RENAULT Scénic II (JM) 1.6 Hi-Flex, RENAULT Kangoo II / Grand Kangoo (KW) 1.5 dCi 110, RENAULT Megane II Hatchback (BM, CM) 1.4 16V, RENAULT Megane II Hatchback (BM, CM) 1.6 16V, RENAULT Megane II Hatchback (BM, CM) 2.0 16V, RENAULT Megane II Hatchback (BM, CM) 1.5 dCi, RENAULT Megane II Hatchback (BM, CM) 1.9 dCi, RENAULT Scénic II (JM) 2.0, RENAULT Scénic II (JM) 1.5 dCi, (+ 84)

The steps may slightly vary depending on the car design.

REPLACEMENT: ANTI ROLL BAR LINKS – RENAULT SCENIC 2. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Copper grease
- Combination spanner #17
- Drive socket # 17
- HEX bit No.H6
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench


BUY TOOLS

AUTODOC recommends:

- Replace the stabiliser links on Renault Scenic 2 in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- All work should be done with the engine stopped.

REPLACEMENT: ANTI ROLL BAR LINKS – RENAULT SCENIC 2. USE THE FOLLOWING PROCEDURE:

1 Secure the wheels with chocks.

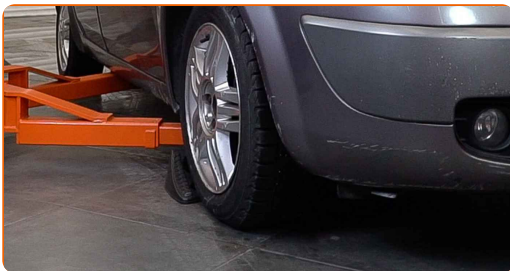

2 Loosen the wheel mounting bolts. Use wheel impact socket #19.



3 Raise the front of the car and secure on supports.



4

Unscrew the wheel bolts.




AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. Renault Scenic 2

5

Remove the wheel.

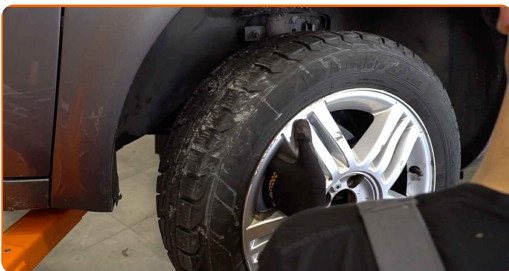


6

Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

7

Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #17. Use HEX No.H6. Use a ratchet wrench.

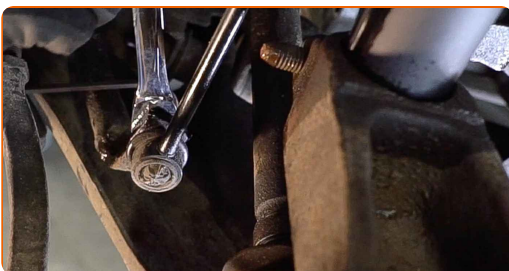

8

Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17.



9

Remove the stabilizer rod.



Replacement: anti roll bar links – Renault Scenic 2. Tip from AUTODOC experts:

- Examine stabiliser bushes. Replace them if needed.


10

Install a new rod, tighten the fasteners.



11

Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #17. Use HEX No.H6. Use a drive socket #17. Use a torque wrench. Tighten it to 44 Nm torque.

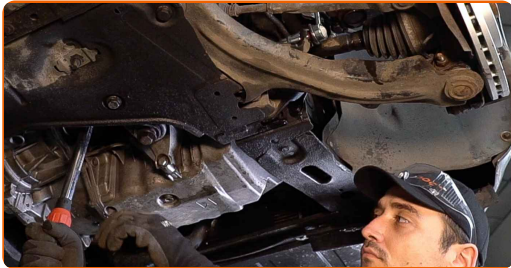

12

Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a torque wrench. Tighten it to 44 Nm torque.




13

Treat all joints of the stabiliser link. Use copper grease.



14

Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.

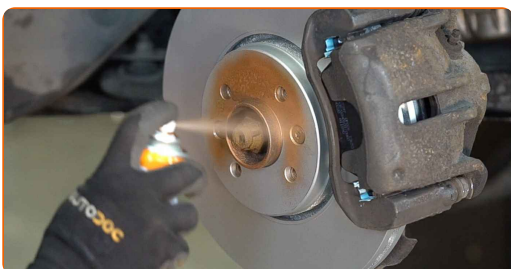

15

Install the wheel.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Renault Scenic 2


16

Screw in the wheel bolts. Use wheel impact socket #19.

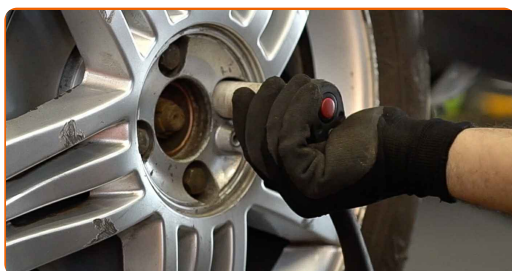


17

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 110 nm torque.

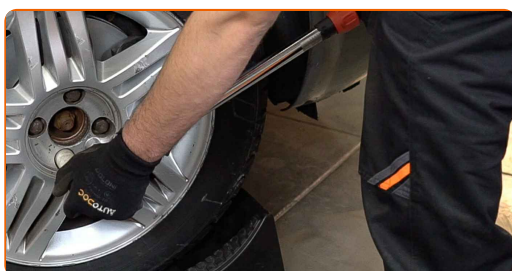

18

Remove the jacks and chocks.

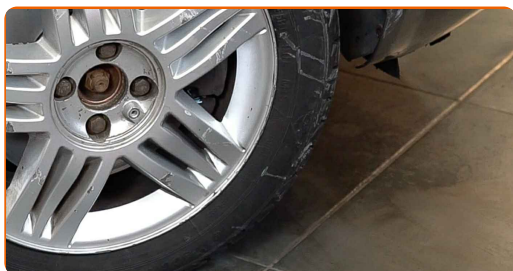

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

AUTODOC+

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR RENAULT

ANTI ROLL BAR LINKS: A WIDE SELECTION

CHOOSE CAR PARTS FOR RENAULT SCENIC 2

ANTI ROLL BAR LINKS FOR RENAULT: BUY NOW

**ANTI ROLL BAR LINKS FOR RENAULT SCENIC 2: THE BEST
DEALS & OFFERS**

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.