



How to change front
suspension strut on **SEAT**
Cordoba Saloon (6K1,
6K2) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

SEAT Cordoba Saloon (6K1, 6K2) 1.4 i, SEAT Cordoba Saloon (6K1, 6K2) 1.6 i, SEAT Cordoba Saloon (6K1, 6K2) 1.8 i, SEAT Cordoba Saloon (6K1, 6K2) 1.9 D, SEAT Cordoba Saloon (6K1, 6K2) 1.9 TD, SEAT Cordoba Saloon (6K1, 6K2) 1.8 i 16V, SEAT Cordoba Saloon (6K1, 6K2) 1.4 i 16V, SEAT Cordoba Saloon (6K1, 6K2) 1.0 i, SEAT Cordoba Saloon (6K1, 6K2) 1.3, SEAT Cordoba Saloon (6K1, 6K2) 1.4, SEAT Cordoba Saloon (6K1, 6K2) 1.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW GOLF III (1H1) 1.9 D

REPLACEMENT: SUSPENSION STRUT – SEAT CORDOBA SALOON (6K1, 6K2). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Combination spanner #18
- Combination spanner #21
- Drive socket # 10
- 14.5-mm strut nut socket
- Drive socket # 18
- Drive socket # 21
- HEX bit No.H6.
- Wheel impact socket #17
- Ratchet wrench
- Tap wrench
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

Buy tools

Replacement: suspension strut – SEAT Cordoba Saloon (6K1, 6K2). AUTODOC recommends:

- Both shock struts of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right shock struts of the front suspension.
- All work should be done with the engine stopped.

REPLACEMENT: SUSPENSION STRUT – SEAT CORDOBA SALOON (6K1, 6K2). USE THE FOLLOWING PROCEDURE:


1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.



4 Loosen the upper fastener of the shock strut mount. Use HEX No.H6. Use a drive socket #21. Use a ratchet wrench.

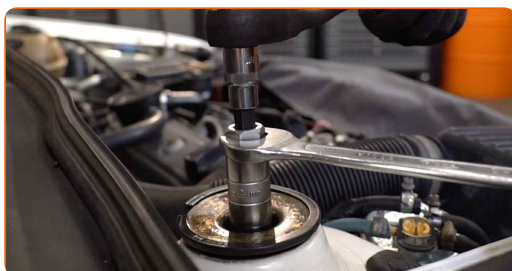

5 Secure the wheels with chocks.



6 Loosen the wheel mounting bolts. Use wheel impact socket #17.



7 Raise the front of the car and secure on supports.

8 Unscrew the wheel bolts.




Replacement: suspension strut – SEAT Cordoba Saloon (6K1, 6K2). Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.


9 Remove the wheel.




10 Clean the fastener of the bracket that connects the brake hose to the shock strut. Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.

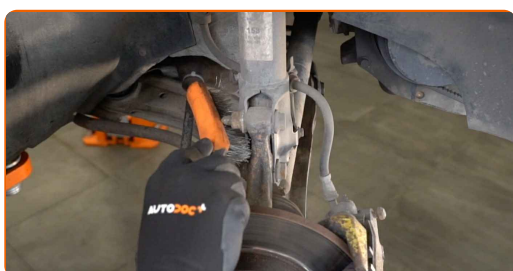

11 Unscrew the brake hose fastening bracket from the shock strut. Use a drive socket #10. Use a ratchet wrench.

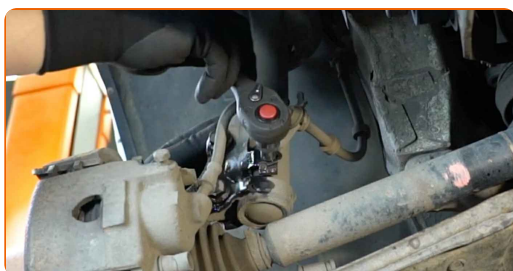

12 Disconnect the brake hose mounting bracket.

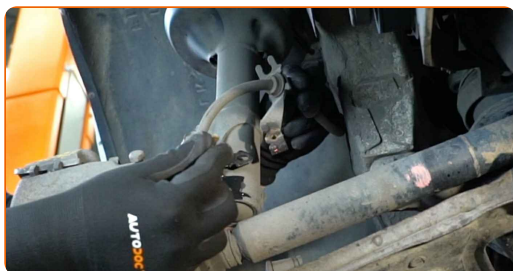

- 13** Unscrew the fasteners connecting the suspension strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.



- 14** Support the arm. Use a hydraulic transmission jack.



- 15** Remove the fastening bolts.



- 16** Disconnect the steering knuckle from the shock absorber strut.



- 17** Unscrew the top fastening of the shock strut mount.




AUTODOC recommends:

- SEAT Cordoba Saloon (6K1, 6K2) – To avoid injury, hold the suspension strut while unscrewing the fastening bolts.

18

Remove the suspension strut.

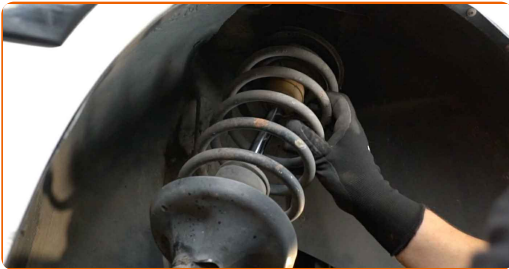

19

Set the shock absorber strut on the spring compressor tool.



Replacement: suspension strut – SEAT Cordoba Saloon (6K1, 6K2). Tip from AUTODOC experts:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

20 Treat the shock strut rod. Use a wire brush. Use WD-40 spray.




21 Compress the spring.




22 Remove the strut piston rod nut. Use a combination spanner #21. Use a 14.5-mm strut nut socket. Use a ratchet wrench.



23 Remove the top strut mount.

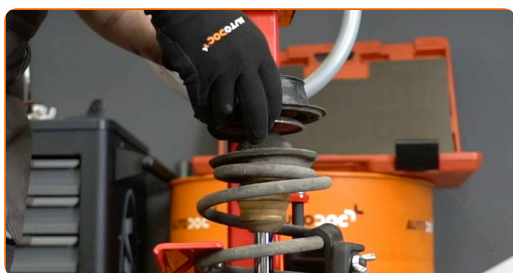


24 Release the coil spring.

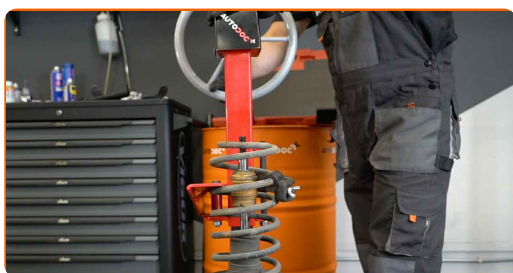


25

Remove the spring.

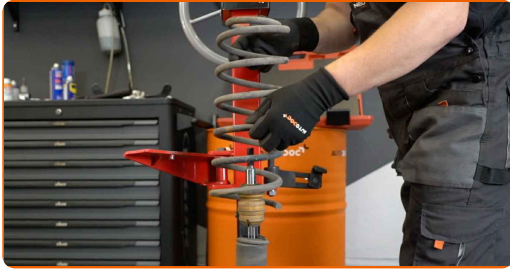

26

Remove the shock absorber dust cap and the bump stop.

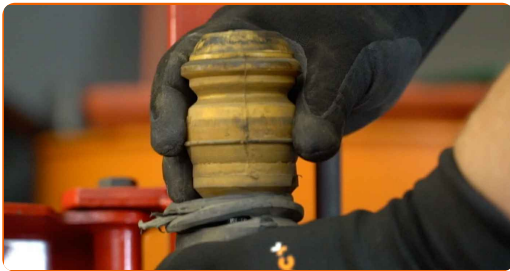


AUTODOC recommends:

- Replacement: suspension strut – SEAT Cordoba Saloon (6K1, 6K2). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

27

Remove the old shock absorber from the hydraulic coil spring compressor.

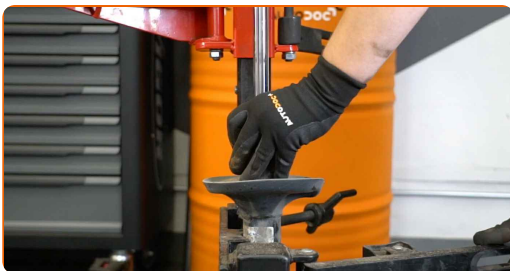

Replacement: suspension strut – SEAT Cordoba Saloon (6K1, 6K2). AUTODOC experts recommend:

- Before installing a new shock absorber you should pump it manually 3-5 times.

28 Install the new shock absorber on the hydraulic coil spring compressor.



29 Install the dust sleeve and the bump stop on the new shock absorber.



30 Install the spring on the shock absorber.



31 Compress the spring.



32 Install the upper strut mount and the strut mount bearing.




- 33** Tighten the shock strut piston rod nut. Use a combination spanner #21. Use a 14.5-mm strut nut socket. Use a torque wrench. Tighten it to 60 Nm torque.



AUTODOC recommends:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.


- 34** Decompress the spring.

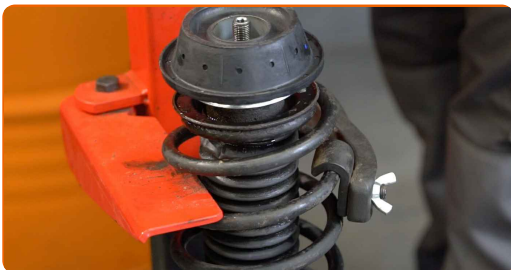

- 35** Treat the shock strut rod. Use copper grease.



- 36** Remove the assembled shock strut.

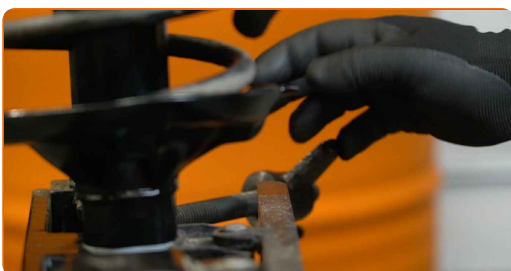

37 Clean the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.



38 Install the shock strut into the wheel arch.



39 Screw the top fastening of the shock strut mount. Do not tighten it.




Replacement: suspension strut – SEAT Cordoba Saloon (6K1, 6K2). AUTODOC experts recommend:

- To avoid injuries, hold the shock strut when screwing the fastening bolts in.

40 Clean the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.

41 Fix the shock absorber strut on the steering knuckle.

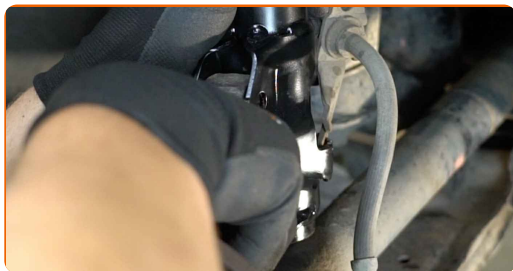

42 Install the fastening bolts.



43 Screw in the fasteners connecting the suspension strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #18. Use a tap wrench.




44 Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 95 Nm torque.



45

Remove the support from under the arm.

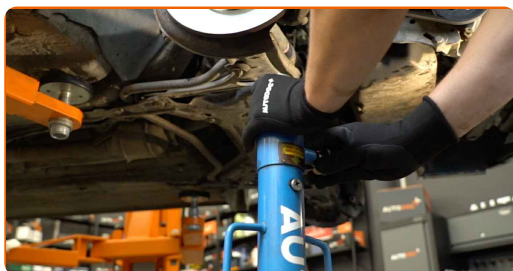


AUTODOC recommends:

- Replacement: suspension strut – SEAT Cordoba Saloon (6K1, 6K2). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


46

Clean the brake hose mounting seat. Use a wire brush. Use WD-40 spray.

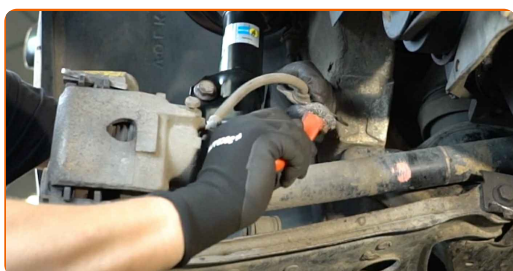

47

Secure the brake hose fastening bracket.

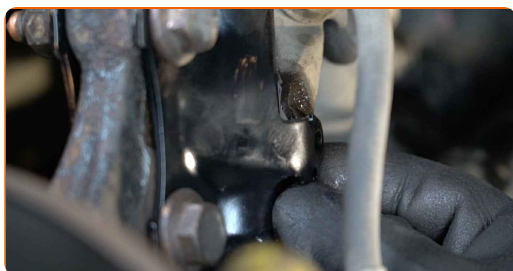

- 48 Tighten the brake hose fastening bracket to the shock strut. Use a drive socket #10. Use a torque wrench. Tighten it to 13 Nm torque.



- 49 Treat the shock strut fasteners. Use copper grease.



- 50 Clean the wheel rim mounting seat. Use a wire brush.



- 51 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



52

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: suspension strut – SEAT Cordoba Saloon (6K1, 6K2). After applying the spray, wait a few minutes.

53

Install the wheel.




Replacement: suspension strut – SEAT Cordoba Saloon (6K1, 6K2). AUTODOC recommends:


- To avoid injury, hold up the wheel when screwing in the fastening bolts.

54

Screw in the wheel bolts. Use wheel impact socket #17.

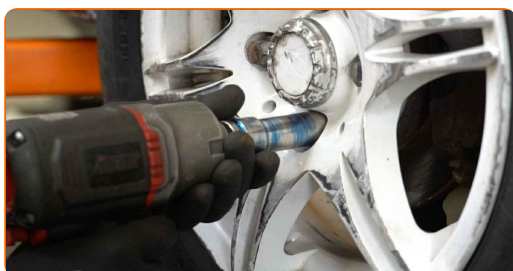

- 55** Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 110 nm torque.

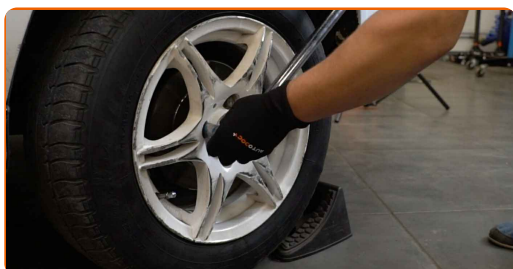

- 56** Remove the jacks and chocks.



- 57** Tighten the upper fastener of the shock absorber strut mount. Use HEX No.H6. Use a drive socket #21. Use a torque wrench. Tighten it to 60 nm torque.



- 58** Treat the upper fastener of the suspension strut mount. Use copper grease.



- 59** Remove the fender protection cover.

60

Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SHOCK ABSORBERS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.