



How to change front
brake caliper on **VW**
Touran 1T3 –
replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

VW Passat Saloon (362) 1.4 TSI, VW Passat Saloon (362) 1.8 TSI, VW Passat Saloon (362) 2.0 TSI, VW Passat Saloon (362) 1.6 TDI, VW Passat Saloon (362) 2.0 TDI, VW Passat Saloon (362) 2.0 TDI 4motion, VW Passat Saloon (362) 1.4 TSI EcoFuel, VW Passat Variant (365) 1.4 TSI, VW Passat Variant (365) 1.8 TSI, VW Passat Variant (365) 1.6 TDI, VW Passat Variant (365) 2.0 TSI, VW Passat Variant (365) 2.0 TDI, VW Passat Variant (365) 2.0 TDI 4motion, VW Passat Variant (365) 1.4 TSI EcoFuel, VW TOURAN (1T3) 1.2 TSI, (+ 241)

The steps may slightly vary depending on the car design.

**REPLACEMENT: BRAKE CALIPER – VW TOURAN 1T3.
LIST OF THE TOOLS YOU'LL NEED:**



- Torque wrench
- Wire brush
- HEX bit No.H7
- Drive socket # 11
- Ratchet wrench
- Brake cleaner
- Copper grease
- Flat screwdriver
- Fluid container
- Anti-squeal paste
- Wheel impact socket #17
- Wheel chock
- Brake hose clip
- Crow bar


BUY TOOLS

Replacement: brake caliper – VW Touran 1T3. Tip from AUTODOC:

- The replacement procedure is identical for the left and right brake calipers on the same axle.
- All work should be done with the engine stopped.

**REPLACEMENT: BRAKE CALIPER – VW TOURAN 1T3.
RECOMMENDED SEQUENCE OF STEPS:**


1 Open the bonnet.

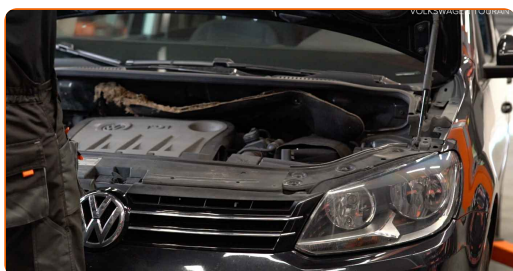

2 Unscrew the brake fluid reservoir cap.



3 Secure the wheels with chocks.

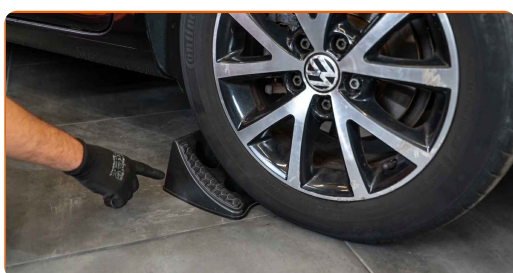


4 Loosen the wheel mounting bolts. Use wheel impact socket #17.



5 Raise the front of the car and secure on supports.



6 Unscrew the wheel bolts.

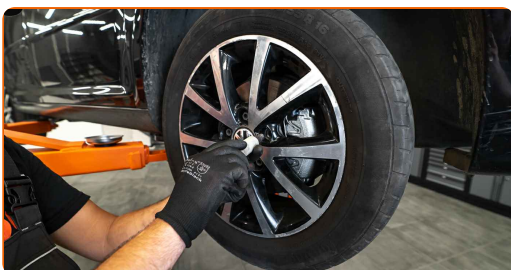

AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. VW Touran 1T3

7 Remove the wheel.



- 8** Disconnect the ABS sensor electric socket. Disconnect the brake pad wear sensor plug. Remove the ABS sensor connector. Remove the connector of the brake pad wear sensor.


Please note!

- Some cars are not equipped with the brake pad wear sensor.

- 9** Put a container for gathering brake fluid beneath.




- 10** Clean the area where the brake hose is connected to the caliper, and the guide pins area. Use a brake cleaner.

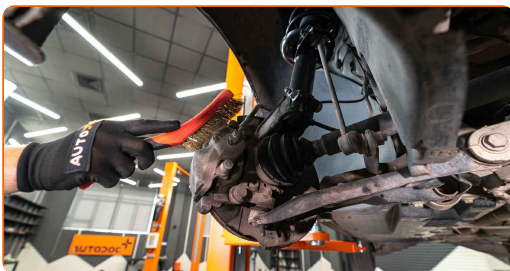


Replacement: brake caliper – VW Touran 1T3. AUTODOC recommends:

- After applying the spray, wait a few minutes.


11.1 Clamp the brake hose off using a brake hose clamp.

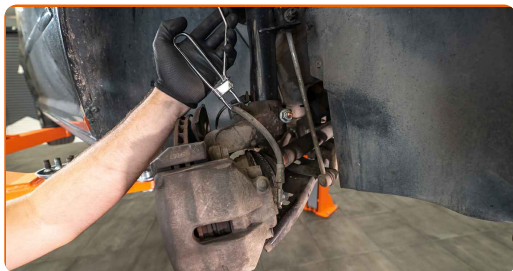


11.2 Unscrew the brake hose from the brake caliper. Use a drive socket #11. Use a ratchet wrench. Move the brake hose aside. Tie the brake hose to the car body with a hook or a piece of wire.

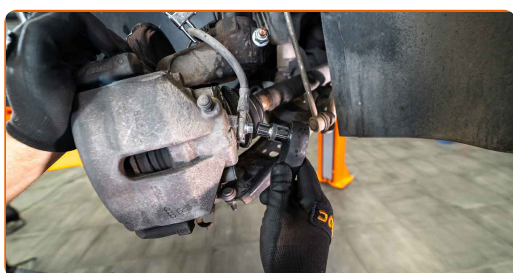


12 Remove the dust boot caps of the brake caliper guide pins.

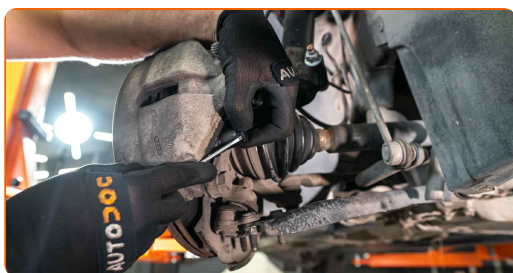


13 Spread the brake pads. Use a crowbar.

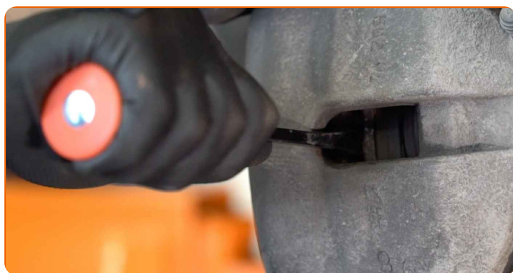


14 Using a simple screwdriver, remove the brake caliper spring clip.

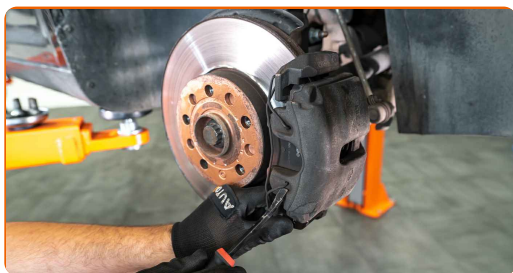

15 Unscrew the brake caliper fastening. Use HEX No.H7.

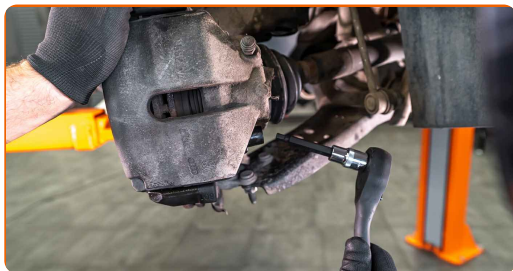

16 Remove the brake caliper.

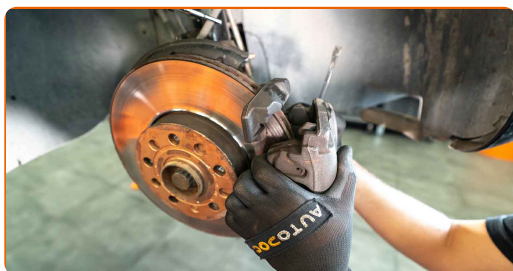


Replacement: brake caliper – VW Touran 1T3. Professionals recommend:

- When replacing the brake caliper, it is recommended to check the brake hose for damages and, if necessary, to replace it with a new one.
- If going to use the old brake pads, clean them.
- When replacing a brake caliper it is recommended to replace brake pads, check the state of the brake discs and replace them with new ones if necessary.

17

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Treat the brake caliper bracket. Use a brake cleaner.

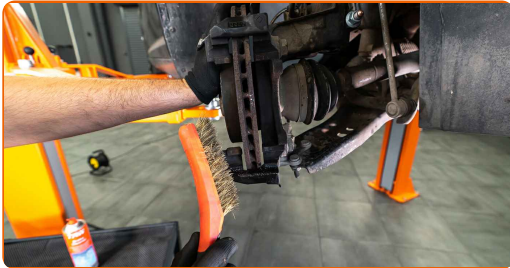

AUTODOC recommends:

- Replacement: brake caliper – VW Touran 1T3. After applying the spray, wait a few minutes.

18

Remove the guide pins from the brake caliper.

19

Clean old grease and rust stains, if there are any, from the caliper guide pins and guide pin boots. Use a brake cleaner.

Replacement: brake caliper – VW Touran 1T3. Tip:

- After applying the spray, wait a few minutes.

20


Lubricate guide pins with special brake grease.

Replacement: brake caliper – VW Touran 1T3. AUTODOC experts recommend:

- If no new guide pins were supplied in a kit with the new brake calipers, use the old pins.

21

Treat the contact surfaces between the brake pads and the brake caliper bracket. Use anti-squeal paste.

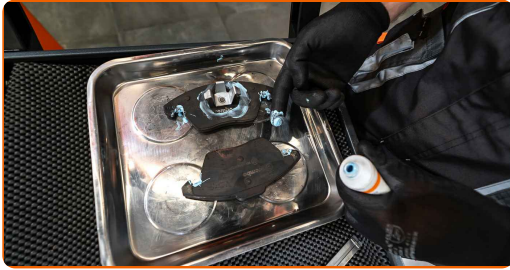

22

Install the brake caliper together with the pads.




Please note!

- Install the brake caliper starting with its lower part.

23


Screw in the guide pins.

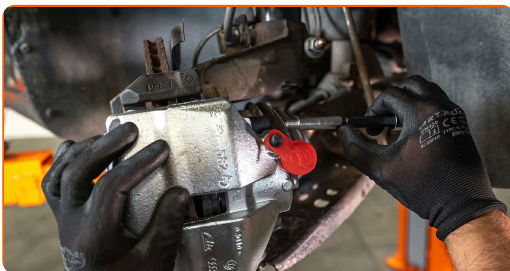


Replacement: brake caliper – VW Touran 1T3. Tip from AUTODOC:

- Hold up the brake caliper.


24 Tighten the guide pins. Use HEX No.H7. Use a torque wrench. Tighten it to 30 Nm torque.

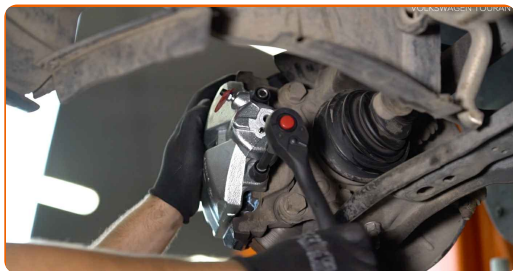


25 Install the dust boot caps of the brake caliper guide pins.

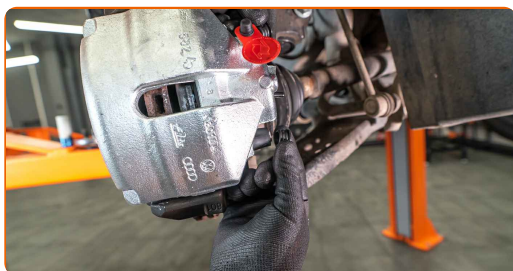

26 Install the brake caliper spring.

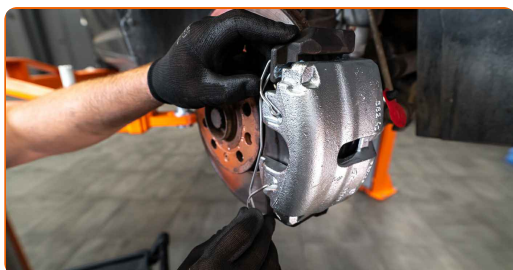


27 Clean dirt from the brake hose bolt. Use a brake cleaner.

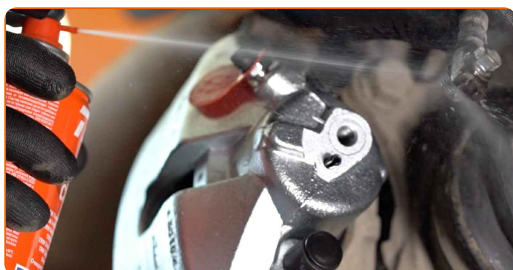


AUTODOC recommends:

- Replacement: brake caliper – VW Touran 1T3. After applying the spray, wait a few minutes.

- 28** Install and fix the brake hose into a new caliper. Use a drive socket #11. Use a torque wrench. Tighten it to 35 Nm torque.

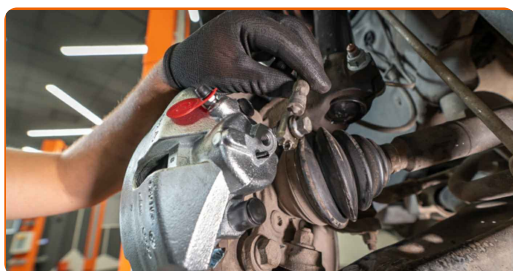

- 29** Remove the brake hose clamp.

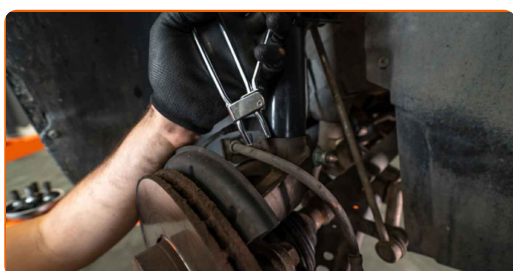


- 30** Connect the ABS sensor electric socket. Connect the brake pad wear sensor plug.

Replacement: brake caliper – VW Touran 1T3. AUTODOC recommends:

- Bleed the brake caliper system.

- 31** Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.

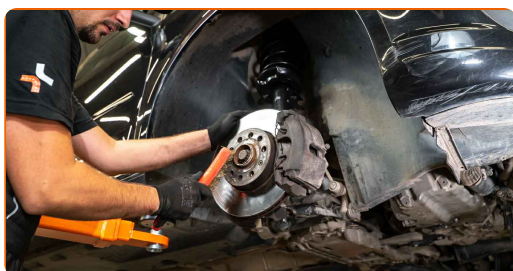


32 Install the wheel.




AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. VW Touran 1T3


33 Screw in the wheel bolts. Use wheel impact socket #17.

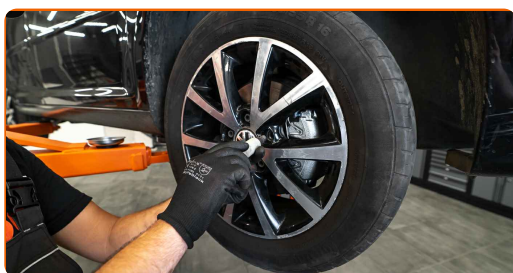

34 Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 Nm torque.

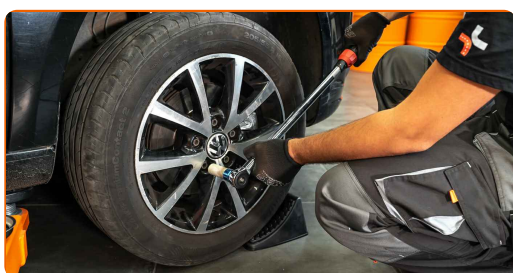

35 Remove the jacks and chocks.

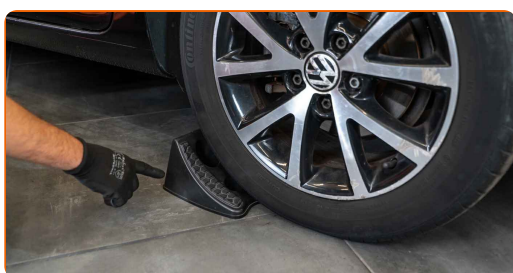

Replacement: brake caliper – VW Touran 1T3. Tip from AUTODOC experts:

- Check the brake fluid level in the expansion tank and refill if necessary.

36

Tighten the brake fluid reservoir cap. Close the hood.



WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VW

BRAKE CALIPER: A WIDE SELECTION

CHOOSE CAR PARTS FOR VW TOURAN 1T3

BRAKE CALIPER FOR VW: BUY NOW

BRAKE CALIPER FOR VW TOURAN 1T3: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.