



How to change the cabin filter on the **Ford Transit Mk7 van** – replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

FORD TRANSIT Bus 2.2 TDCi, FORD TRANSIT Bus 2.2 TDCi RWD, FORD TRANSIT MK-7 Box 2.2 TDCi, FORD TRANSIT MK-7 Box 2.2 TDCi RWD, FORD TRANSIT MK-7 Box 2.2 TDCi 4x4, FORD TRANSIT MK-7 Platform/Chassis 2.2 TDCi, FORD TRANSIT MK-7 Platform/Chassis 2.2 TDCi RWD, FORD TRANSIT MK-7 Platform/Chassis 2.2 TDCi 4x4, FORD TRANSIT TOURNEO 2.2 TDCi, FORD TRANSIT Bus 2.4 TDCi, FORD TRANSIT MK-7 Box 2.4 TDCi RWD, FORD TRANSIT MK-7 Box 2.3 16V RWD, FORD TRANSIT MK-7 Platform/Chassis 2.3 16V RWD, FORD TRANSIT MK-7 Platform/Chassis 2.4 TDCi RWD, FORD TRANSIT Bus 2.4 TDCi 4x4, (+ 10)

The steps may slightly vary depending on the car design.

REPLACEMENT: POLLEN FILTER – FORD TRANSIT MK7
VAN. TOOLS YOU NEED:



• Microfibre towel

• Fender cover

BUY TOOLS


Replacement: pollen filter – Ford Transit Mk7 van. AUTODOC recommends:

- Replace the cabin filter at least once every six months, once in early spring and once in autumn.
- Follow the service intervals, recommendations, and requirements for using the part provided by the manufacturer.
- If the air flow into the cabin has sharply decreased or you use the car in a high dust or pollen area, replace the filter earlier than specified.
- All the work should be carried out with the ignition switched off.

REPLACEMENT: POLLEN FILTER – FORD TRANSIT MK7 VAN. RECOMMENDED SEQUENCE OF STEPS:


1

Open the bonnet.

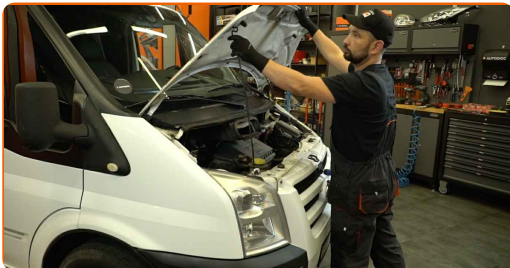

2

Use a fender protection cover to avoid damaging the paintwork and plastic parts of the car.

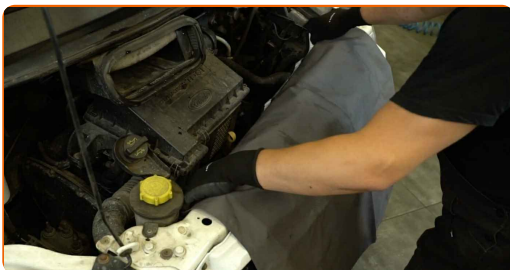

3 Pull out the old cabin filter.




4 Close off the air duct using a clean towel and clean the inside of the cabin filter housing. Use a microfibre towel.



5 Remove the rubber strip.



6 Install a new filter into the housing. Check the markings on the edge of the filter to make sure you are installing it the correct side up.

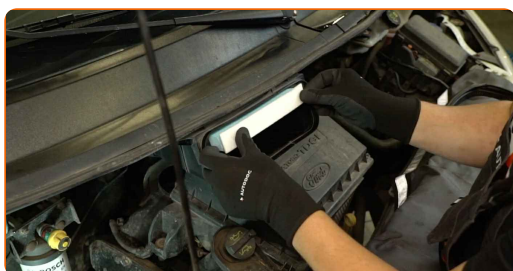


Replacement: pollen filter – Ford Transit Mk7 van. Professionals recommend:

- During installation, make sure to prevent dust and dirt from getting into the air filter housing.
- Make sure to only use quality filters.

7 Install the rubber strip.



8 Remove the fender cover.

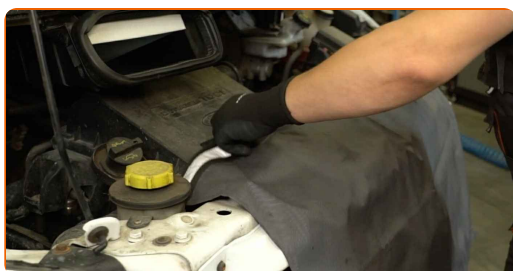

9 Close the bonnet.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR FORD

POLLEN FILTER: A WIDE SELECTION

CHOOSE CAR PARTS FOR FORD TRANSIT MK7 VAN

POLLEN FILTER FOR FORD: BUY NOW

POLLEN FILTER FOR FORD TRANSIT MK7 VAN: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2024 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.