


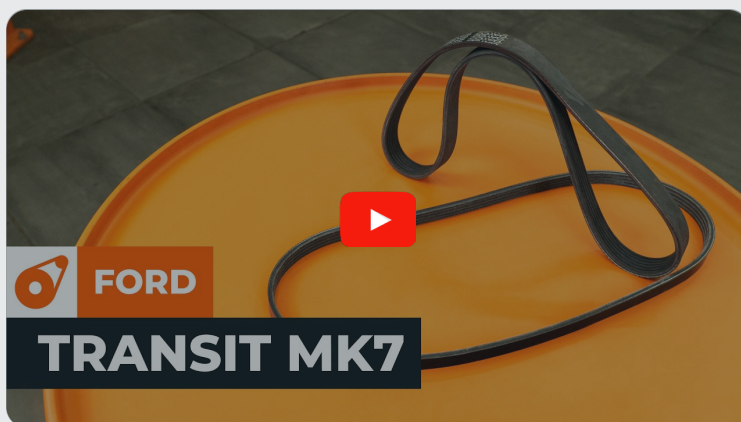

How to change the
serpentine belt on the
Ford Transit Mk7 van –
replacement guide

VIDEO TUTORIAL


** Important!**

This replacement procedure can be used for:

FORD TRANSIT Bus 2.2 TDCi, FORD TRANSIT MK-7 Box 2.2 TDCi, FORD TRANSIT MK-7 Platform/Chassis 2.2 TDCi, FORD TRANSIT TOURNEO 2.2 TDCi, FORD Tourneo Custom V362 Minibus (F3) 2.2 TDCi, FORD Transit Custom V362 Minibus (F3) 2.2 TDCi, FORD Transit Custom V362 Van (FY, FZ) 2.2 TDCi, FORD Transit V363 Van (FCD, FDD) 2.2 TDCi, FORD Transit V363 Platform / Chassis (FED, FFD) 2.2 TDCi, FORD Transit V363 Minibus (FAD, FBD) 2.2 TDCi, FORD TRANSIT TOURNEO 2.2

The steps may slightly vary depending on the car design.

REPLACEMENT: SERPENTINE BELT – FORD TRANSIT
MK7 VAN. LIST OF THE TOOLS YOU'LL NEED:

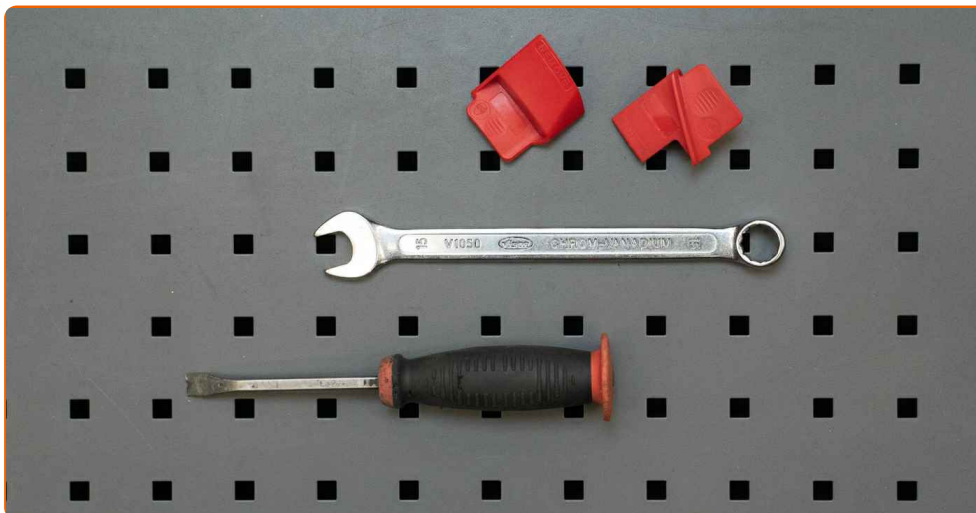

- 15 mm combination spanner
- Mounting lever
- Stretch belt removal/fitting tool

BUY TOOLS


Replacement: serpentine belt – Ford Transit Mk7 van. AUTODOC experts recommend:

- All the work should be carried out with the ignition switched off.

REPLACEMENT: SERPENTINE BELT – FORD TRANSIT MK7 VAN. TAKE THE FOLLOWING STEPS:

1

Lift the vehicle using a vehicle lift or place it over an inspection pit.

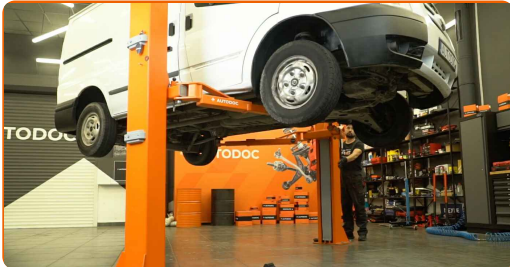

2

Remove the V-ribbed belt of the power steering pump by turning the crankshaft pulley. Use a stretch belt removal/fitting tool. Use a mounting lever. Use a 15 mm combination spanner.




3

Remove the alternator V-ribbed belt by turning the crankshaft pulley. Use a stretch belt removal/fitting tool. Use a mounting lever. Use a 15 mm combination spanner.



4

Check the condition of the alternator and power steering pump pulleys. Replace if necessary.

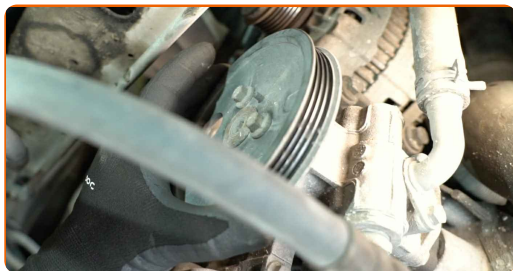

5

Fit a new alternator V-ribbed belt by turning the crankshaft pulley. Use a stretch belt removal/fitting tool. Use a 15 mm combination spanner.




Replacement: serpentine belt – Ford Transit Mk7 van. Tip:

- Be careful not to damage the V-ribbed belt when installing it.

6

Fit the V-ribbed belt of the power steering pump by turning the crankshaft pulley. Use a stretch belt removal/fitting tool. Use a 15 mm combination spanner.

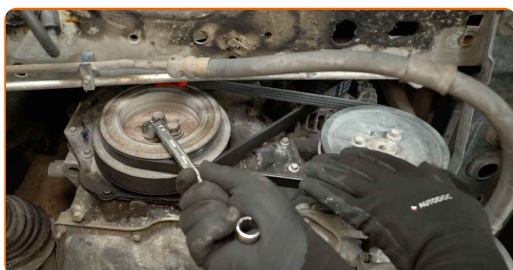

Caution!

- Be careful not to damage the V-ribbed belt when installing it.

7

Lower the vehicle.



8

Run the engine for a few minutes.



Replacement: serpentine belt – Ford Transit Mk7 van. AUTODOC recommends:

- This is necessary to ensure that the component works properly.

9

Switch off the engine.



WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR FORD

SERPENTINE BELT: A WIDE SELECTION

CHOOSE CAR PARTS FOR FORD TRANSIT MK7 VAN

SERPENTINE BELT FOR FORD: BUY NOW

SERPENTINE BELT FOR FORD TRANSIT MK7 VAN: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2024 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.