



How to change rear
shock absorbers on
Volvo V50 MW –
replacement guide

VIDEO TUTORIAL


** Important!**

This replacement procedure can be used for:

VOLVO C30 (533) 1.6 D2, VOLVO C30 (533) 2.0 D3, VOLVO C30 (533) 2.0 D4, VOLVO S40 II (MS, 544) 2.0 D3, VOLVO S40 II (MS, 544) 2.0 D4, VOLVO S40 II (MS, 544) 1.6 D2, VOLVO V50 (MW, 545) 2.0 D4, VOLVO V50 (MW, 545) 2.0 D3, VOLVO S40 II (MS, 544) 2.0 F, VOLVO S40 II (MS, 544) 2.4, VOLVO V50 (MW, 545) 2.4, VOLVO S40 II (MS, 544) 2.5 T5, VOLVO V50 (MW, 545) 2.5 T5, VOLVO S40 II (MS, 544) 2.0 D, VOLVO V50 (MW, 545) 2.0 D, (+ 30)

The steps may slightly vary depending on the car design.

**REPLACEMENT: SHOCK ABSORBERS – VOLVO V50
MW. LIST OF THE TOOLS YOU'LL NEED:**

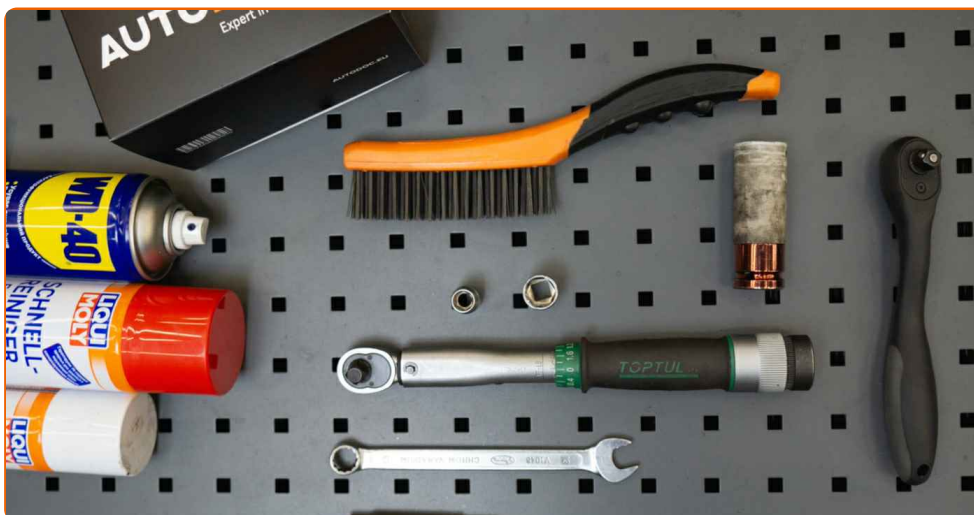

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #13
- Impact socket №10
- Impact socket №15
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Tap wrench
- Shock absorber socket №DD4
- Vice
- Hydraulic transmission jack
- Wheel chock

BUY TOOLS

Replacement: shock absorbers – Volvo V50 MW. Tip from AUTODOC experts:


- Both shock absorbers of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right shock absorbers of the rear suspension.
- All work should be done with the engine stopped.

REPLACEMENT: SHOCK ABSORBERS – VOLVO V50 MW. USE THE FOLLOWING PROCEDURE:


1 Secure the wheels with chocks.




2 Loosen the wheel mounting bolts. Use wheel impact socket #19.

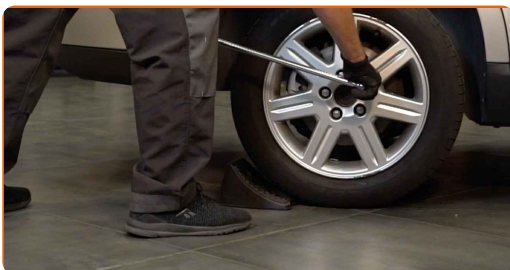

3 Raise the rear of the car and secure on supports.

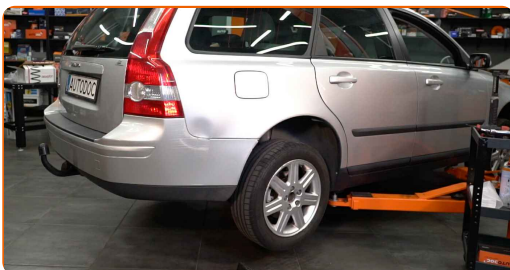


4 Unscrew the wheel bolts.

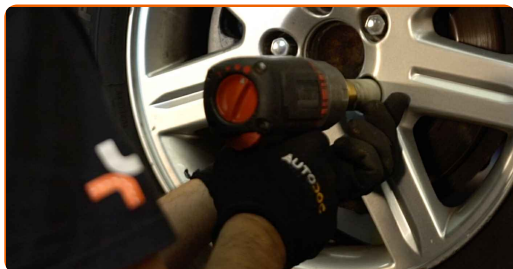

AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. Volvo V50 MW

5 Remove the wheel.

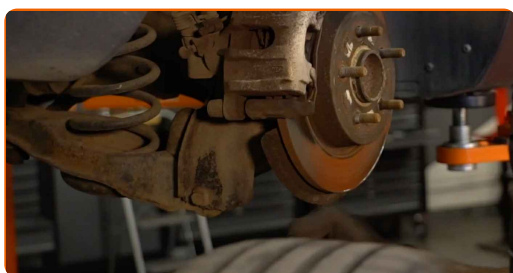

6 Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.




7 Support the arm. Use a hydraulic transmission jack.




8

Unscrew the lower fastener of the shock absorber. Use a drive socket #15. Use a tap wrench.

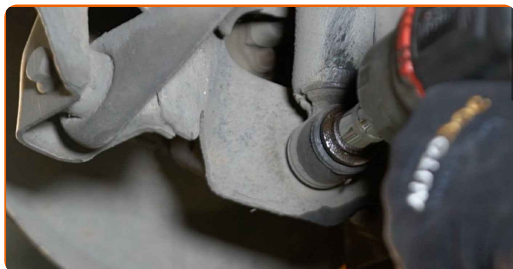

9

Remove the fastening bolt.

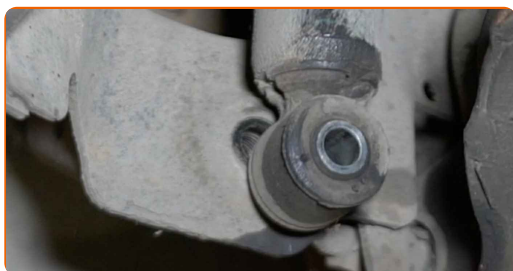


10

Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.



11

Unscrew the upper fastener of the shock absorber. Use a drive socket #10. Use a ratchet wrench.

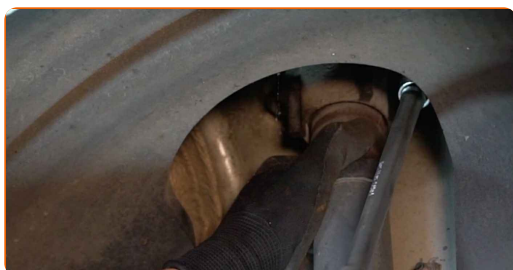

Replacement: shock absorbers – Volvo V50 MW. AUTODOC recommends:

- To avoid injuries, hold the shock absorber when undoing the fastening bolts.

12 Remove the shock absorber.



13 Grip the shock absorber in a vice.



14 Clean the shock absorber rod fastener. Use a wire brush. Use WD-40 spray.



15 Remove the shock absorber piston rod fastening. Use a combination spanner #13. Use a shock absorber socket DDN^o4. Use a ratchet wrench.



16

Remove the shock absorber mount, boot and bump stop.



Replacement: shock absorbers – Volvo V50 MW. Tip:

- Examine the shock absorber dust cap and the bump stop. Replace them if necessary.
- Before installing a new shock absorber you should pump it manually 3-5 times.

17

Install the mount, boot and bump stop onto a new shock absorber.



18

Screw the shock strut piston rod upper fastening. Use a combination spanner #13. Use a shock absorber socket DDN^o4. Use a torque wrench. Tighten it to 25 Nm torque.




19 Release the vice and take out the shock absorber.



20 Clean the shock absorber mounting seats. Use a wire brush. Use WD-40 spray.



21 Place the shock absorber in the wheel arch and secure it.

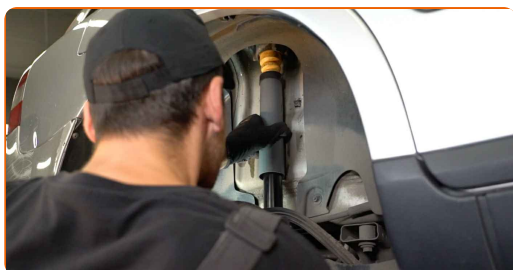


AUTODOC recommends:

- Important! Hold the shock absorber while screwing in the fastening bolts. Volvo V50 MW


22 Screw the upper fastener of the shock absorber. Use a drive socket #10.



- 23** Tighten the top shock absorber fastening. Use a drive socket #10. Use a torque wrench. Tighten it to 24 Nm torque.

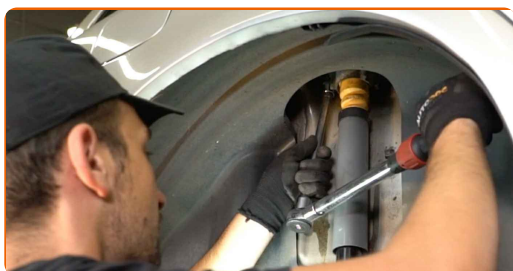


- 24** Install the fastening bolt.

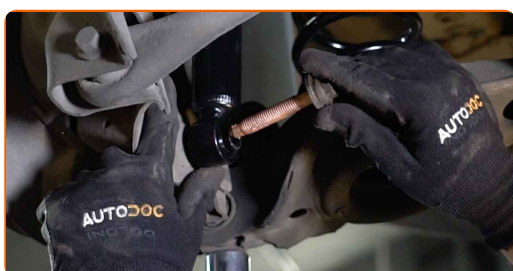


- 25** Screw in the lower fastener of the shock absorber. Use a drive socket #15.



- 26** Raise the hydraulic transmission jack by 10-15 cm.

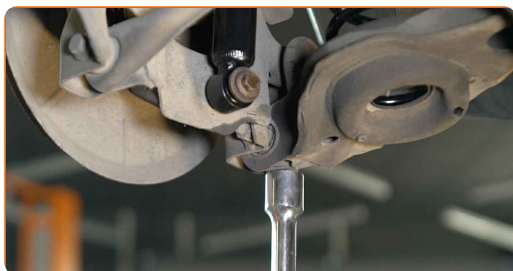


- 27** Tighten the lower fastener of the shock absorber. Use a drive socket #15. Use a torque wrench. Tighten it to 115 Nm torque.

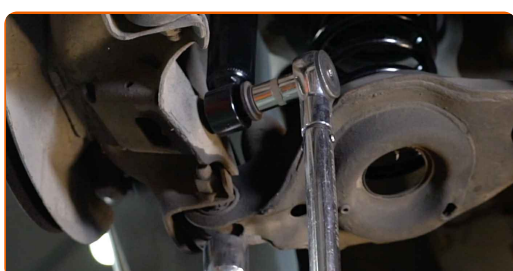

28

Remove the support from under the arm.

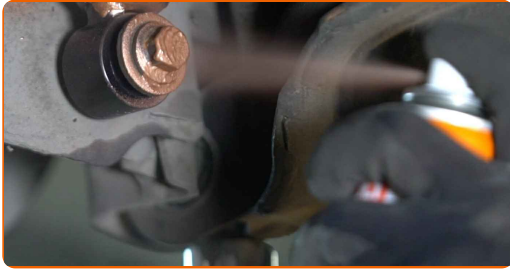


Replacement: shock absorbers – Volvo V50 MW. Tip from AUTODOC experts:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.


29

Treat the shock absorber fasteners. Use copper grease.

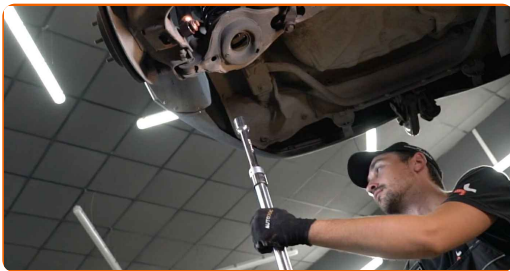

30

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

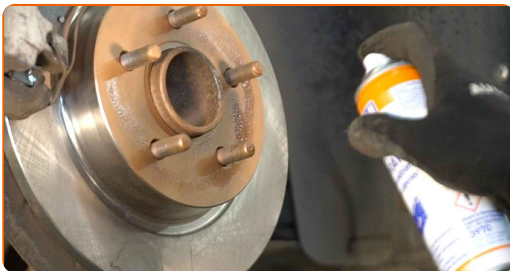

31

Clean the brake disk surface. Use a brake cleaner.




Replacement: shock absorbers – Volvo V50 MW. Tip from AUTODOC:

- After applying the spray, wait a few minutes.

32

Install the wheel.

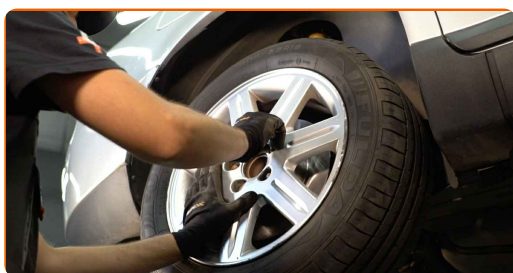


AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Volvo V50 MW

33

Screw in the wheel bolts. Use wheel impact socket #19.

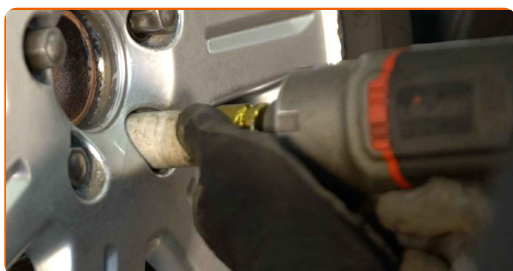


34

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 110 nm torque.

**35**

Remove the jacks and chocks.

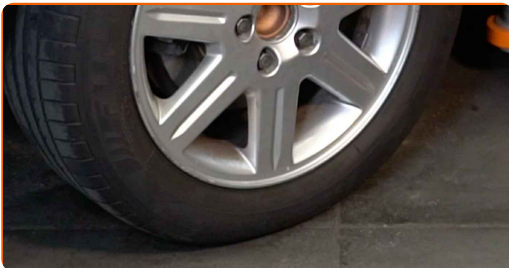

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VOLVO

SHOCK ABSORBERS: A WIDE SELECTION

CHOOSE CAR PARTS FOR VOLVO V50 MW

SHOCK ABSORBERS FOR VOLVO: BUY NOW

**SHOCK ABSORBERS FOR VOLVO V50 MW: THE BEST
DEALS & OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.