




How to change track rod
end on **VAUXHALL
COMBO TOUR Mk II (C)
(F25)** – replacement
guide

SIMILAR VIDEO TUTORIAL

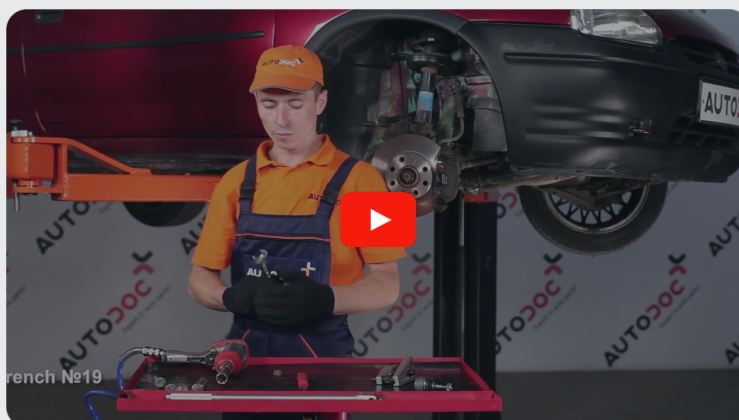

This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

VAUXHALL COMBO TOUR Mk II (C) (F25) 1.4, VAUXHALL COMBO TOUR Mk II (C) (F25) 1.6, VAUXHALL COMBO TOUR Mk II (C) (F25) 1.3 CDTI 16V, VAUXHALL COMBO TOUR Mk II (C) (F25) 1.7 DI 16V, VAUXHALL COMBO TOUR Mk II (C) (F25) 1.7 DTI 16V, VAUXHALL COMBO TOUR Mk II (C) (F25) 1.7 CDTI 16V

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Corsa B Hatchback (S93) 1.4 i (F08, F68, M68)

REPLACEMENT: TRACK ROD END – VAUXHALL COMBO TOUR MK II (C) (F25). TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #19
- Drive socket # 17
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Vernier caliper
- Ball joint puller
- Wheel chock

Buy tools

Replacement: track rod end – VAUXHALL COMBO TOUR Mk II (C) (F25).
AUTODOC recommends:

- Replace tie rod ends in pairs.
- The replacement procedure is identical for the right and left tie rod ends.
- All work should be done with the engine stopped.

REPLACEMENT: TRACK ROD END – VAUXHALL COMBO TOUR MK II (C) (F25). USE THE FOLLOWING PROCEDURE:

1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the front of the car and secure on supports.


4 Unscrew the wheel bolts.



AUTODOC recommends:


- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
VAUXHALL COMBO TOUR Mk II (C) (F25)

5 Remove the wheel.

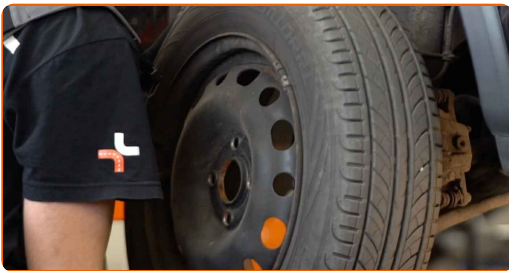


6 Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.


7 When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.

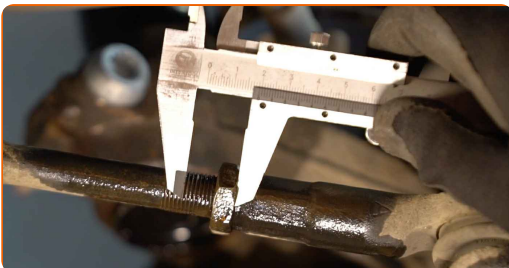


8 Unscrew the end fastening nut to the steering knuckle. Use a drive socket #17. Use a ratchet wrench.

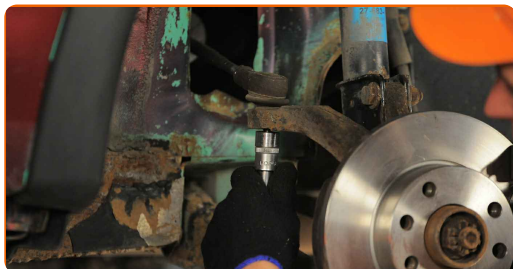


9 Disconnect the tie rod end from the steering knuckle. Use a ball joint puller.

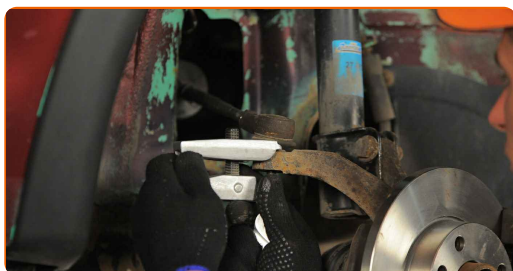

10 Loosen the lock nut securing the tie rod end to the tie rod. Use a combination spanner #19.

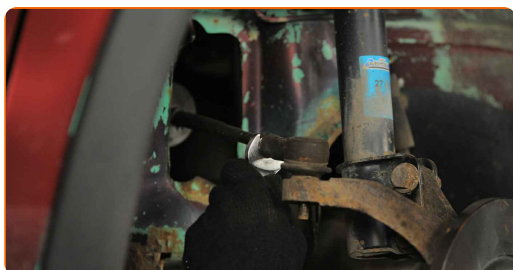

11 Screw the end out of the tie rod.

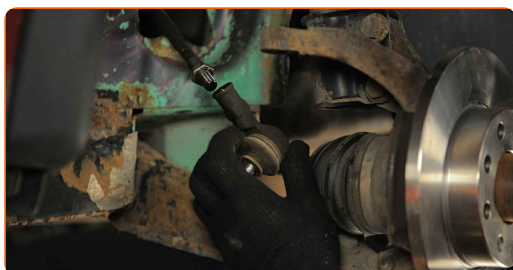

12

Clean the mounting seats of the tie rod end. Use a wire brush. Use WD-40 spray.



13

Screw on a new tie rod end.



Replacement: track rod end – VAUXHALL COMBO TOUR Mk II (C) (F25).
Professionals recommend:

- While installing the steering rod end remember to make the same number of turns or to leave the same length of thread showing as per your measurements.

14


Connect the tie rod end to the steering knuckle.




- 15** Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #17. Use a torque wrench. Tighten it to 30 nm torque.



- 16** Tighten the tie rod end locknut. Use a combination spanner #19. Use a torque wrench. Tighten it to 50 nm torque.

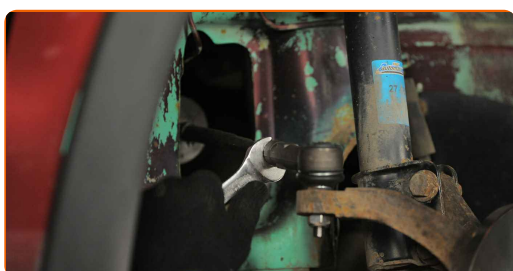

- 17** Treat the fastener connecting the tie rod end to the steering knuckle. Use copper grease.

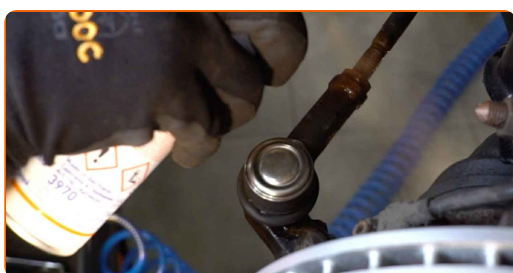

- 18** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



19

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: track rod end – VAUXHALL COMBO TOUR Mk II (C) (F25). After applying the spray, wait a few minutes.

20

Install the wheel.



Replacement: track rod end – VAUXHALL COMBO TOUR Mk II (C) (F25). Tip from AUTODOC:


- To avoid injury, hold up the wheel when screwing in the fastening bolts.

21

Screw in the wheel bolts. Use wheel impact socket #17.



- 22** Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 110 nm torque.

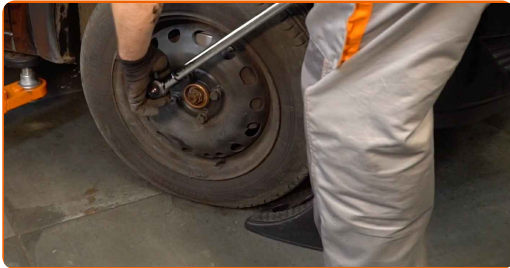

Replacement: track rod end – VAUXHALL COMBO TOUR Mk II (C) (F25).
AUTODOC experts recommend:

- Check and adjust wheel alignment if necessary.

- 23** Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

TRACK ROD END: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.