



How to change tailgate
struts on **VAUXHALL**
Corsa Mk III (D)
Hatchback (S07) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

VAUXHALL Corsa Mk III (D) Hatchback (S07) 1.6 VXR, VAUXHALL Corsa Mk III (D) Hatchback (S07) 1.3 CDTI, VAUXHALL Corsa Mk III (D) Hatchback (S07) 1.7 CDTI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Corsa C Hatchback (X01) 1.3 CDTI (F08, F68)

REPLACEMENT: TAILGATE STRUTS – VAUXHALL
CORSA MK III (D) HATCHBACK (S07). TOOLS YOU
MIGHT NEED:



• Flat Screwdriver

• Hydraulic transmission jack

Buy tools

Replacement: tailgate struts – VAUXHALL Corsa Mk III (D) Hatchback (S07).

Tip:

- Right and left gas struts of the boot lid should be replaced simultaneously.
- The replacement procedure is identical for the right and left gas struts of the boot lid.
- Warning! Shut down the engine before starting any work – VAUXHALL Corsa Mk III (D) Hatchback (S07).

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the boot lid.

2 Support the boot lid. Use a hydraulic transmission jack.




3 Release the circlip connecting the gas strut to the boot lid. Use a flat screwdriver.



4

Release the circlip connecting the gas strut to the car body. Use a flat screwdriver.

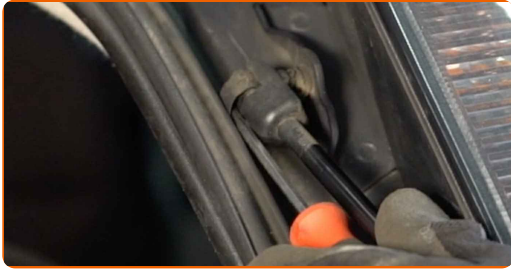


Replacement: tailgate struts – VAUXHALL Corsa Mk III (D) Hatchback (S07).
AUTODOC experts recommend:

- To avoid any injuries, be sure to hold the boot lid while demounting the gas struts.

5

Remove the boot lid gas strut.

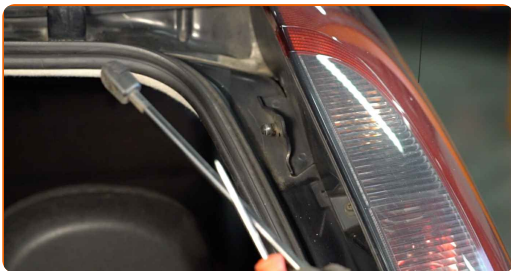


6

Clean the mounting seats of the boot strut.



7 Install the new boot lid gas strut.

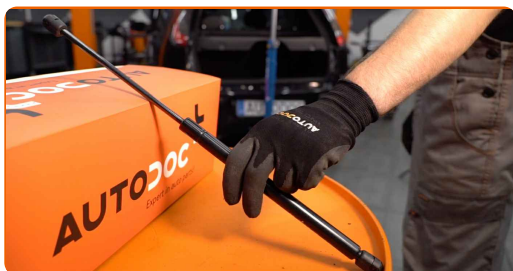

Replacement: tailgate struts – VAUXHALL Corsa Mk III (D) Hatchback (S07).
Tip from AUTODOC:

- To avoid any injuries, be sure to hold the boot lid while installing the gas strut.

8 Snap on the circlip connecting the gas strut to the boot lid.



9 Snap on the circlip connecting the gas strut to the car body.



10 Remove the hydraulic transmission jack.



AUTODOC recommends:

- VAUXHALL Corsa Mk III (D) Hatchback (S07) – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.
- Check the working condition of the boot lid gas springs after they are installed.

11

Close the lid of the luggage compartment.

WELL DONE! [VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

TAILGATE STRUTS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.