



How to change front coil
springs on **Volvo XC90 1**
– replacement guide

VIDEO TUTORIAL




i Important!

This replacement procedure can be used for:

VOLVO XC90 I (275) 2.4 D5, VOLVO XC90 I (275) 2.5 T AWD, VOLVO XC90 I (275) 2.9 T6, VOLVO XC90 I (275) 2.4 D5 AWD, VOLVO XC90 I (275) 2.5 AWD

The steps may slightly vary depending on the car design.

REPLACEMENT: COIL SPRINGS – VOLVO XC90 1. TOOLS YOU NEED:

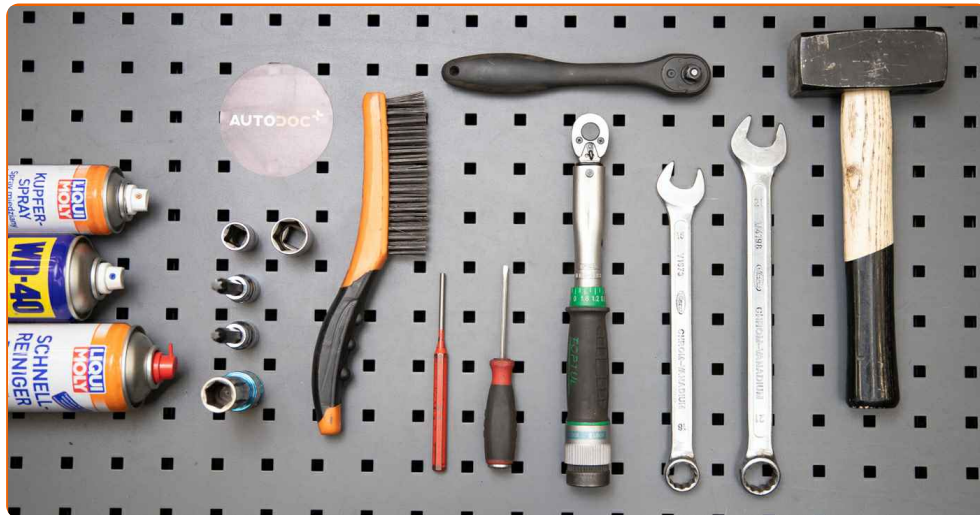

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Drive socket # 13
- Drive socket # 21
- Combination spanner #18
- Combination spanner #21
- Torx bit T40
- Torx bit T50
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Pin punch
- Hammer
- Flat Screwdriver
- Hydraulic strut spring compressor
- Fender cover
- Wheel chock

[BUY TOOLS](#)

Replacement: coil springs – Volvo XC90 1. Tip from AUTODOC:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- Please note: all work on the car – Volvo XC90 1 – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #19.

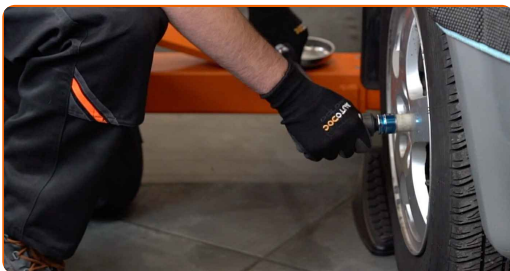

3

Raise the front of the car and secure on supports.



4

Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
Volvo XC90 1

5

Remove the wheel.



6


Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.




- 7** Unscrew the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #18. Use Torx T40. Use a ratchet wrench.




- 8** Remove the stabilizer rod.

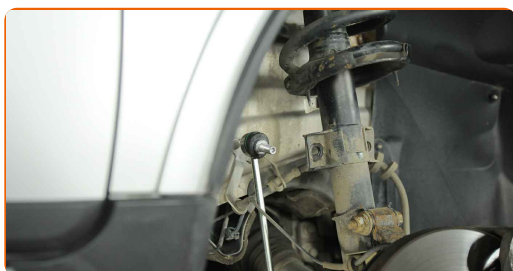


- 9** Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.

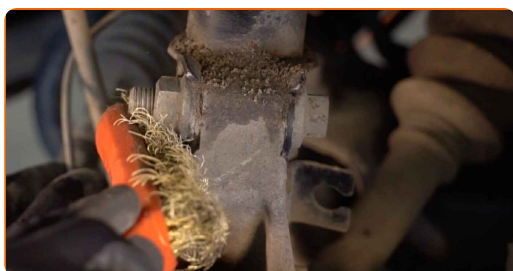


- 10** Unscrew the fasteners connecting the suspension strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #21. Use a ratchet wrench.

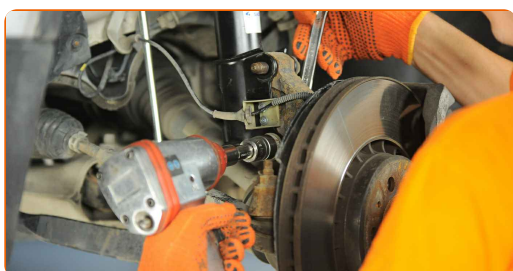


- 11** Disconnect the ABS sensor wiring. Use a flat screwdriver.

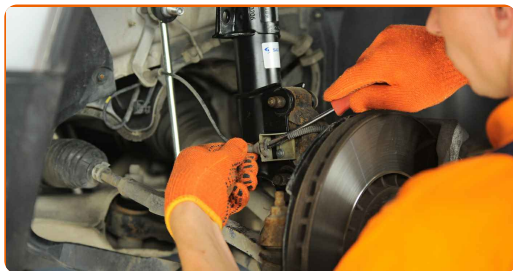

- 12** Remove the fastening bolts.

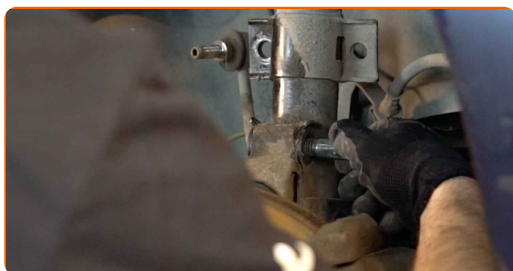


- 13** Disconnect the steering knuckle from the shock absorber strut.

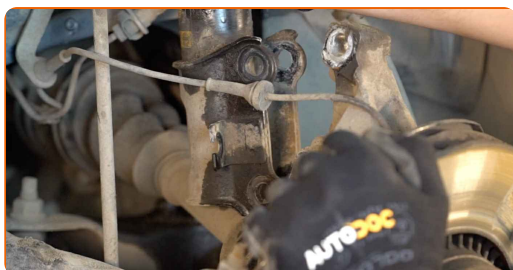

- 14** Lower the car.




- 15** Open the bonnet.

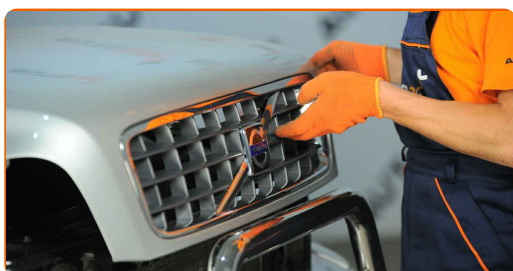


16 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

17 Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.

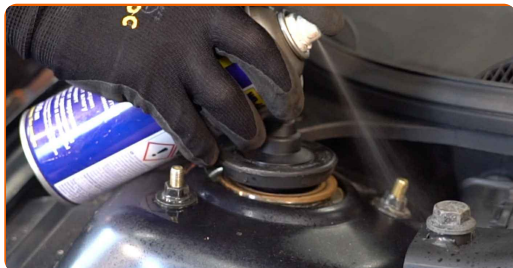


18 Unscrew the upper fasteners of the shock strut. Use a drive socket #13. Use a ratchet wrench.

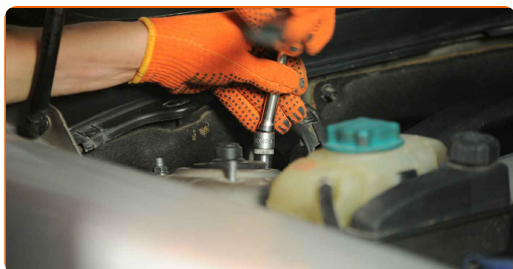

AUTODOC recommends:


- Volvo XC90 1 – To avoid injury, hold the suspension strut while unscrewing the fastening bolts.

19 Remove the suspension strut.

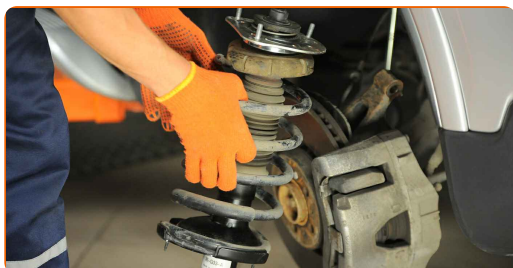

20

Set the shock absorber strut on the spring compressor tool.

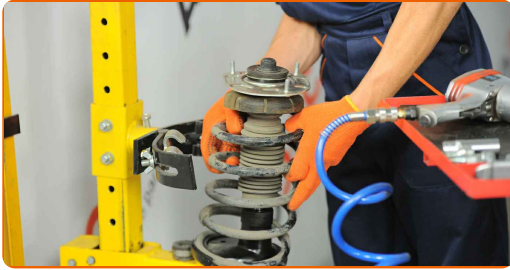


Replacement: coil springs – Volvo XC90 1. Professionals recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

21

Compress the spring.

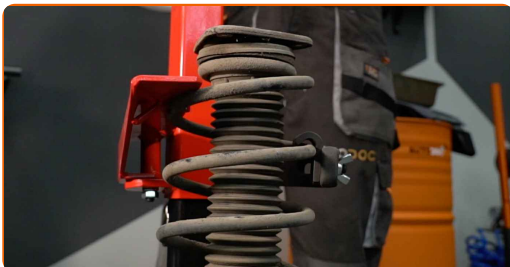

22

Remove the suspension strut mount cap. Use a flat screwdriver.



23 Treat the shock strut rod. Use a wire brush. Use WD-40 spray.

24 Unscrew the mount fasteners, while securing in place the shock absorber piston rod. Use a combination spanner #21. Use Torx T50. Use a ratchet wrench.



25 Remove the top strut mount. Use a flat screwdriver.



26 Release the coil spring.


27 Remove the spring.



AUTODOC recommends:

- Replacement: coil springs – Volvo XC90 1. Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

28 Install the spring on the shock absorber.

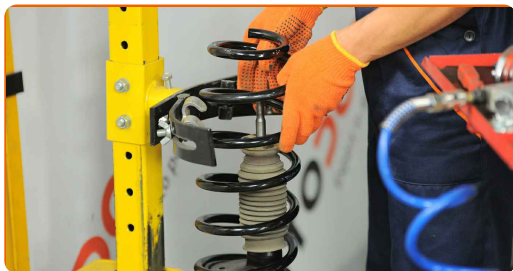

29 Compress the spring.

30 Install the upper strut mount and the strut mount bearing.

31 Tighten the shock strut piston rod nut. Use a flat screwdriver. Use a combination spanner #21. Use Torx T50. Use a torque wrench. Tighten it to 70 Nm torque.




Replacement: coil springs – Volvo XC90 1. Tip:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

32 Treat the shock strut rod. Use copper grease.

33 Install the suspension strut mount cap.

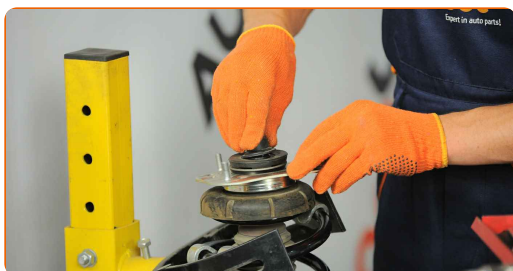


34 Decompress the spring.


35 Remove the assembled shock strut.



36 Install the shock strut into the wheel arch.

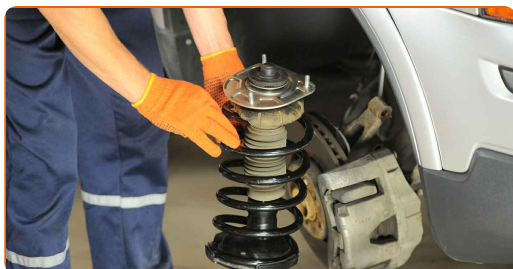


37 Secure the upper fasteners of the shock strut.

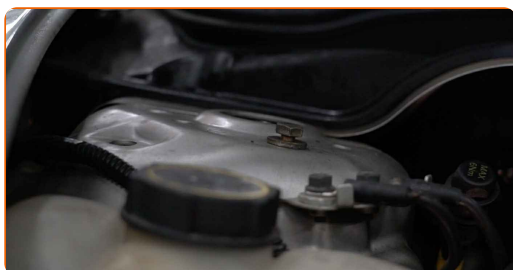

AUTODOC recommends:


- Volvo XC90 1 – To avoid injury, hold the suspension strut while screwing in the fastening bolts.

- 38** Tighten the upper fasteners of the shock strut. Use a drive socket #13. Use a torque wrench. Tighten it to 25 Nm torque.

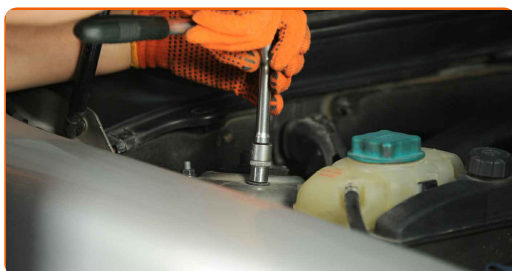

- 39** Remove the fender protection cover.


- 40** Close the hood.

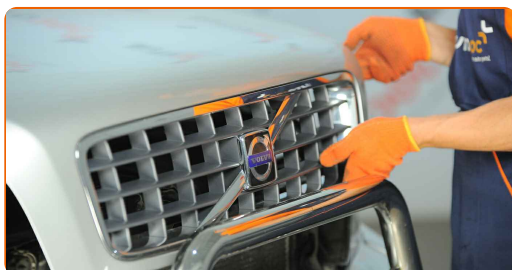

- 41** Raise the front of the car and secure on supports.




- 42** Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.

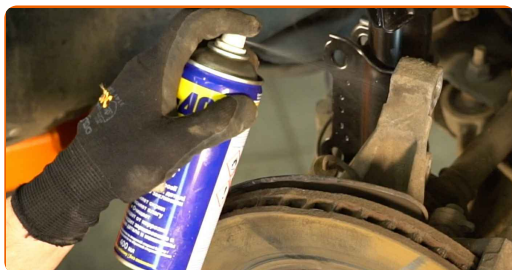


43 Fix the shock absorber strut on the steering knuckle.



44 Install the fastening bolts.

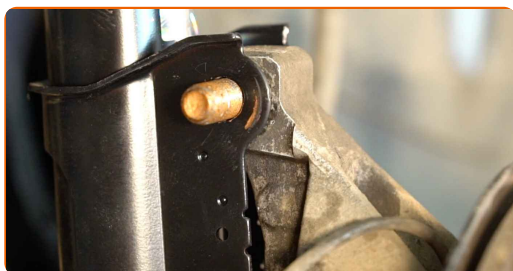


45 Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #21. Use a torque wrench. Tighten it to 105 Nm torque.+75°

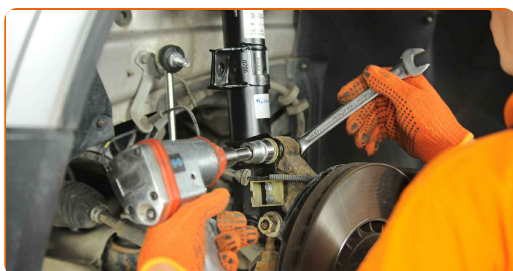

AUTODOC recommends:


- Important! Be sure to use new fasteners.

46 Connect the ABS sensor wiring.

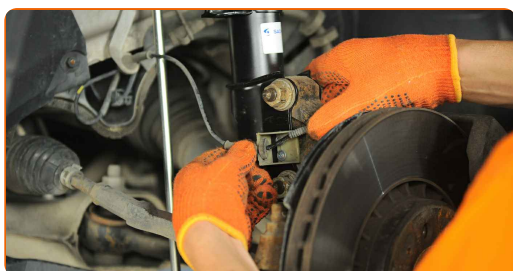


47 Install the transverse stabilizer link.


48 Tighten the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #18. Use Torx T40. Use a torque wrench. Tighten it to 90 Nm torque.

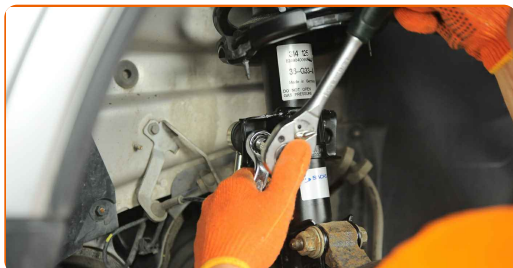

49 Treat all joints of the stabiliser link. Treat the shock strut fasteners. Use copper grease.

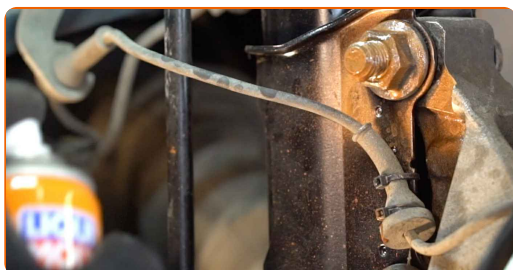

50 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

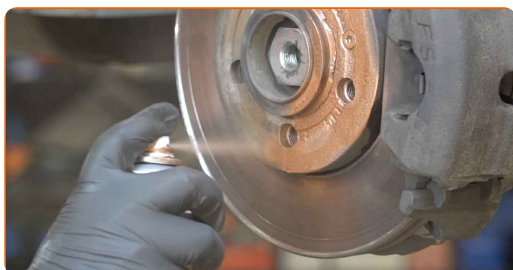

51 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: coil springs – Volvo XC90 1. After applying the spray, wait a few minutes.

52

Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Volvo XC90 1

53

Screw in the wheel bolts. Use wheel impact socket #19.




54

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 140 nm torque.



55

Remove the jacks and chocks.

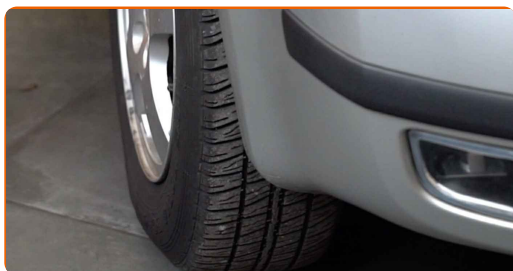

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VOLVO

COIL SPRINGS: A WIDE SELECTION

CHOOSE CAR PARTS FOR VOLVO XC90 1

COIL SPRINGS FOR VOLVO: BUY NOW

COIL SPRINGS FOR VOLVO XC90 1: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.