



How to change tailgate
struts on **VW Bora**
Variant (1J6) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

VW Bora Variant (1J6) 2.0, VW Bora Variant (1J6) 2.3 V5, VW Bora Variant (1J6) 1.9 TDI, VW Bora Variant (1J6) 1.6, VW Bora Variant (1J6) 2.3 V5 4motion, VW Bora Variant (1J6) 1.9 TDI 4motion, VW Bora Variant (1J6) 1.8 4motion, VW Bora Variant (1J6) 2.8 V6 4motion, VW Bora Variant (1J6) 1.6 16V, VW Bora Variant (1J6) 1.8 T, VW Bora Variant (1J6) 2.0 4motion, VW Bora Variant (1J6) 1.6 FSI, VW Bora Variant (1J6) 1.4 16V

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Golf IV Hatchback (1J1) 1.6

REPLACEMENT: TAILGATE STRUTS – VW BORA VARIANT (1J6). TOOLS YOU'LL NEED:



- Multipurpose grease
- Flat Screwdriver
- Hydraulic transmission jack

Buy tools

Replacement: tailgate struts – VW Bora Variant (1J6). AUTODOC experts recommend:

- Right and left gas struts of the boot lid should be replaced simultaneously.
- The replacement procedure is identical for the right and left gas struts of the boot lid.
- Please note: all work on the car – VW Bora Variant (1J6) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Open the boot lid.




2

Support the boot lid. Use a hydraulic transmission jack.

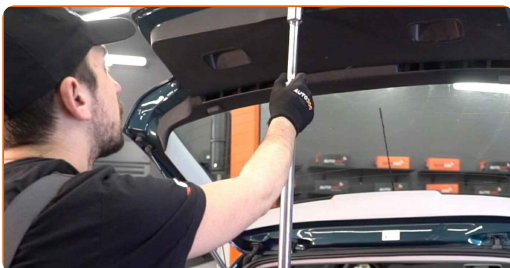


3

Detach the rear parcel shelf straps.

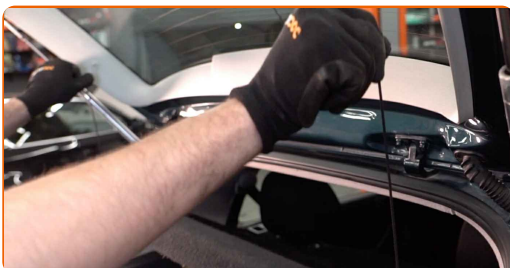

4

Release the circlip connecting the gas strut to the boot lid. Use a flat screwdriver.

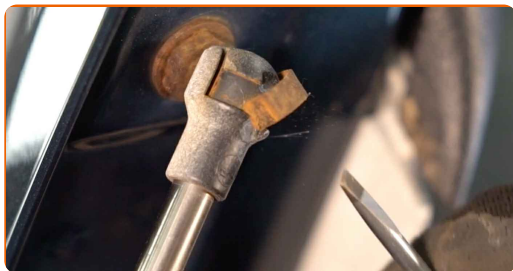

5

Release the circlip connecting the gas strut to the car body. Use a flat screwdriver.




Replacement: tailgate struts – VW Bora Variant (1J6). Tip:

- To avoid any injuries, be sure to hold the boot lid while demounting the gas struts.


6

Remove the boot lid gas strut.

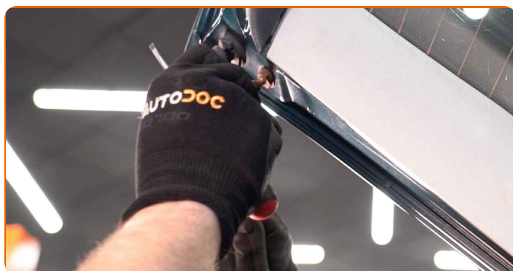

7

Release the circlip connecting the gas strut to the boot lid. Use a flat screwdriver.

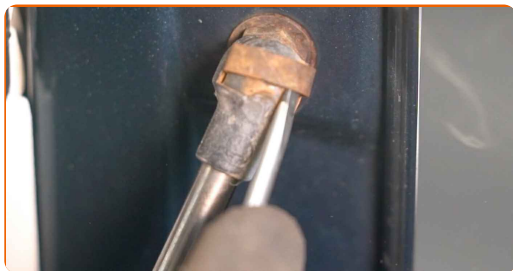

8

Release the circlip connecting the gas strut to the car body. Use a flat screwdriver.




Replacement: tailgate struts – VW Bora Variant (1J6). AUTODOC experts recommend:

- To avoid any injuries, be sure to hold the boot lid while demounting the gas struts.


9

Remove the boot lid gas strut.

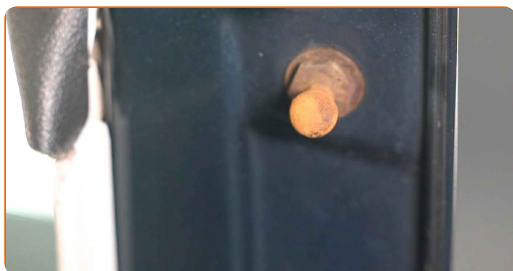

10

Treat the fasteners of the boot lid gas strut. Use a multipurpose grease. Use a flat screwdriver.

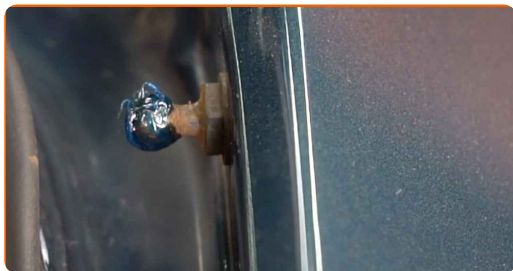

11

Install the new boot lid gas strut.



Replacement: tailgate struts – VW Bora Variant (1J6). Professionals recommend:

- To avoid any injuries, be sure to hold the boot lid while installing the gas strut.

12

Snap on the circlip connecting the gas strut to the boot lid.




13

Snap on the circlip connecting the gas strut to the car body.



14

Remove the hydraulic transmission jack.

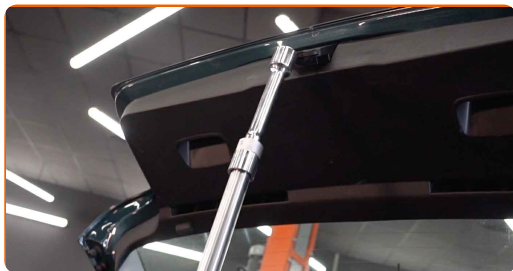


AUTODOC recommends:

- Replacement: tailgate struts – VW Bora Variant (1J6). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


15

Attach the rear parcel shelf straps.

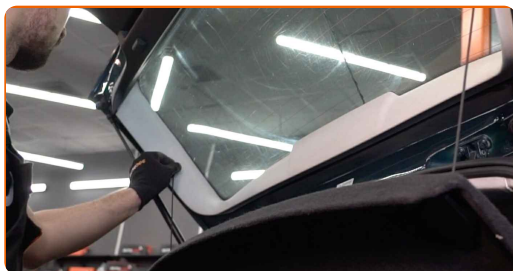


16

Check the working condition of the boot lid gas springs after they are installed.

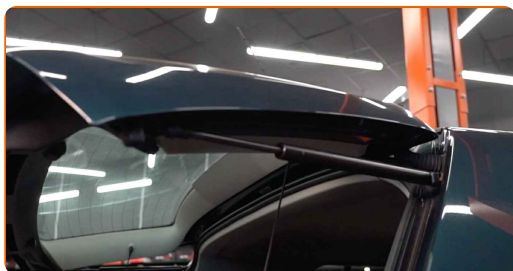

17

Close the lid of the luggage compartment.

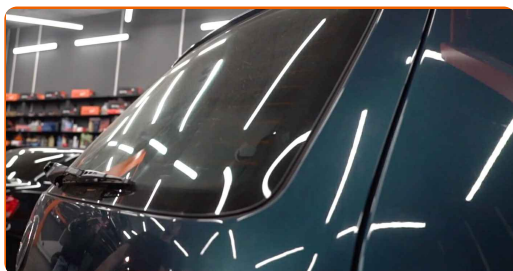

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

TAILGATE STRUTS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.