



How to change brake
drum on **VW BORA** –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

VW BORA 2.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: SKODA OCTAVIA (1U2) 1.6

REPLACEMENT: BRAKE DRUM – VW BORA. TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Copper grease
- High-temperature ceramic grease
- Torque wrench
- Torx bit T30
- Wheel impact socket #17
- Ratchet wrench
- Wheel chock


Buy tools

Replacement: brake drum – VW BORA. AUTODOC recommends:


- Replace the brake drums on VW BORA in pair for the rear axle. Disregarding the parts state. It ensures even braking.
- The replacement procedure is identical for the right and left brake drums on the same axle.
- When replacing the brake drums, be sure to also change the brake shoes.
- All work should be done with the engine stopped.

REPLACEMENT: BRAKE DRUM – VW BORA. RECOMMENDED SEQUENCE OF STEPS:

1 Secure the wheels with chocks.

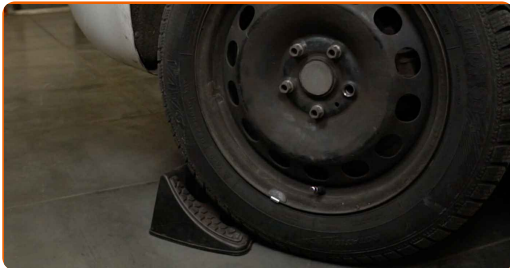


2 Loosen the wheel mounting bolts. Use wheel impact socket #17.

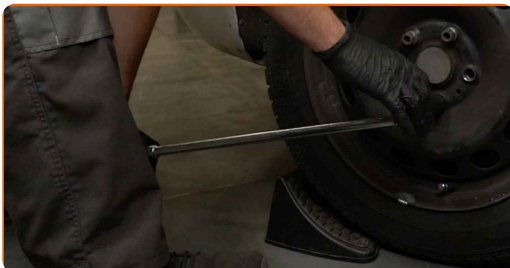

3 Raise the rear of the car and secure on supports.

4 Unscrew the wheel bolts.

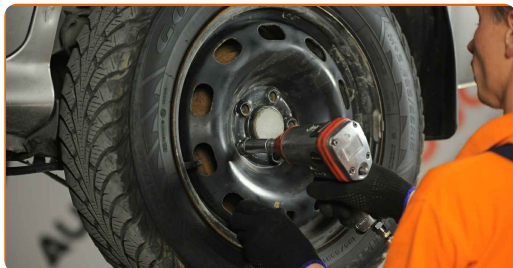

AUTODOC recommends:


- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. VW BORA

5 Remove the wheel.




6 Clean the brake drum fasteners. Use a wire brush. Use WD-40 spray.

7 Unscrew the brake drum fastening. Use Torx T30. Use a ratchet wrench.

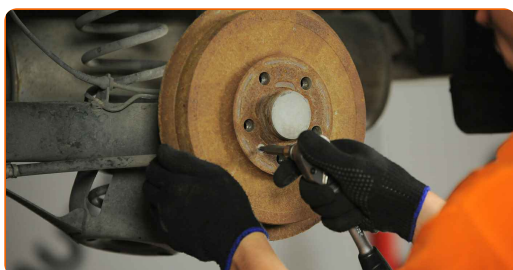

8 Remove the brake drum.

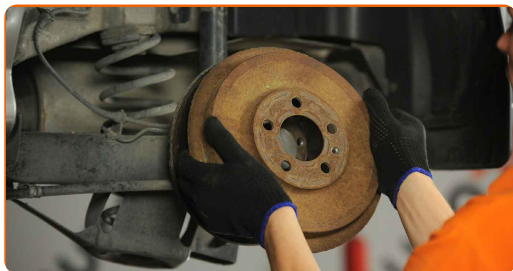


9 Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.



10 Install a brake drum.




11 Tighten the brake drum fasteners. Use Torx T30. Use a torque wrench. Tighten it to 4 Nm torque.

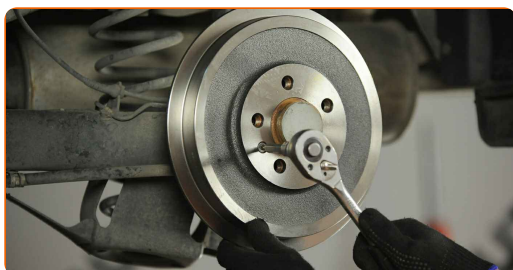

12

Treat the surface where the wheel rim contacts the brake drum. Use high-temperature ceramic grease.

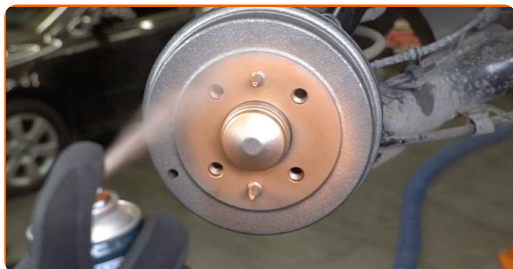

13

Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. VW BORA

14

Screw in the wheel bolts. Use wheel impact socket #17.




15

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



16

Remove the jacks and chocks.

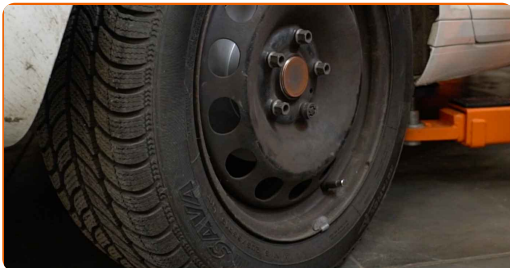

Replacement: brake drum – VW BORA. Tip from AUTODOC:

- Adjust the gap between the brake shoes and the drum on VW BORA, pressing the brake pedal 10-15 times.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE DRUM: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.