



How to change coolant  
flange on **VW GOLF III**  
**Variant (1H5)** –  
replacement guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### **Important!**

This replacement procedure can be used for:

VW GOLF III Variant (1H5) 1.9 D, VW GOLF III Variant (1H5) 1.9 TD, VW GOLF III Variant (1H5) 1.8, VW GOLF III Variant (1H5) 2.0, VW GOLF III Variant (1H5) 1.9 TDI, VW GOLF III Variant (1H5) 1.9 SDI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW GOLF II (19E, 1G1) 1.6

REPLACEMENT: COOLANT FLANGE – VW GOLF III  
VARIANT (1H5). TOOLS YOU MIGHT NEED:



- Torque wrench
- Drive socket # 7
- Drive socket # 10
- Drive socket # 13
- Ratchet wrench
- Fluid container
- Funnel
- Fender cover

**Buy tools**

Replacement: coolant flange – VW GOLF III Variant (1H5). Tip from AUTODOC:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Check the coolant condition and replace it if necessary.
- Inspect the thermostat. Replace it if necessary.
- All work should be done with the engine stopped.

**REPLACEMENT: COOLANT FLANGE – VW GOLF III VARIANT (1H5). USE THE FOLLOWING PROCEDURE:**

**1** Open the hood.

**2** Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

**3** Unscrew the coolant reservoir cap.



**4** Prepare a container for fluids.



**5** Loosen the coolant hose clamp. Use a drive socket #7. Use a ratchet wrench.



**6** Detach the coolant hose.



Replacement: coolant flange – VW GOLF III Variant (1H5). Professionals recommend:

- Caution! Coolant may come out from the water pump channels and body.

**7** Drain the coolant from the engine.




Replacement: coolant flange – VW GOLF III Variant (1H5). Tip from AUTODOC:

- Caution! The coolant can be very hot.
- Wear gloves to prevent contact with hot liquid.
- All work should be done with the engine stopped.
- Wait until the coolant has completely flowed out of the drain hole.


8

Unscrew the thermostat housing fasteners. Use a drive socket #13. Use a ratchet wrench.

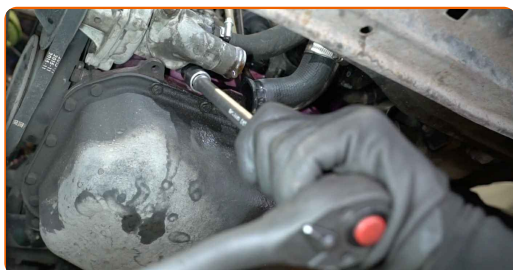

9


Remove the thermostat housing.

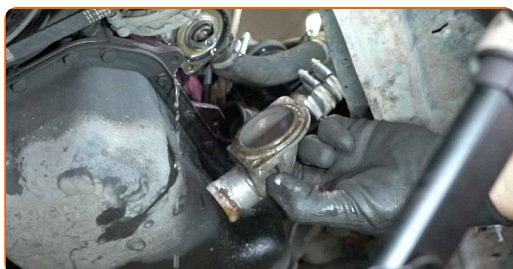

**AUTODOC recommends:**

- Replacement: coolant flange – VW GOLF III Variant (1H5). Do not use excessive force when removing the part as this may damage it.

**10** Remove the thermostat.

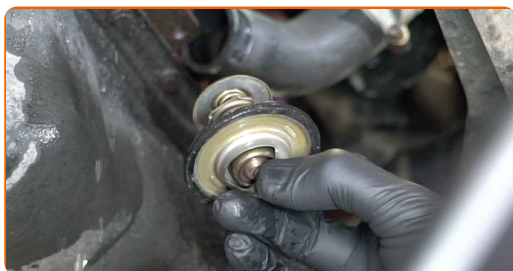

Replacement: coolant flange – VW GOLF III Variant (1H5). AUTODOC experts recommend:

- Do not apply excessive force when removing the part. Otherwise you may damage it.
- Caution! Coolant may leak out of the coolant lines and thermostat housing.

**11** Install the thermostat.



AUTODOC recommends:

- Caution! Do not use excessive force during installation. This may damage the fasteners of the car. VW GOLF III Variant (1H5)

**12** Install a new thermostat housing.



**13** Tighten the thermostat housing fasteners. Use a drive socket #10. Use a torque wrench. Tighten it to 13 nm torque.



**14** Attach the coolant hose.



**15** Secure the coolant hose clamp. Use a drive socket #7. Use a ratchet wrench.




**16** Remove the coolant reservoir cap.



**17** Insert the funnel.



**18** Pour coolant in the coolant reservoir.

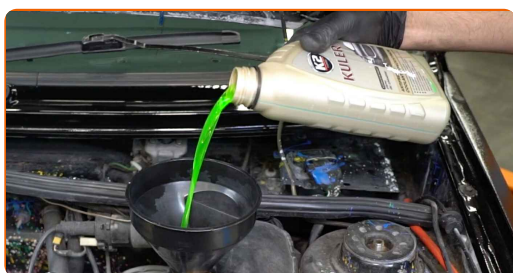


Replacement: coolant flange – VW GOLF III Variant (1H5). Professionals recommend:

- Only use the coolant recommended by the manufacturer.
- The coolant level should be at the MAX mark.
- Wait until the air goes out of the system.

**19** Run the engine for a few minutes. This should be done in order to remove residual air from the cooling system and to check if the components are operating correctly.

**20** Shut off the engine.

**21** Install the coolant reservoir cap.

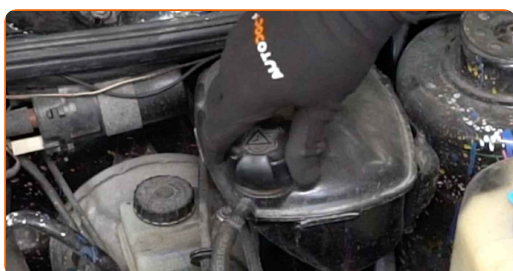

**22** Screw on the coolant reservoir cap.

**23** Remove the fender protection cover.

**24** Close the hood.

**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**COOLANT FLANGE: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.