



How to change rear
suspension strut on **VW**
Polo III Hatchback (6N2)
– replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

VW Polo III Hatchback (6N2) 1.4 16V, VW Polo III Hatchback (6N2) 1.4 TDI, VW Polo III Hatchback (6N2) 1.0, VW Polo III Hatchback (6N2) 1.7 SDI, VW Polo III Hatchback (6N2) 1.9 D, VW Polo III Hatchback (6N2) 1.4, VW Polo III Hatchback (6N2) 1.9 SDI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Polo III Hatchback (6N1) 1.0

REPLACEMENT: SUSPENSION STRUT – VW POLO III HATCHBACK (6N2). TOOLS YOU NEED:

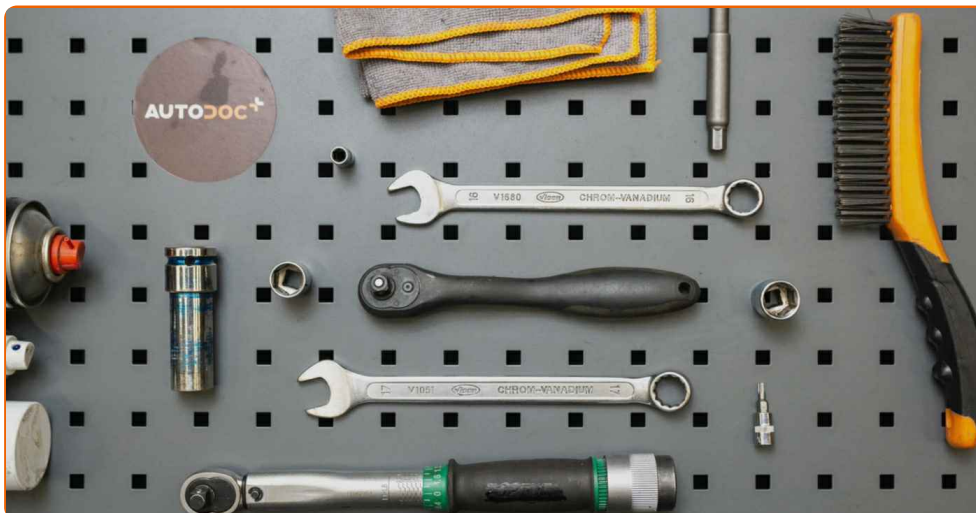

- Wire brush
- WD-40 spray
- Copper grease
- Torque wrench
- Combination spanner #16
- Combination spanner #17
- Drive socket # 7
- Drive socket # 16
- Drive socket # 17
- Torx bit T20
- Shock absorber socket DD#5,2
- Wheel impact socket #17
- Ratchet wrench
- Tap wrench
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Wheel chock

Buy tools

Replacement: suspension strut – VW Polo III Hatchback (6N2). AUTODOC recommends:

- Both shock struts of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right shock struts of the rear suspension.
- Please note: all work on the car – VW Polo III Hatchback (6N2) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Open the boot lid.

2 Move the folding shelf and detach it from the retainers. By doing this, you will get access to the side trim plastic panels.

3 Unscrew the fastener of the boot side lining.




4 Detach the boot side lining.

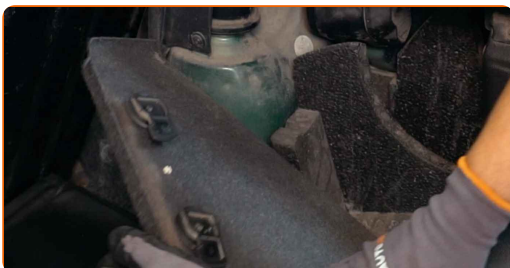

5 Fold down the backrests of the rear seats.




6 Unscrew the fasteners of the side plastic trim panel. Use Torx T20. Use a drive socket #7. Use a ratchet wrench.

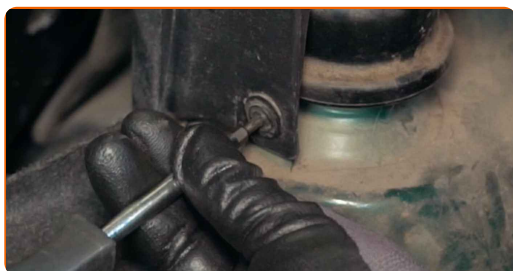

7 Remove the side plastic cover.



8 Remove the shock strut mount cap.

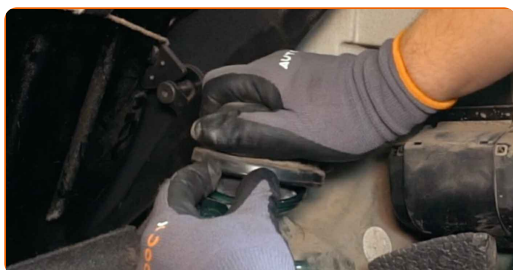

9 Clean the upper fastener of the suspension strut mount. Use a wire brush. Use WD-40 spray.



- 10 Unscrew the top fastener of the suspension strut. Use a combination spanner #16. Use a shock absorber socket DDN^o5,2. Use a ratchet wrench.




- 11 Unscrew the top fastener of the suspension strut. Use a combination spanner #17. Use a shock absorber socket DDN^o5,2. Use a ratchet wrench.



- 12 Secure the wheels with chocks.

- 13 Loosen the wheel mounting bolts. Use wheel impact socket #17.

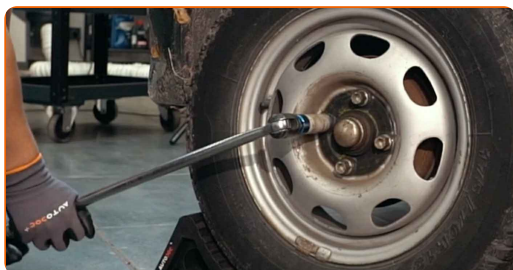

- 14 Raise the rear of the car and secure on supports.

- 15 Unscrew the wheel bolts.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. VW Polo III Hatchback (6N2)


16

Remove the wheel.

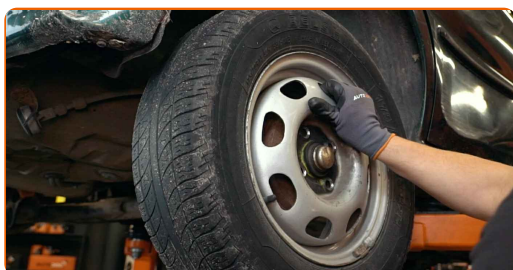


17

Support the rear suspension beam. Use a hydraulic transmission jack.

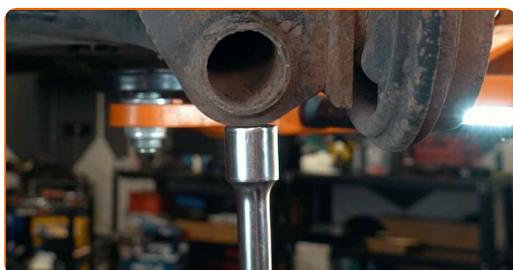


18

Clean the lower fastener of the suspension strut. Use a wire brush. Use WD-40 spray.

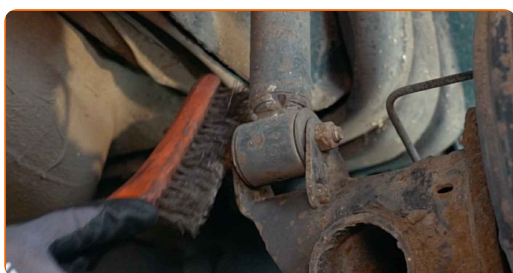

19

Unscrew the lower fasteners of the suspension strut. Use a combination spanner #16. Use a drive socket #16. Use a tap wrench.

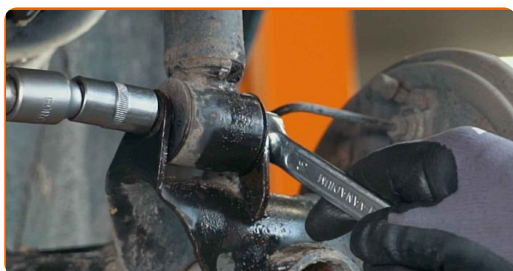


AUTODOC recommends:

- VW Polo III Hatchback (6N2) – To avoid injury, hold the suspension strut while unscrewing the fastening bolts.

20

Remove the support from under the rear axle beam.

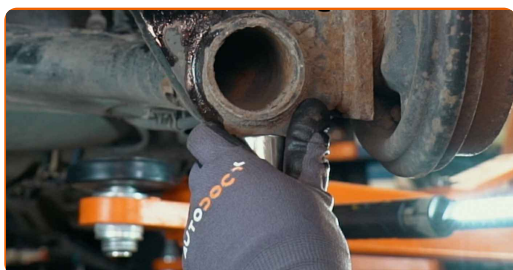


AUTODOC recommends:

- VW Polo III Hatchback (6N2) – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.


21

Remove the fastening bolt.

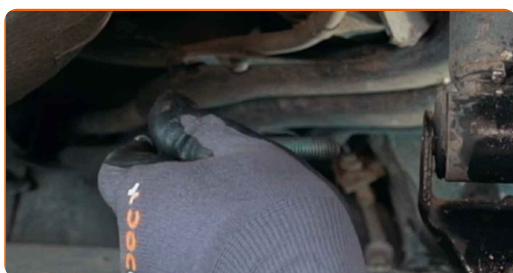

22

Remove the suspension strut.

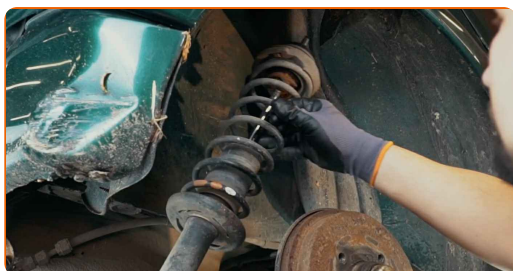

23

Set the shock absorber strut on the spring compressor tool.



Replacement: suspension strut – VW Polo III Hatchback (6N2). Professionals recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

24

Compress the spring.



25


Treat the shock strut rod. Use a wire brush. Use WD-40 spray.




- 26 Remove the strut piston rod nut. Use a combination spanner #17. Use a shock absorber socket DDN#5,2. Use a ratchet wrench.



- 27 Remove the top strut mount.

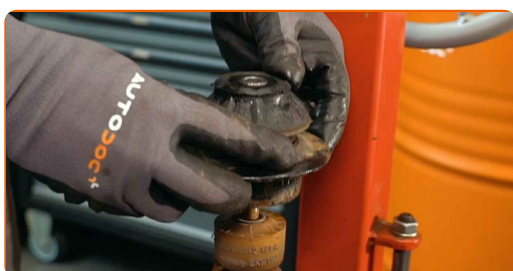


- 28 Remove the shock absorber dust cap and the bump stop.

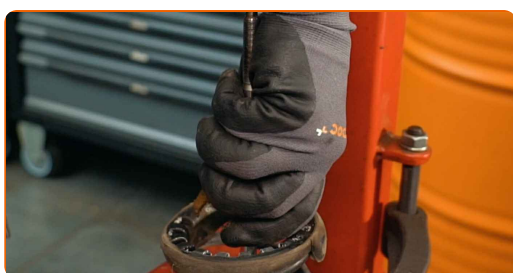


AUTODOC recommends:

- Replacement: suspension strut – VW Polo III Hatchback (6N2). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

- 29 Release the coil spring.

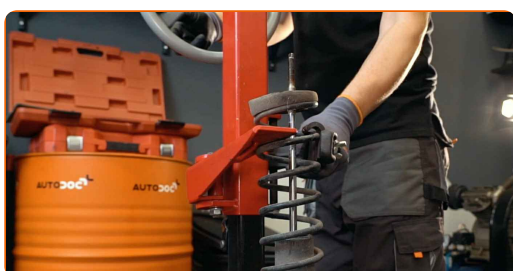

30 Remove the spring.

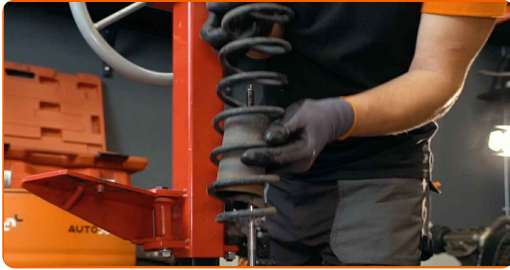

31 Remove the old shock absorber from the hydraulic coil spring compressor.




Replacement: suspension strut – VW Polo III Hatchback (6N2). AUTODOC experts recommend:

- Before installing a new shock absorber you should pump it manually 3-5 times.

32 Install the new shock absorber on the hydraulic coil spring compressor.




33 Install the spring on the shock absorber.

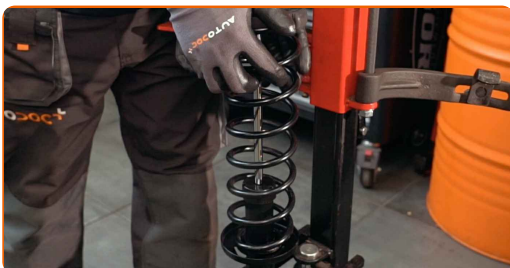


34 Compress the spring.




35 Install the dust sleeve and the bump stop on the new shock absorber.

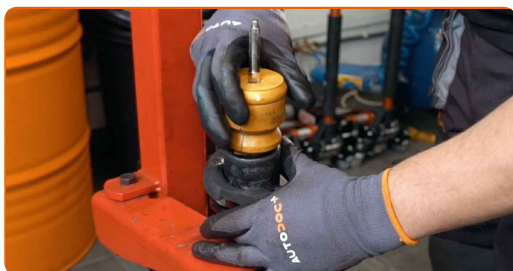

36 Install the upper strut mount and the strut mount bearing.

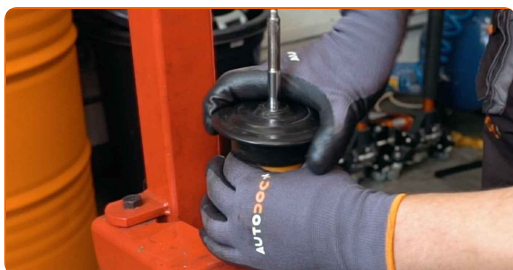


37 Tighten the shock strut piston rod nut. Use a combination spanner #17. Use a shock absorber socket DDN#5,2. Use a torque wrench. Tighten it to 20 Nm torque.

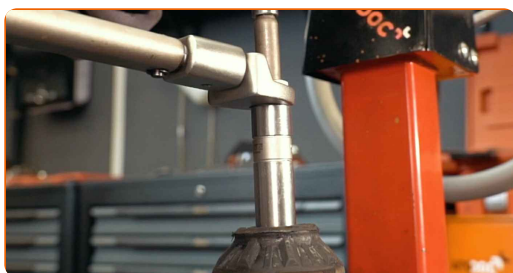

Replacement: suspension strut – VW Polo III Hatchback (6N2). Tip from AUTODOC experts:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.


38 Decompress the spring.

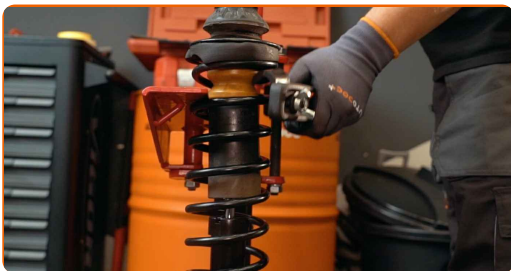


39 Treat the shock strut rod. Use copper grease.




40 Remove the assembled shock strut.

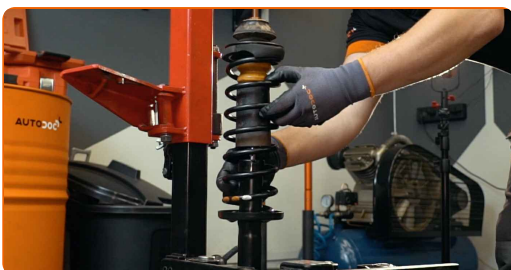

41 Clean the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.

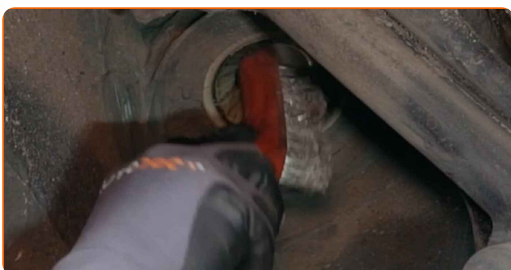

42 Install the shock strut into the wheel arch.

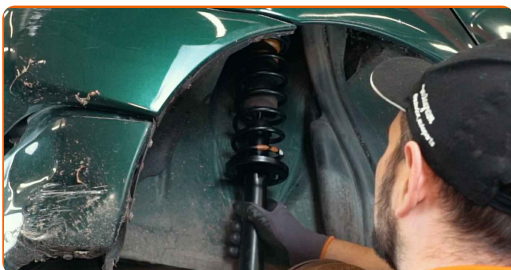


AUTODOC recommends:

- VW Polo III Hatchback (6N2) – To avoid injury, hold the suspension strut while screwing in the fastening bolts.


43

Install the fastening bolt.

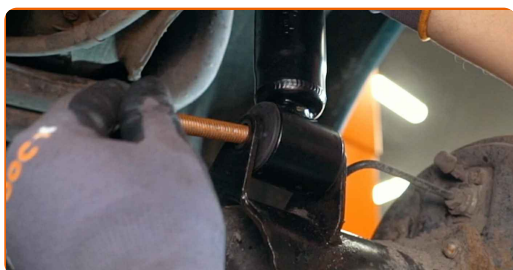

44

Support the rear suspension beam. Use a hydraulic transmission jack.

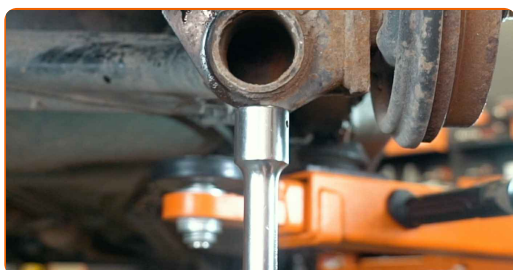

45

Tighten the lower fasteners of the suspension strut. Use a combination spanner #17. Use a drive socket #17. Use a torque wrench. Tighten it to 55 Nm torque.




46 Remove the mounting from under the rear axle beam.



AUTODOC recommends:

- Replacement: suspension strut – VW Polo III Hatchback (6N2). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

47 Treat the shock strut fasteners. Use copper grease.

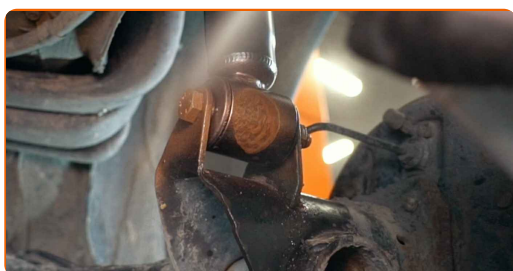


48 Clean the wheel rim mounting seat. Use a wire brush.



49

Treat the surface where the wheel rim contacts the brake drum. Use copper grease.

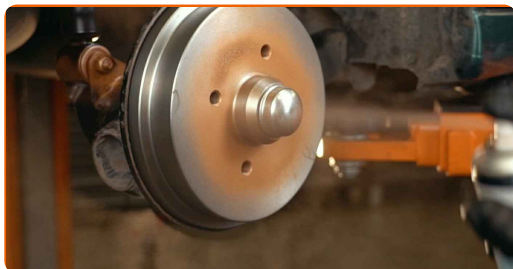

50

Install the wheel.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. VW Polo III Hatchback (6N2)

51


Screw in the wheel bolts. Use wheel impact socket #17.

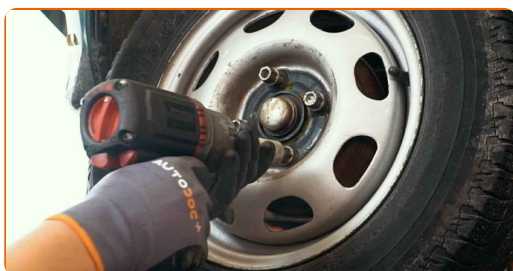

- 52** Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 110 Nm torque.



- 53** Remove the jacks and chocks.

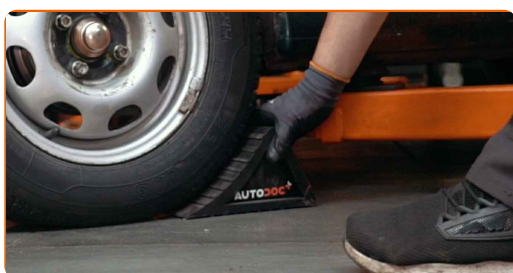


- 54** Tighten the top fasteners of the suspension strut. Use a combination spanner #17. Use a shock absorber socket DDN#5,2. Use a torque wrench. Tighten it to 20 Nm torque.




- 55** Tighten the top fasteners of the suspension strut. Use a combination spanner #16. Use a shock absorber socket DDN#5,2. Use a torque wrench. Tighten it to 20 Nm torque.




56 Treat the upper fastener of the suspension strut mount. Use copper grease.

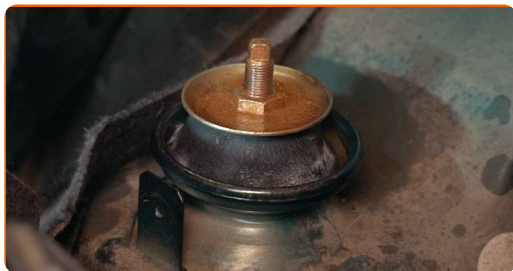


57 Install the shock strut mount cap.

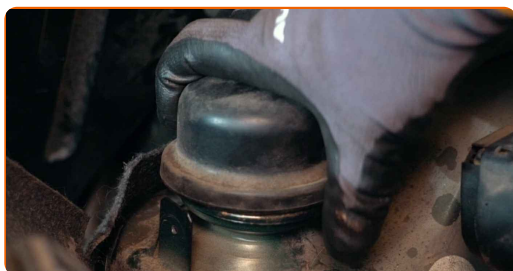

58 Install the side plastic panel.

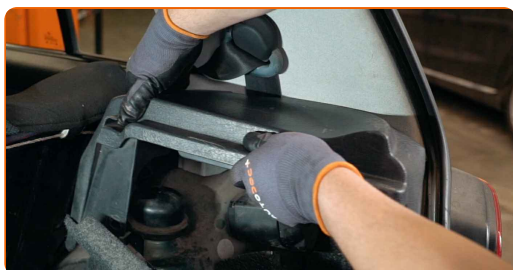

59 Screw the fasteners of the side plastic trim panel. Use Torx T20. Use a drive socket #7. Use a ratchet wrench.

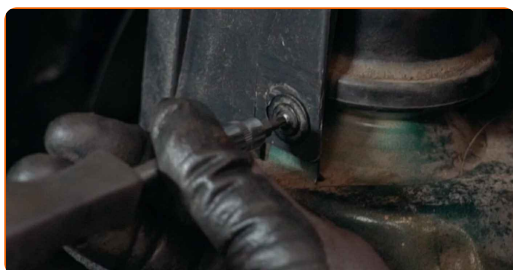

60


Attach the side lining of the boot.

**61**

Screw in the fastener of the boot side lining.

62

Return the seat to its original position.

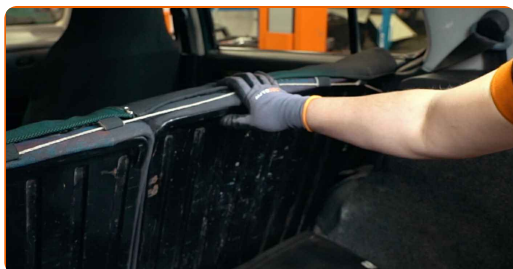**63**

Install the folding shelf to its mounting seat.

**64**

Close the lid of the luggage compartment.

WELL DONE! [VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SHOCK ABSORBERS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.