



How to change front
strut mount on **VW**
Transporter V Minibus
(7HB, 7HJ, 7EB, 7EJ, 7EF,
7EG, 7HF, 7EC) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 2.0 TDI, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 2.0 TDI 4motion, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 1.9 TDI, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 2.5 TDI, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 2.0, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 3.2 V6, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 2.5 TDI 4motion, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 3.2 V6 4motion, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 2.5 TDi, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 2.0 TSI, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 2.0 TSI 4motion, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 2.0 BiTDI, VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC) 2.0 BiTDI 4motion

The steps may slightly vary depending on the car design.

Please note that this tutorial was created based on the replacement procedure for this car part on a car with a similar design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Multivan V (7HM, 7HN, 7HF, 7EF, 7EM, 7EN) 1.9 TDI

**REPLACEMENT: STRUT MOUNT – VW TRANSPORTER V
MINIBUS (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC). LIST
OF THE TOOLS YOU'LL NEED:**



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Ceramic grease
- Torque wrench
- Combination spanner #19
- Combination spanner #21
- Drive socket # 18
- Drive socket # 19
- Drive socket # 21
- Drive socket # 30
- HEX bit No.H5
- HEX bit No.H7
- Torx bit T30
- Wheel impact socket #19
- Ratchet wrench
- Flat Screwdriver
- Hydraulic strut spring compressor
- Crow bar
- Flat chisel
- Hammer
- Pin punch
- Ball joint puller
- Clic-R collar pliers
- Hydraulic transmission jack
- Fender cover
- Wheel chock

Buy tools

Replacement: strut mount – VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC). AUTODOC recommends:

- Both shock struts of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right shock struts of the front suspension.
- All work should be done with the engine stopped.

REPLACEMENT: STRUT MOUNT – VW TRANSPORTER V MINIBUS (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC). USE THE FOLLOWING PROCEDURE:

1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #19.



3

Raise the front of the car and secure on supports.

4

Unscrew the wheel bolts.



Replacement: strut mount – VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC). AUTODOC experts recommend:

- To avoid injury, hold up the wheel when unscrewing the bolts.


5

Remove the wheel.



6


Clean the sway bar link fastener. Use a wire brush. Use WD-40 spray.

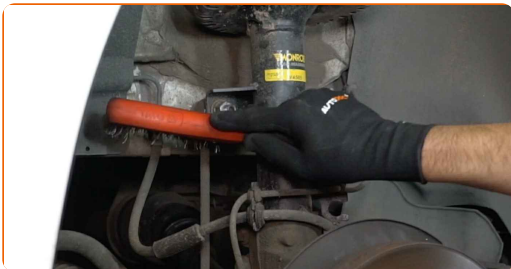


- 7 Unscrew the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #19. Use HEX No.H5. Use a ratchet wrench.




- 8 Remove the stabilizer rod.

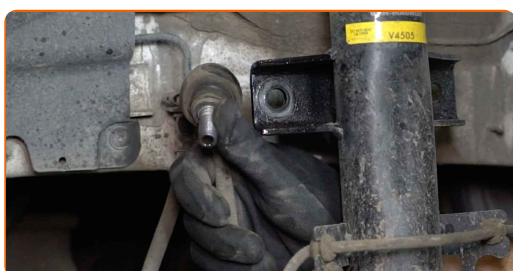


- 9 Disconnect the wiring and the brake hose from the bracket on the shock strut. Use a crowbar.

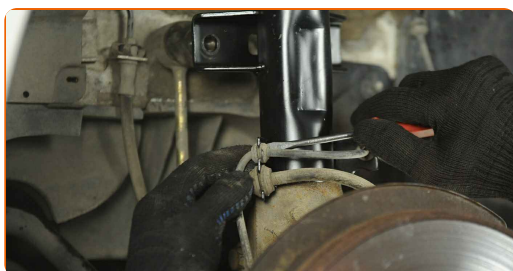


- 10 Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.

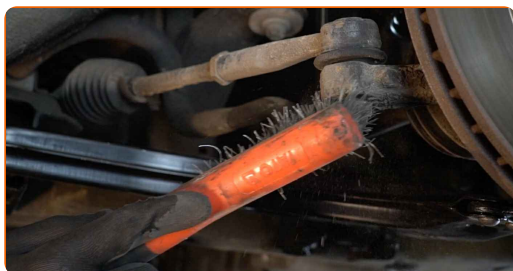


11 Unscrew the end fastening nut to the steering knuckle. Use a drive socket #21. Use a ratchet wrench.

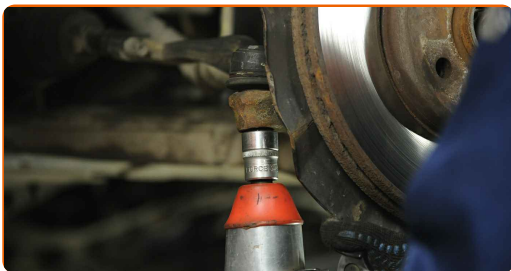


12 Disconnect the tie rod end from the steering knuckle. Use a ball joint puller.

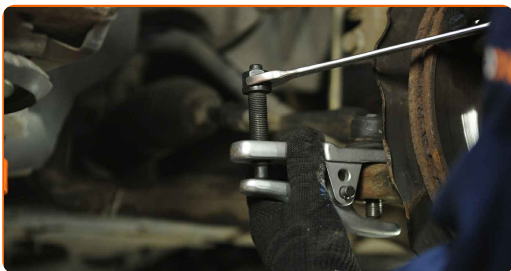

13 Clean the fasteners that connect the ball joint to the steering knuckle. Use a wire brush. Use WD-40 spray.

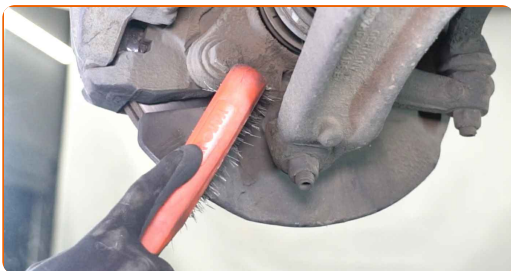

14 Unscrew the ball joint fasteners from the steering knuckle. Use a drive socket #19. Use a ratchet wrench.

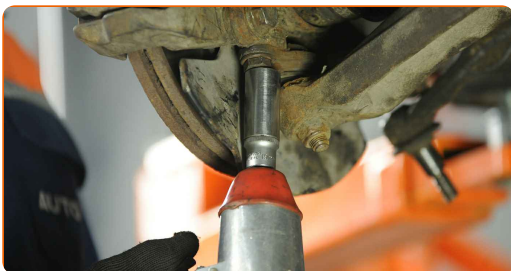

15 Remove the fastening bolts.

16

Unscrew the fastener connecting the drive shaft to the wheel hub. Use a drive socket #30. Use a ratchet wrench.




17

Remove the fastening nut.

18

Detach the driveshaft from the steering knuckle. Use a pin punch. Use a hammer.

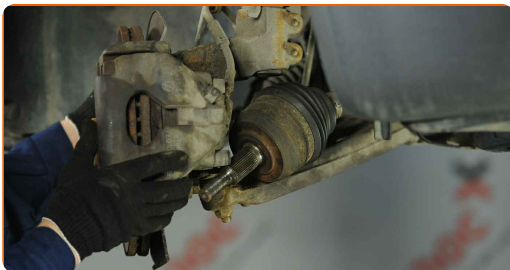


19

Disconnect the ball joint from the steering knuckle.

20

Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.

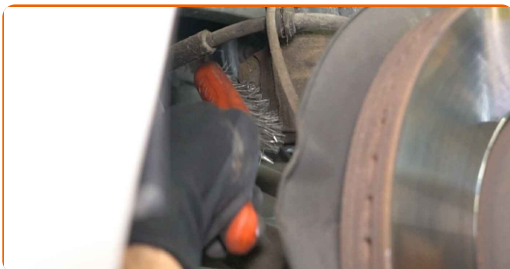


21

Unscrew the fasteners connecting the suspension strut to the steering knuckle. Use a drive socket #18. Use a ratchet wrench.




22 Remove the fastening bolts.

23 Release the lower fastener connecting the shock strut to the steering knuckle. Use a flat metal-working chisel. Use a hammer.

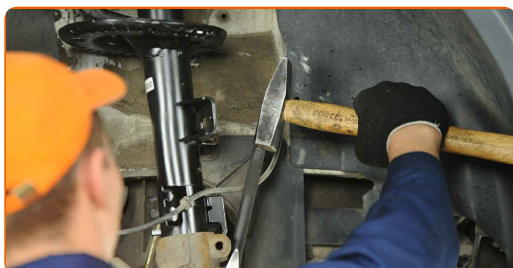

24 Disconnect the steering knuckle from the shock absorber strut.

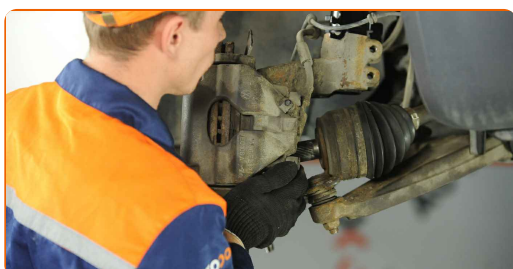

25 Connect the ball joint to the steering knuckle.



26 Lower the car.


27 Open the bonnet.

28 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


29 Unplug the mass air flow sensor connector. Use a flat screwdriver.




30 Release the air filter cover clips.

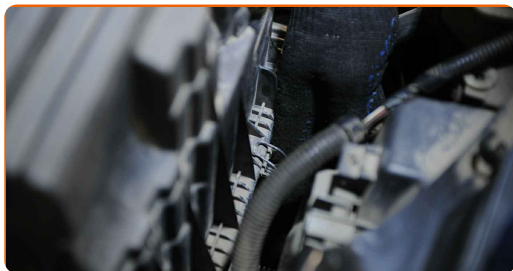

31 Detach the air intake hose clamp. Use clic-R collar pliers.

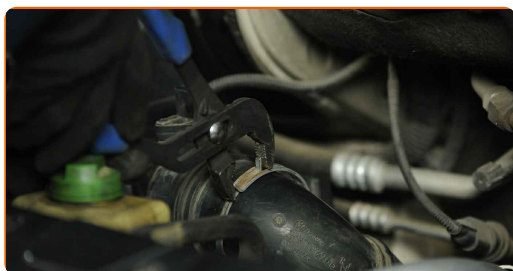

32 Disconnect the air intake pipe from the air filter housing.

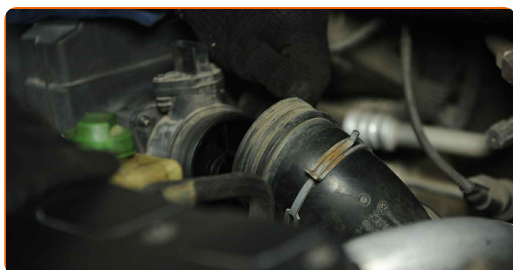


33 Take off the filter lid.



34 Remove the air filter.


35 Remove the cowl grille seal.

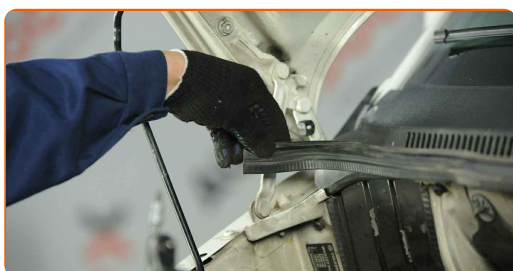


36 Unscrew the mounting bolts of the protective cover. Use Torx T30. Use a ratchet wrench.




37 Remove the protective cover.

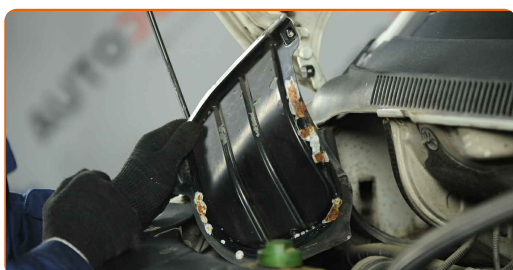

38 Remove the shock strut mount cap. Use a crowbar.

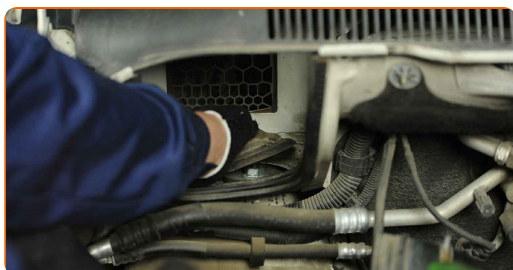

39 Clean the upper fastener of the suspension strut mount. Use a wire brush. Use WD-40 spray.

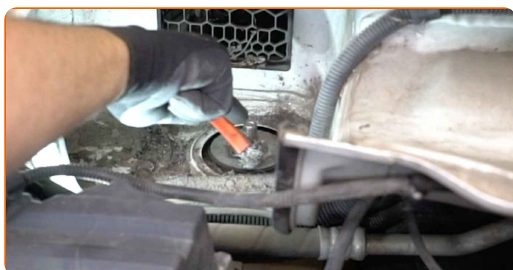


- 40** Unscrew the top fasteners of the suspension strut mount. Use a combination spanner #21. Use HEX No.H7. Use a ratchet wrench.




AUTODOC recommends:

- Important! Hold the suspension strut while unscrewing the fastening bolts. VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC)

- 41** Remove the suspension strut.

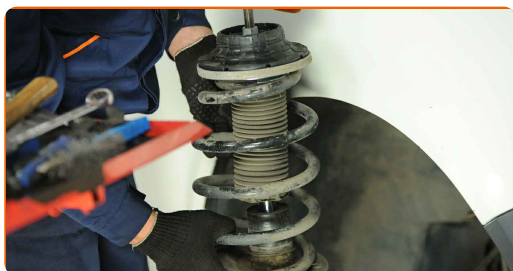

- 42** Set the shock absorber strut on the spring compressor tool.

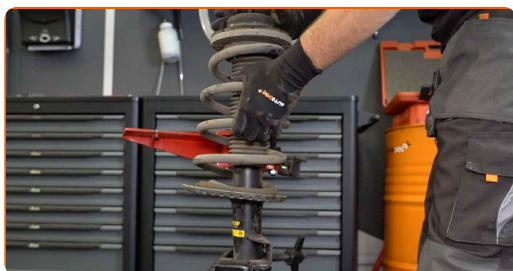

Replacement: strut mount – VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC). Tip:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.


43

Compress the spring.



44

Treat the shock strut rod. Use a wire brush. Use WD-40 spray.

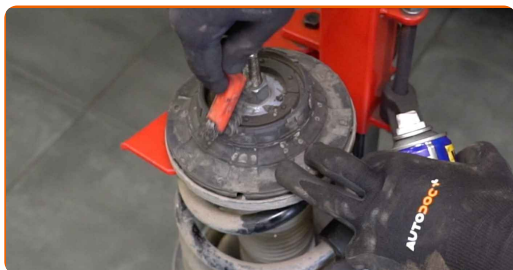

45


Remove the strut piston rod nut. Use a combination spanner #21. Use HEX No.H7. Use a ratchet wrench.



46 Remove the top strut mount. Use a crowbar.



47 Remove the shock absorber dust cap and the bump stop.

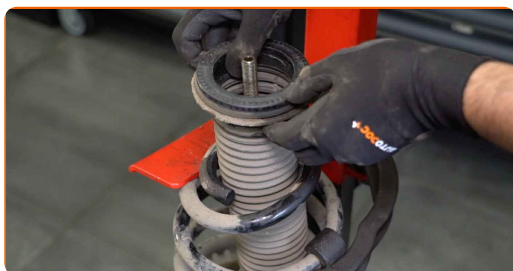

Replacement: strut mount – VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC). AUTODOC recommends:

- Examine the shock absorber dust cap and the bump stop. Replace them if necessary.

48 Install the boot and a bump stop onto the shock absorber.




49 Install a new top shock strut mount.



- 50 Tighten the shock strut piston rod nut. Use a drive socket #21. Use HEX No.H7. Use a torque wrench. Tighten it to 80 Nm torque.



- 51 Decompress the spring.

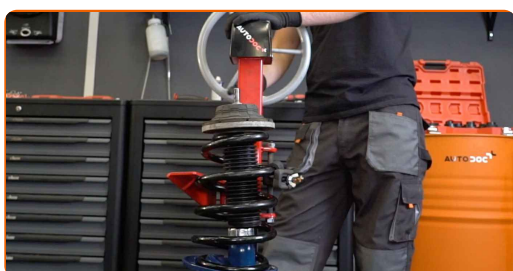

- 52 Remove the assembled shock strut.


- 53 Treat the shock strut rod. Use copper grease.



- 54 Clean the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.



55 Install the shock strut into the wheel arch.

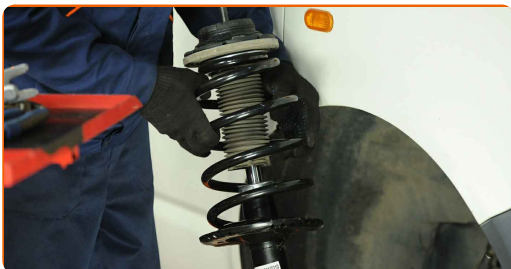


56 Screw in the top fasteners of the suspension strut mount.


Replacement: strut mount – VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC). Tip from AUTODOC experts:

- To avoid injuries, hold the shock strut when screwing the fastening bolts in.

57 Tighten the upper fastener of the shock absorber strut mount. Use a combination spanner #21. Use HEX No.H7. Use a torque wrench. Tighten it to 80 Nm torque.

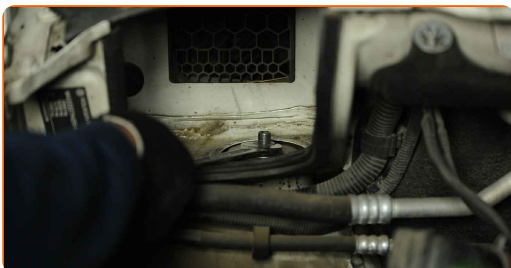


58 Install the shock strut mount cap.

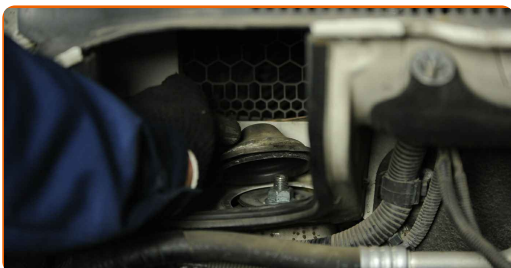

59 Install the protective cover.



60 Tighten the mounting bolts of the protective cover. Use Torx T30. Use a ratchet wrench.

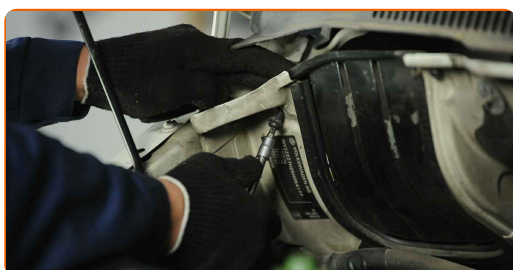


61 Install the cowl grille seal.




62 Install the air filter.

63 Reinstall the air filter cover. Fasten it.

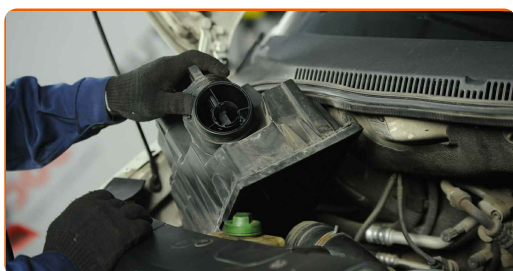


64 Connect the air intake pipe to the air filter housing.

65 Fasten the clamp on the air intake hose. Use clic-R collar pliers.

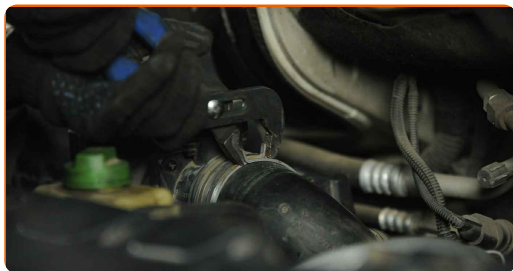

66 Press the air filter cover clips into place.

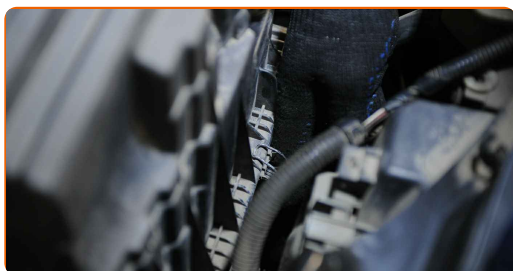

67 Plug in the mass air flow sensor connector.




68 Remove the fender protection cover.

69 Close the hood.

70 Raise the front of the car and secure on supports.

71 Release the lower fastener connecting the shock strut to the steering knuckle. Use a flat metal-working chisel. Use a hammer.

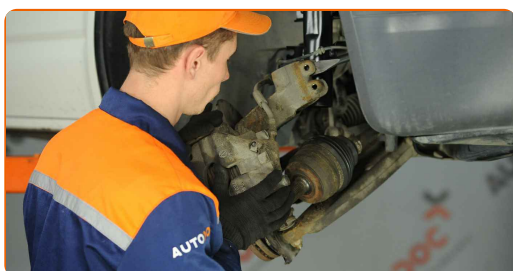


72 Disconnect the ball joint from the steering knuckle.

73 Fix the shock absorber strut on the steering knuckle. Use a crowbar. Use a hammer.




74 Install the fastening bolts.

75 Clean the splines of the drive shaft CV joint. Use a wire brush. Use WD-40 spray.

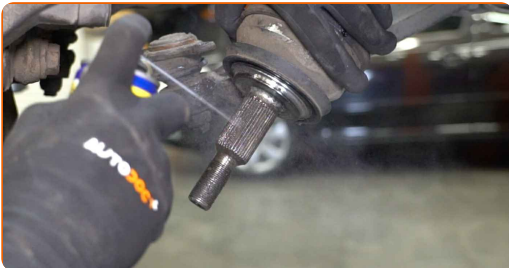

76 Install the steering knuckle on the CV axle.

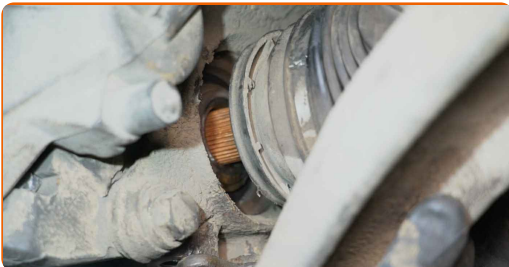


77 Connect the ball joint to the steering knuckle.

78 Install the fastening bolts.

79

Tighten the fasteners that connect the ball joint to the steering knuckle. Use a drive socket #19. Use a torque wrench. Tighten it to 90 Nm torque.+45°

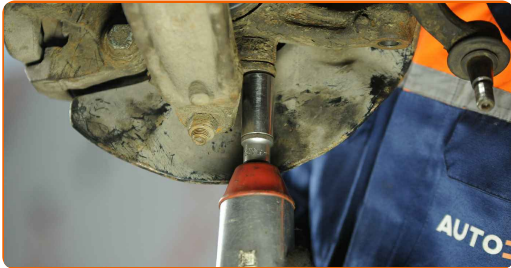

80

Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a drive socket #18. Use a torque wrench. Tighten it to 75 Nm torque.+180°



81

Connect the fastener of the ABS sensor cable to the shock absorber strut. Fasten the brake hose on the strut.




82

Install the transverse stabilizer link. Use a crowbar.


83

Tighten the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #19. Use HEX No.H5. Use a torque wrench. Tighten it to 60 Nm torque.+45°

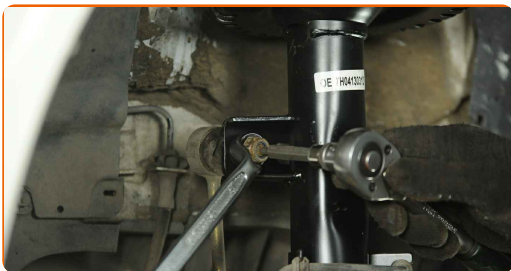

84 Connect the tie rod end to the steering knuckle.


85 Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #21. Use a torque wrench. Tighten it to 60 Nm torque. +90°

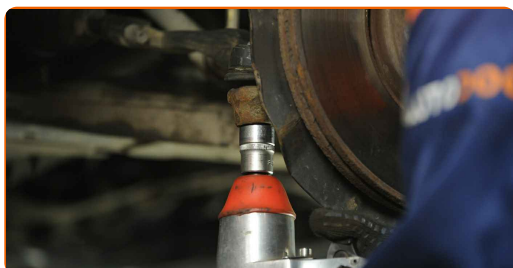


86 Install the fastening nut.



87 Tighten the drive shaft nut. Use a drive socket #30. Use a torque wrench. Tighten it to 200 Nm torque.

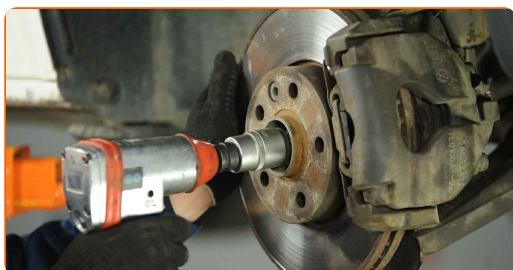


88 Treat all joints of the arm. Treat the shock strut fasteners. Treat all tie rod end connections. Treat all joints of the stabiliser link. Use copper grease.

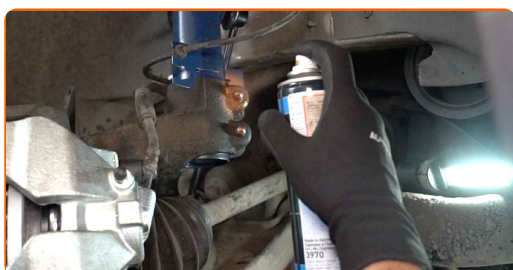

89

Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.

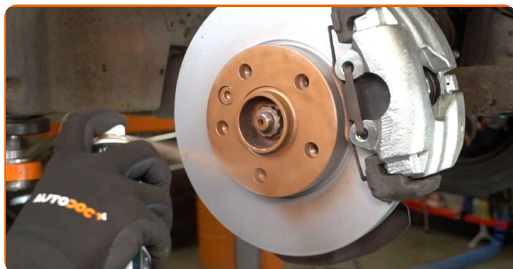

90

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: strut mount – VW Transporter V Minibus (7HB, 7HJ, 7EB, 7EJ, 7EF, 7EG, 7HF, 7EC). After applying the spray, wait a few minutes.

91

Install the wheel.



AUTODOC recommends:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.


92

Screw in the wheel bolts. Use wheel impact socket #19.




93

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 180 Nm torque.

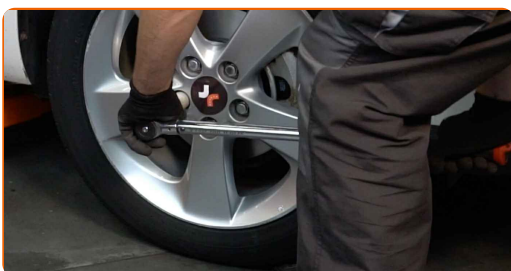

94

Remove the jacks and chocks.

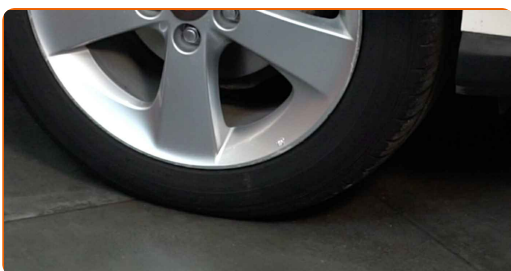

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

STRUT MOUNT: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.