- AUTODOC CLUB

How to change pollen filter on VW Transporter VI Platform / Chassis (SFD, SFE, SFL, SFZ) – replacement guide



SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: VW Transporter VI Platform / Chassis (SFD, SFE, SFL, SFZ) 2.0 TDI, VW Transporter VI Platform / Chassis (SFD, SFE, SFL, SFZ) 2.0 TDI 4motion, VW Transporter VI Platform / Chassis (SFD, SFE, SFL, SFZ) 2.0 TSI

The steps may slightly vary depending on the car design.


This tutorial was created based on the replacement procedure for a similar car part on: VW Transporter V Van (7HA, 7HH, 7EA, 7EH) 1.9 TDI

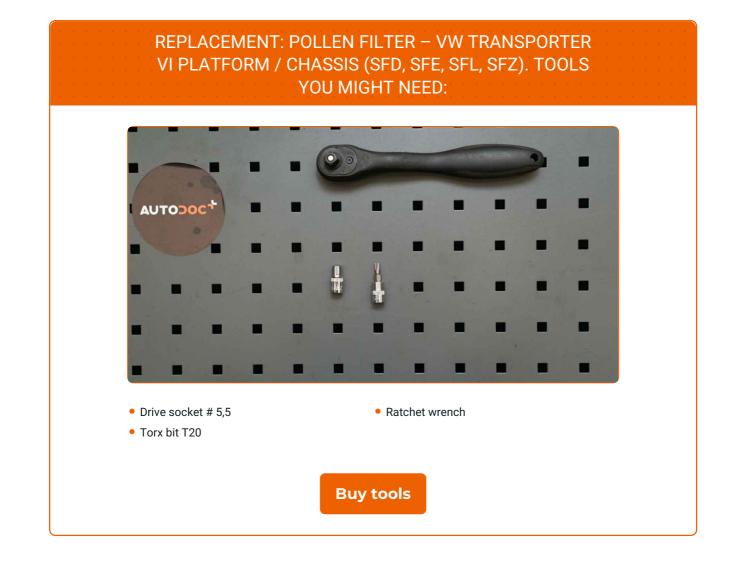

•

O

+ AUTODOC CLUB

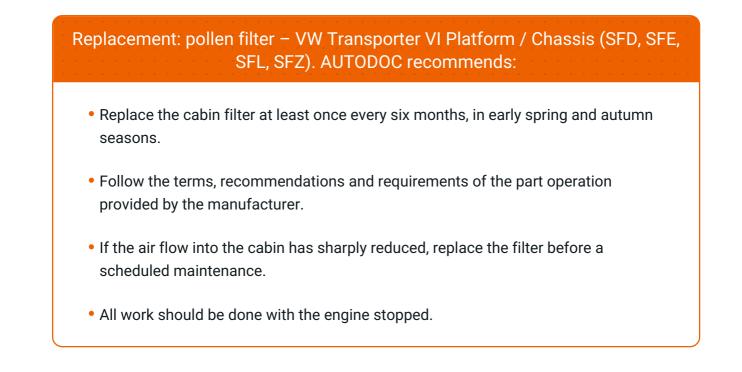

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Move the passenger seat fully backwards.



Unscrew the fasteners of the passenger side kick panel. Use Torx T20.



3

Remove the protective cover under the glove box.





4

Unscrew the fasteners of the cabin filter housing cover. Use a drive socket #5,5. Use a ratchet wrench.



5

Remove the cabin filter housing cover.



6

Remove the cabin filter.



Replacement: pollen filter – VW Transporter VI Platform / Chassis (SFD, SFE, SFL, SFZ). AUTODOC experts recommend:

 Do not attempt to clean and reuse the filter - it will affect the quality of air cleaning inside the car.



7

Install the cabin filter to its mounting seat.



Replacement: pollen filter – VW Transporter VI Platform / Chassis (SFD, SFE, SFL, SFZ). AUTODOC recommends:

- Follow the air flow direction arrow on the filter.
- Check out the correct location of the filter element. Do not skew.
- Attention! Use quality components. VW Transporter VI Platform / Chassis (SFD, SFE, SFL, SFZ)

8

Reinstall the cabin filter housing cover.



9

Screw in the fasteners of the cabin filter housing cover. Use a drive socket #5,5. Use a ratchet wrench.



+ AUTODOC CLUB



10

Install and secure the protective cover under the glove box.



11

Screw in the fasteners of the passenger side kick panel. Use Torx T20.



AUTODOC recommends:

- Replacement: pollen filter VW Transporter VI Platform / Chassis (SFD, SFE, SFL, SFZ). Do not use excessive force during installation. This may damage the fasteners.
- 12 13 14

Return the passenger seat to its initial position.

- Switch on the ignition.
- 4 Switch on the air conditioning system. This is necessary in order to make sure that the component operates properly.
- 15 Switch off the ignition.



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

POLLEN FILTER: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.