



VIDEO TUTORIAL


Important!

This replacement procedure can be used for:

FIAT GRANDE PUNTO (199_) 1.3 D Multijet, FIAT PUNTO (199_) 1.3 D Multijet,
FIAT PUNTO EVO (199_) 1.3 D Multijet, FIAT PUNTO Van (199_) 1.3 D Multijet

The steps may slightly vary depending on the car design.

REPLACEMENT: FRONT LOWER ARM – FIAT PUNTO 199. TOOLS YOU MIGHT NEED:

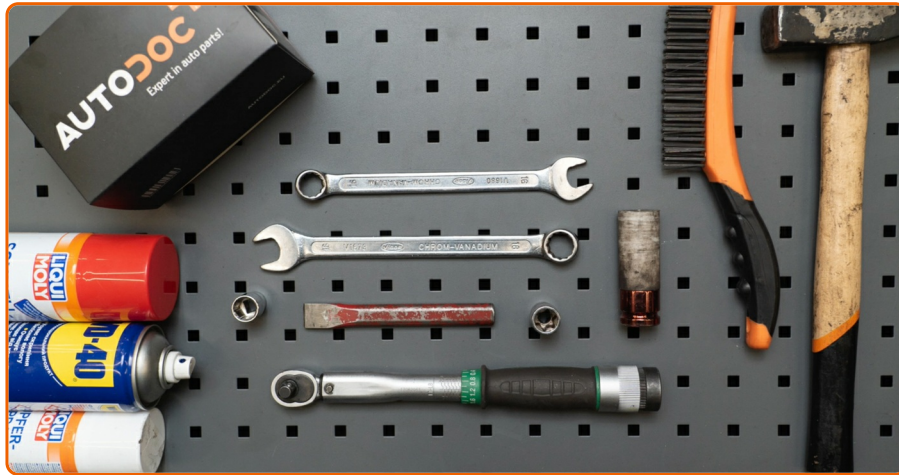


- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #16
- Combination spanner #18
- Drive socket # 16
- Drive socket # E18
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Flat chisel
- Hammer
- Tap wrench
- Hydraulic transmission jack
- Wheel chock

Replacement: front lower arm – Fiat Punto 199. AUTODOC recommends:

- The replacement procedure is identical for the left and right lower control arms.
- All work should be done with the engine stopped.

REPLACEMENT: FRONT LOWER ARM – FIAT PUNTO 199. TAKE THE FOLLOWING STEPS:

1

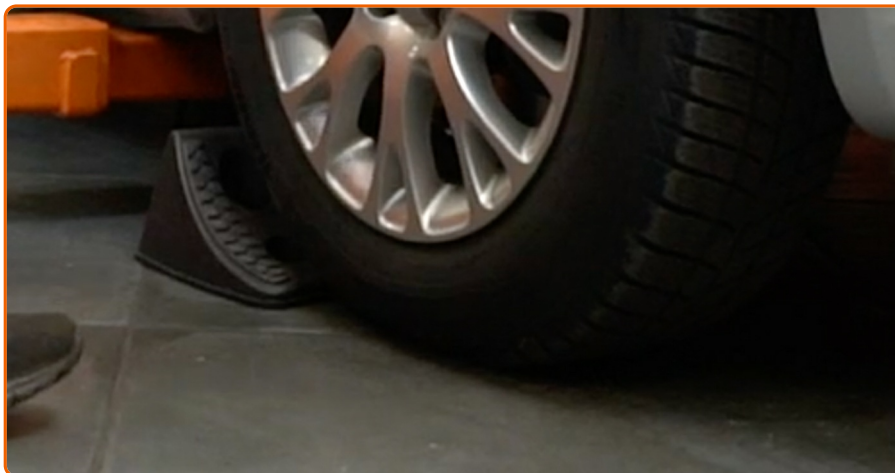

Secure the wheels with chocks.

2



Loosen the wheel mounting bolts. Use wheel impact socket #17.

3



Raise the front of the car and secure on supports.

4



Unscrew the wheel bolts.

AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. Fiat Punto 199

5



Remove the wheel.

6



Clean all joints of the arm. Use a wire brush. Use WD-40 spray.

Replacement: front lower arm – Fiat Punto 199. Tip:

- After applying the spray, wait a few minutes.
- Wear protective goggles.

7




Unscrew the ball joint fastening to the steering knuckle. Use a combination spanner #16. Use a drive socket #16. Use a tap wrench.

8



Remove the fastening bolt.

9

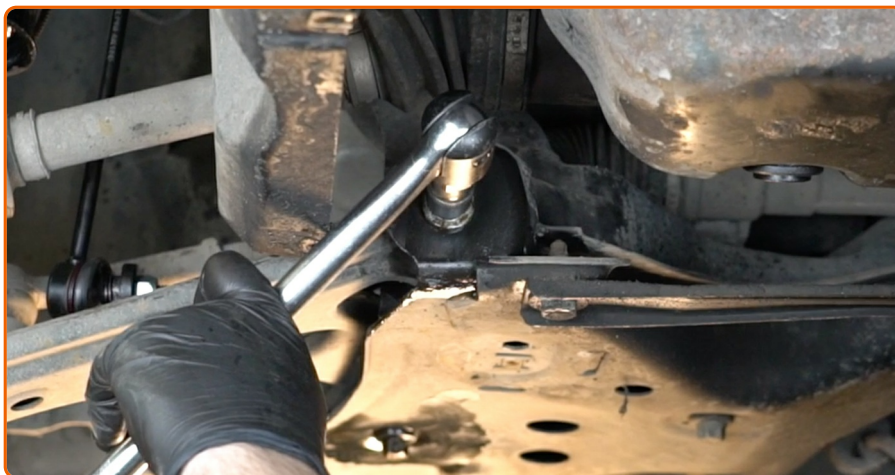

Unscrew the front arm fastener. Use a drive socket #E18. Use a tap wrench.

10



Unscrew the rear fastener connecting the control arm to the subframe. Use a combination spanner #18. Use a drive socket #E18. Use a tap wrench.

11



Remove the fastening bolts. Use a drive socket #E18. Use a ratchet wrench.

12



Release the fastener connecting the ball joint to the steering knuckle. Use a flat metal-working chisel. Use a hammer.

13



Disconnect the ball joint from the steering knuckle.

14



Remove the arm.

15


Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.

16


Install a new arm.

Replacement: front lower arm – Fiat Punto 199. AUTODOC experts recommend:

- During the installation process, use only new bolts and nuts.
- Do not damage the ball joint cover.

17



Install the fastening bolts. Use a combination spanner #18. Use a drive socket #E18. Use a tap wrench.

18



Screw the rear fastener connecting the control arm to the subframe. Use a combination spanner #18. Use a drive socket #E18. Use a ratchet wrench.

19



Support the arm. Use a hydraulic transmission jack.

20



Connect the ball joint to the steering knuckle.

21



Install the fastening bolt.

22



Screw the fasteners of the ball joint. Use a combination spanner #16. Use a drive socket #16. Use a ratchet wrench.


23


Screw the rear fastener connecting the control arm to the subframe. Use a combination spanner #18. Use a drive socket #E18. Use a ratchet wrench.

24


Tighten the front fastener connecting the control arm to the subframe. Use a drive socket #E18. Use a torque wrench. Tighten it to 80 Nm torque.

25

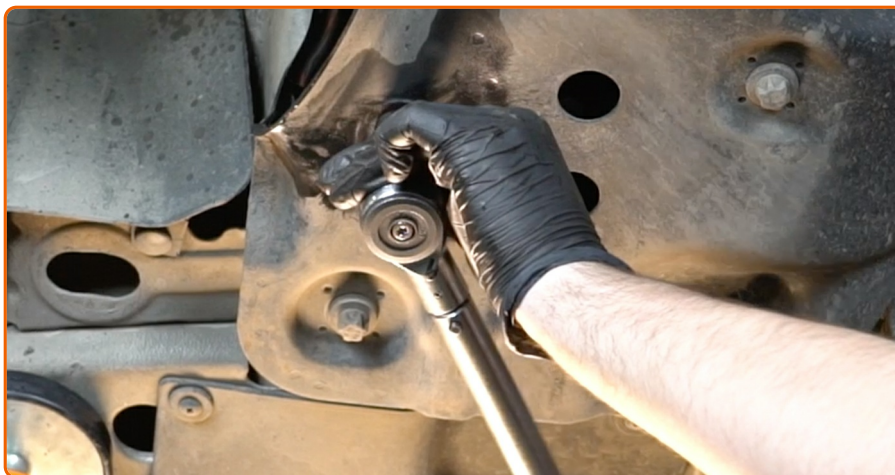

Tighten the rear fastener connecting the arm to the body subframe. Use a drive socket #E18. Use a torque wrench. Tighten it to 80 Nm torque.

26



Tighten the ball joint fastener. Use a drive socket #16. Use a torque wrench. Tighten it to 50 nm torque.

27



Remove the support from under the arm.

AUTODOC recommends:

- Replacement: front lower arm – Fiat Punto 199. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

28




Treat all joints of the arm. Use copper grease.

29



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

30

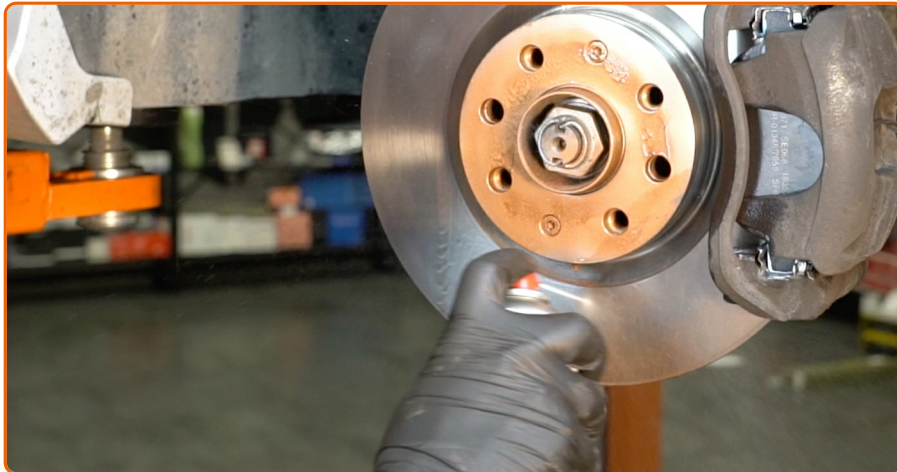

Clean the brake disk surface. Use a brake cleaner.

Replacement: front lower arm – Fiat Punto 199. Tip from AUTODOC:

- After applying the spray, wait a few minutes.

31



Install the wheel.

Replacement: front lower arm – Fiat Punto 199. Professionals recommend:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

32




Screw in the wheel bolts. Use wheel impact socket #17.

33



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.

34

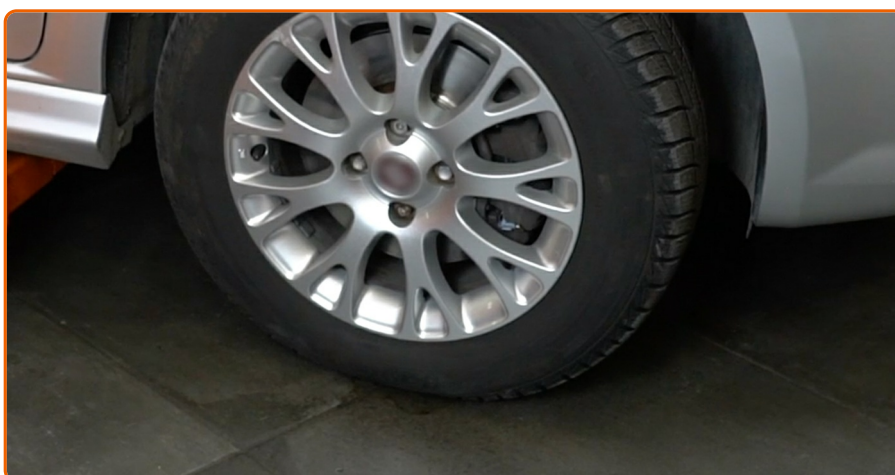

Remove the jacks and chocks.

**DID YOU FIND THESE INSTRUCTIONS
HELPFUL?**

YES

NO



BECOME A MEMBER OF AUTODOC CLUB!


AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



The image shows two smartphones displaying the Autodoc mobile app. The foreground phone shows a 'Bildelkatalog' (Image Catalog) for a Mercedes-Benz 100 Platform-C, featuring a '23% RABATT PÅ RESERVEDELER' (23% discount on spare parts) banner. Below the banner, there are categories: 'ALLE KATEGORIER:' (All categories), 'Vindusvask' (Windshield wipers), 'Oljer og Væsker' (Oils and fluids), 'Bremseanlegg' (Brake system), and 'Filter' (Filters). The background phone shows a collection of car parts on shelves. To the right of the phones, the 'AUTODOC APP' logo is displayed above three download buttons: 'Download', 'Google play', and 'App Store'.

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

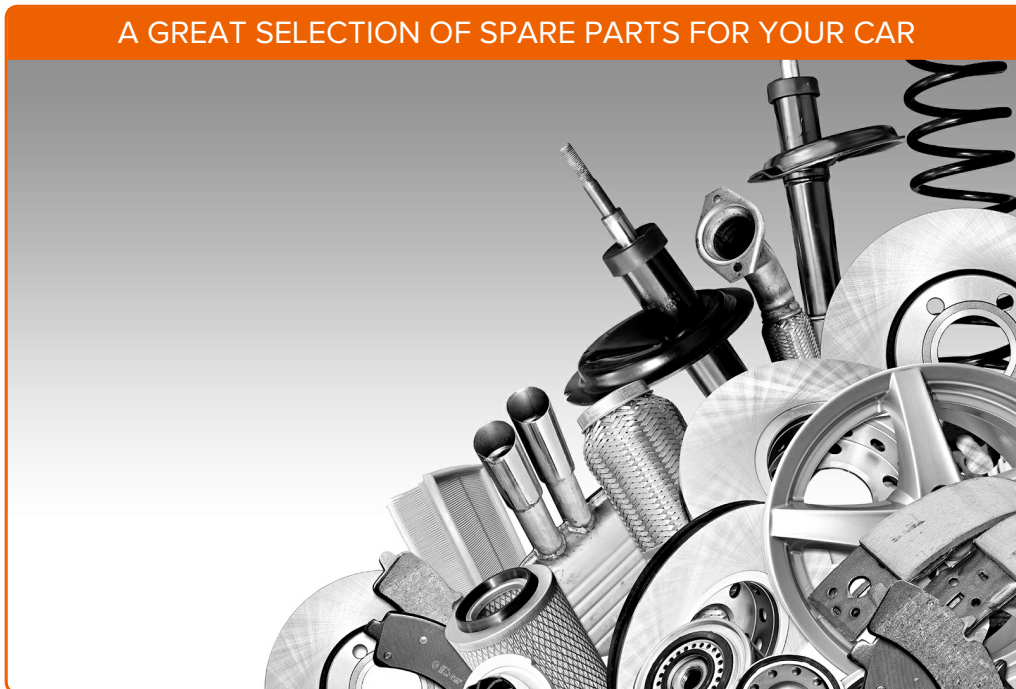

BUY SPARE PARTS FOR FIAT



CONTROL ARM: A WIDE SELECTION



CHOOSE CAR PARTS FOR FIAT PUNTO 199



CONTROL ARM FOR FIAT: BUY NOW



CONTROL ARM FOR FIAT PUNTO 199: THE BEST DEALS & OFFERS



Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AutoDoc shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2018 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by Autodoc GmbH.