









VIDEO TUTORIAL

(i) Important!

This replacement procedure can be used for: OPEL ASTRA G Estate (T98) 1.2 16V (F35), OPEL ASTRA G Hatchback (T98) 1.2 16V (F08, F48), OPEL ASTRA G Saloon (T98) 1.2 16V (F69)

The steps may slightly vary depending on the car design.

WWW.AUTODOC.CO.UK



REQUIRED TOOLS:



- Drive socket # 7
- Torx screwdriver T20
- Fender cover

WWW.AUTODOC.CO.UK 2–18



AUTODOC recommends:

- Replace the cabin filter at least once every six months, in early spring and autumn seasons.
- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- If the air flow into the cabin has sharply reduced, replace the filter before a scheduled maintenance.
- All work should be done with the engine stopped.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1



Move the passenger seat fully backwards.

WWW.AUTODOC.CO.UK 3–18





Spread a cloth under the cabin filter cover to protect the interior upholstery from getting dirty.

3



Unscrew the glove box fastening screws. Use Torx T20.

WWW.AUTODOC.CO.UK 4–18






Remove the glovebox.

AUTODOC recommends:

• Be careful to avoid damaging the glove compartment fasteners.


5

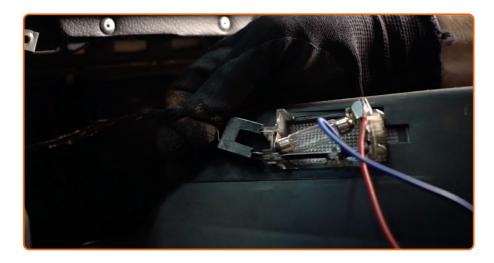

Unplug the glove box light connector.

WWW.AUTODOC.CO.UK 5–18



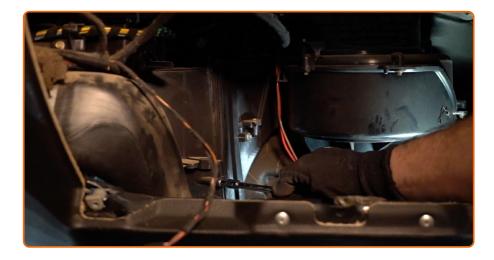

Unscrew the fasteners of the cabin filter housing cover. Use a drive socket #7.

7



Remove the cabin filter cover.

WWW.AUTODOC.CO.UK 6—18





Remove the cabin filter.

AUTODOC recommends:

• Do not attempt to clean and reuse the filter - it will affect the quality of air cleaning inside the car.


9



Clean the mounting seat of the cabin filter.

WWW.AUTODOC.CO.UK 7–18



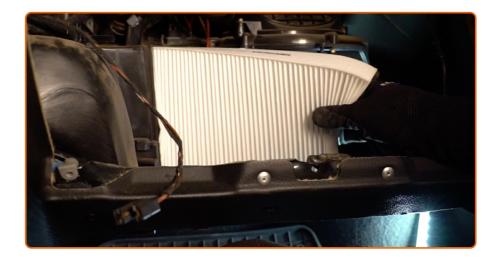

Install the cabin filter to its mounting seat.

AUTODOC recommends:

- Follow the air flow direction arrow on the filter.
- Check out the correct location of the filter element. Do not skew.
- Take care to only use quality filters.

WWW.AUTODOC.CO.UK 8–18



Install the filter cover.

12



Screw in the fasteners of the cabin filter housing cover. Use a drive socket #7.

WWW.AUTODOC.CO.UK 9–18





Plug in the glove box light connector.


14



Install the glove box.

WWW.AUTODOC.CO.UK 10–18



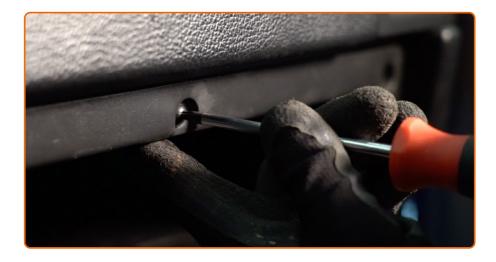

Screw the glove box fastening screws. Use Torx T20.

16



Remove the cloth.

WWW.AUTODOC.CO.UK 11–18





Return the passenger seat to its initial position.


18



Switch on the ignition.

WWW.AUTODOC.CO.UK 12–18



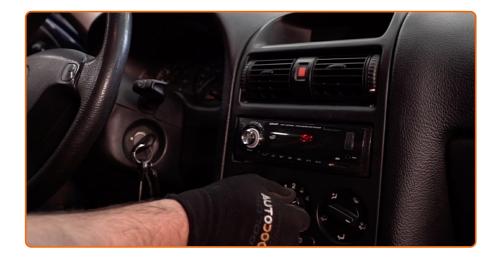

Switch on the air conditioning system. This is necessary in order to make sure that the component operates properly.

20



Switch off the ignition.

WWW.AUTODOC.CO.UK 13–18



DID YOU FIND THESE INSTRUCTIONS HELPFUL?

YES

NO





BECOME A MEMBER OF AUTODOC CLUB!

WWW.AUTODOC.CO.UK 14–18



AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

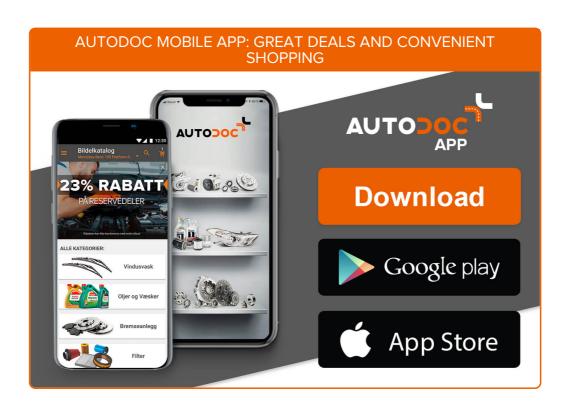

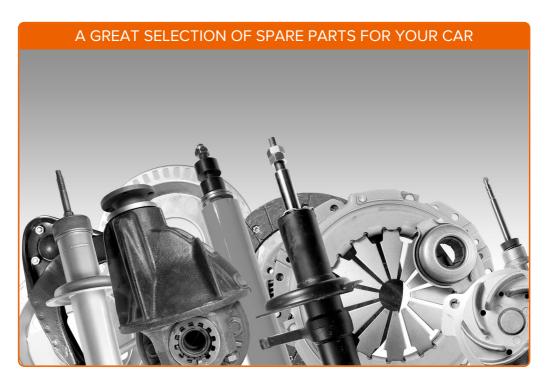

WWW.AUTODOC.CO.UK 15–18







WWW.AUTODOC.CO.UK 16–18







WWW.AUTODOC.CO.UK 17–18





(i) Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AutoDoc shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2018 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by Autodoc GmbH.

WWW.AUTODOC.CO.UK 18–18