- AUTODOC CLUB

How to change ignition coil on **AUDI A3 Convertible (8P7)** – replacement guide



SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: AUDI A3 Convertible (8P7) 1.6, AUDI A3 Convertible (8P7) 1.2 TFSI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Golf V Hatchback (1K1) 1.6

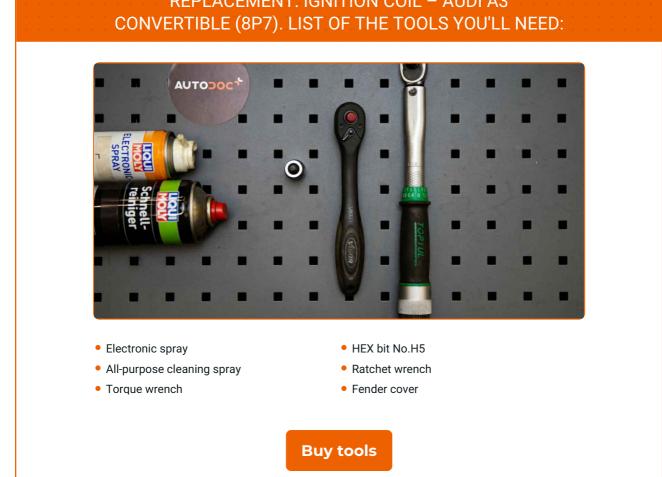

REPLACEMENT: IGNITION COIL – AUDI A3

O

f

+ AUTODOC CLUB





• The replacement procedure is the same for the ignition coils of all cylinders.

 Please note: all work on the car – AUDI A3 Convertible (8P7) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Remove the engine cover.

Open the hood.



AUTODOC recommends:

 Replacement: ignition coil – AUDI A3 Convertible (8P7). Do not use excessive force when removing the part as this may damage it.

+ AUTODOC CLUB



4

Clean the ignition coil bolts. Use all-purpose cleaning spray.



5

Disconnect the spark plug wires from the ignition coil.



Replacement: ignition coil – AUDI A3 Convertible (8P7). AUTODOC recommends:

• Be careful to avoid damaging spark plug wires.

• Remember the position of the spark plug wires.



Detach the connector from the ignition coil.



+ AUTODOC CLUB



7

Unscrew the ignition coil bolts. Use HEX No.H5. Use a ratchet wrench.



8

Take out the ignition coil from the spark plug well.



9

Install the new ignition coil to the spark plug well.



10

Tighten the ignition coil bolts. Use HEX No.H5. Use a torque wrench. Tighten it to 7 nm torque.





11

Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.



AUTODOC recommends:

 Replacement: ignition coil – AUDI A3 Convertible (8P7). After applying the spray, wait a few minutes.



Plug in the ignition coil connector.



13

Connect the spark plug wires to the ignition coil.



Replacement: ignition coil – AUDI A3 Convertible (8P7). AUTODOC recommends:

• Follow the installation sequence.




14

Install the engine cover and secure it.



AUTODOC recommends:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Replacement: ignition coil AUDI A3 Convertible (8P7). Do not use excessive force during installation. This may damage the part.

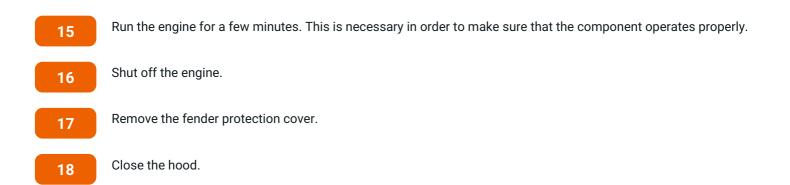



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

IGNITION COIL: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.