



How to change rear
brake pads on
MERCEDES-BENZ GLK
(X204) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

MERCEDES-BENZ GLK (X204) 350 3.5 (204.956), MERCEDES-BENZ GLK (X204) 350 3.5 4-matic (204.988), MERCEDES-BENZ GLK (X204) 350 CDI 3.0 4-matic (204.992), MERCEDES-BENZ GLK (X204) 250 2.0 4-matic (204.937), MERCEDES-BENZ GLK (X204) 280 3.0 4-matic (204.981), MERCEDES-BENZ GLK (X204) 350 3.5 4-matic (204.987), MERCEDES-BENZ GLK (X204) 320 CDI 3.0 4-matic (204.983), MERCEDES-BENZ GLK (X204) 220 CDI 2.2 (204.902), MERCEDES-BENZ GLK (X204) 220 CDI 2.2 4-matic (204.984, 204.997), MERCEDES-BENZ GLK (X204) 250 CDI 2.2 4-matic (204.982, 204.904), MERCEDES-BENZ GLK (X204) 300 3.0 4-matic (204.981), MERCEDES-BENZ GLK (X204) 220 CDI 2.2 4-matic (204.984), MERCEDES-BENZ GLK (X204) 200 CDI 2.2 (204.901), MERCEDES-BENZ GLK (X204) 250 2.0 (204.936), MERCEDES-BENZ GLK (X204) 200 2.0 (204.934), (+ 2)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: MERCEDES-BENZ C-Class Saloon (W204) C 220 CDI (204.008)

REPLACEMENT: BRAKE PADS – MERCEDES-BENZ GLK (X204). LIST OF THE TOOLS YOU'LL NEED:

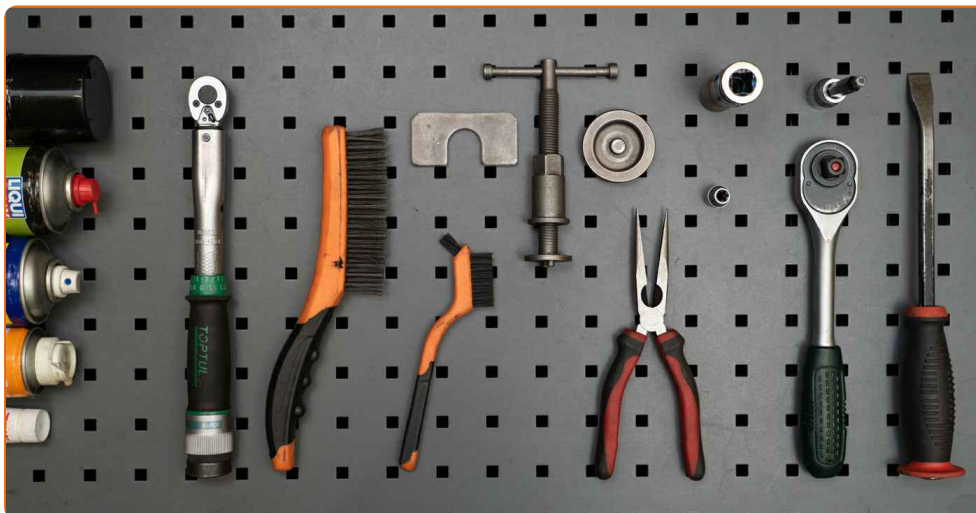

- Wire brush
- Nylon cleaning brush
- WD-40 spray
- Electronic spray
- Brake cleaner
- Anti-squeal paste
- Ceramic grease
- Torque wrench
- Torx bit E10
- HEX bit no.H7
- Wheel impact socket #17
- Ratchet wrench
- Long nose pliers
- Brake caliper wind back tool
- Crow bar
- Wheel chock

Buy tools

Replacement: brake pads – MERCEDES-BENZ GLK (X204). AUTODOC experts recommend:

- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- Please note: all work on the car – MERCEDES-BENZ GLK (X204) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet. Unscrew the brake fluid reservoir cap.

2 Secure the wheels with chocks.

3 Loosen the wheel mounting bolts. Use wheel impact socket #17.




4 Raise the car.

Replacement: brake pads – MERCEDES-BENZ GLK (X204). Tip from AUTODOC:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

5

Unscrew the wheel bolts.

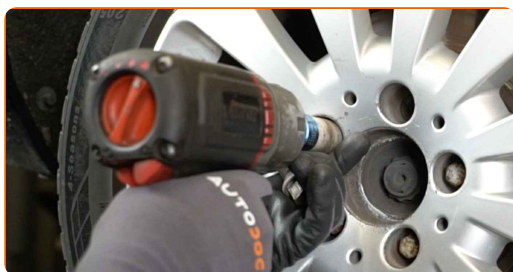


AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. MERCEDES-BENZ GLK (X204)


6

Remove the wheel.

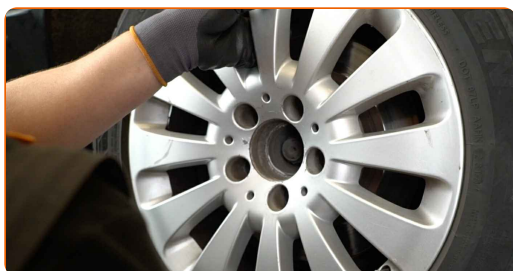

7

Detach the connector of the brake pad wear sensor. Use long nose pliers.

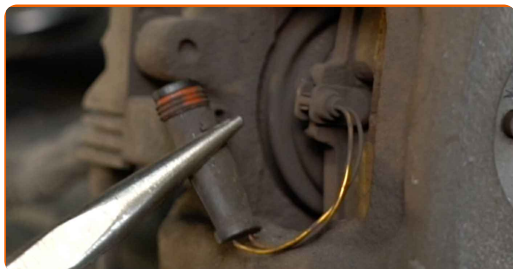


8

Clean the fasteners of the brake pad wear sensor wiring harness. Use a wire brush. Use WD-40 spray.




9

Unscrew the fasteners of the brake pad wear sensor wiring harness. Use Torx E10. Use a ratchet wrench.

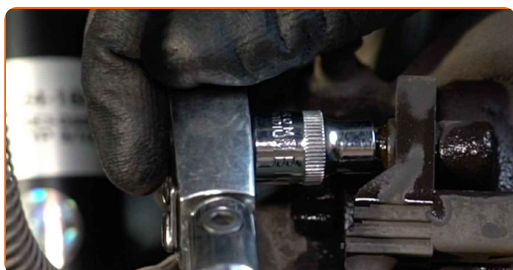

10


Remove the fastening bolt.

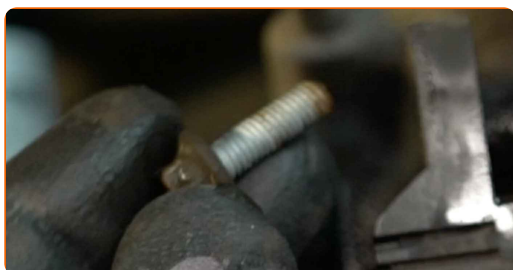


11 Detach the brake pad wear sensor wiring harness.




12 Detach the brake caliper retaining spring. Use a crowbar.

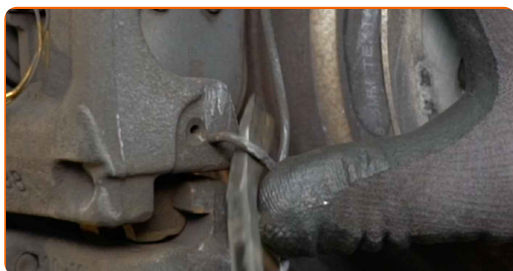


13 Remove the dust boot caps of the brake caliper guide pins. Use a crowbar.

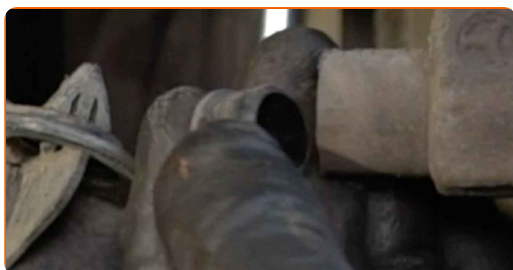

14 Unscrew the brake caliper fasteners. Use HEX No.H7. Use a ratchet wrench.

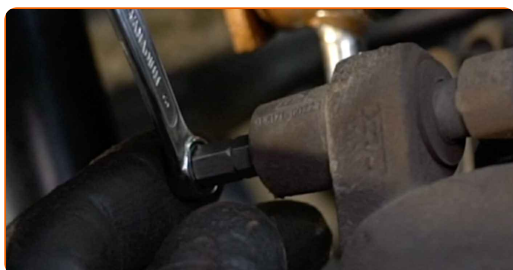


15 Spread the brake pads. Use a crowbar.

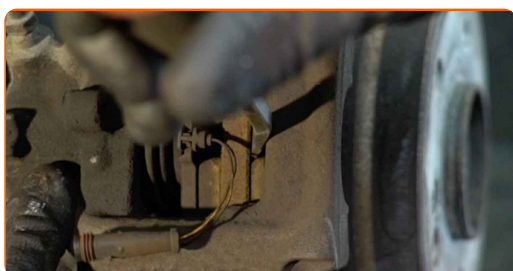

16

Remove the brake caliper.

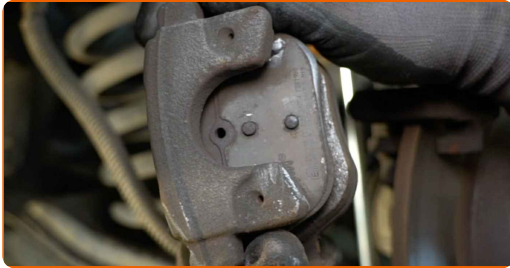


Replacement: brake pads – MERCEDES-BENZ GLK (X204). AUTODOC experts recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

17

Remove the brake pads.

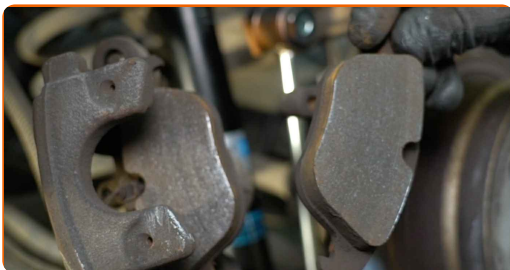

AUTODOC recommends:

- Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

18

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.




AUTODOC recommends:

- Replacement: brake pads – MERCEDES-BENZ GLK (X204). After applying the spray, wait a few minutes.

19


Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.

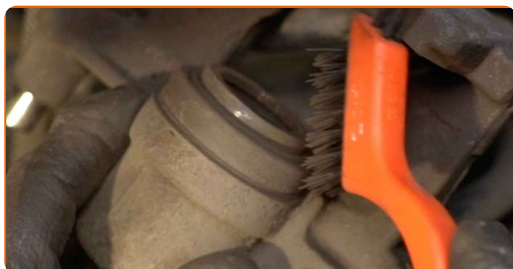

AUTODOC recommends:

- After applying the spray, wait a few minutes.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

20 Press in the brake caliper piston. Use brake caliper wind back tool.

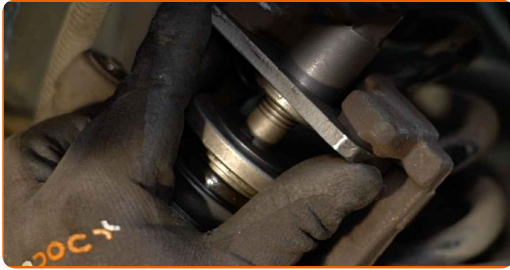

21 Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.




Replacement: brake pads – MERCEDES-BENZ GLK (X204). Professionals recommend:

- Make sure the disc surface is clean before installing the pads.


22 Install new brake pads.




23 Install the brake caliper and fix it.

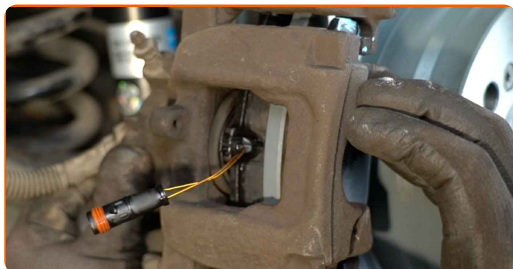


24 Tighten the brake caliper fasteners. Use HEX No.H7. Use a torque wrench. Tighten it to 25 Nm torque.

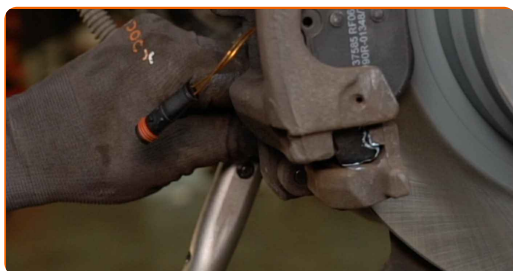


25 Install the dust boot caps of the brake caliper guide pins.

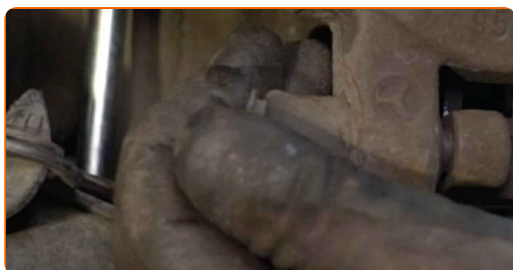

26 Attach the brake pad wear sensor wiring harness.

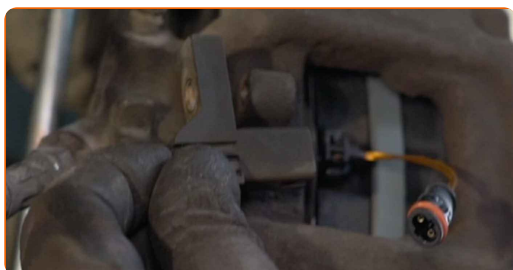


27 Install the fastening bolt.

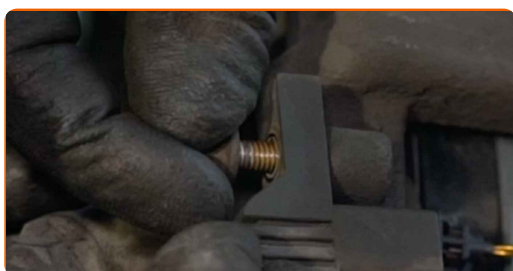


- 28 Tighten the fasteners of the brake pad wear sensor wiring harness. Use Torx E10. Use a torque wrench. Tighten it to 8 Nm torque.



- 29 Treat the brake pad wear sensor plug. Use dielectric grease.

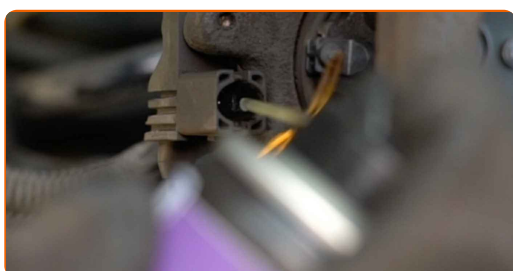

- 30 Attach the connector of the brake pad wear sensor.

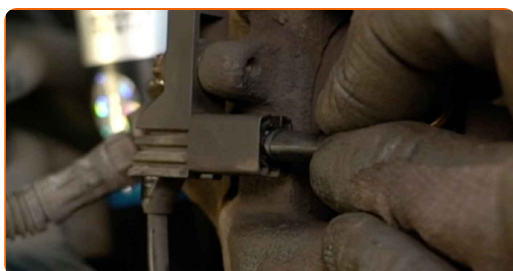

- 31 Install the brake caliper retaining spring.



- 32 Clean the wheel rim mounting seat. Use a wire brush.



33 Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.



34 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- After applying the spray, wait a few minutes.


35 Install the wheel.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. MERCEDES-BENZ GLK (X204)


36 Screw in the wheel bolts. Use wheel impact socket #17.

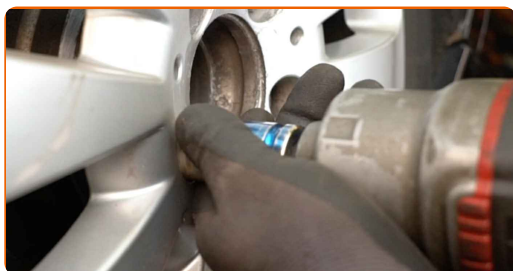

37 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 130 Nm torque.

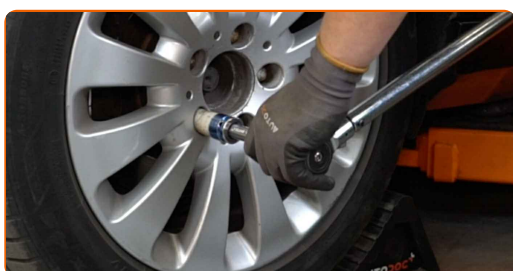

38 Remove the jacks and chocks.

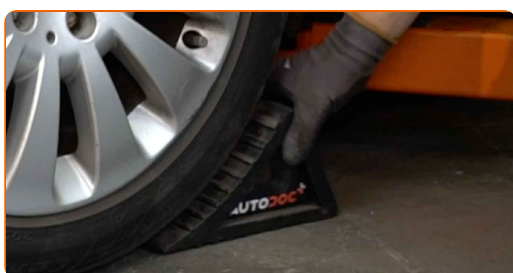


AUTODOC recommends:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.
- Check the brake fluid level in the expansion tank and refill if necessary.

39

Tighten the brake fluid reservoir cap. Close the hood.

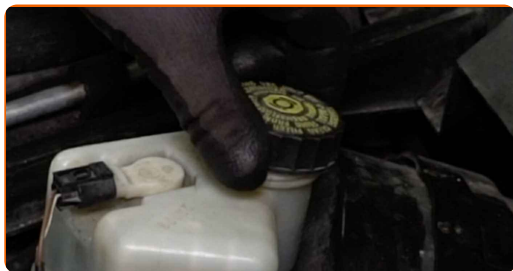

Replacement: brake pads – MERCEDES-BENZ GLK (X204). Tip from AUTODOC experts:

- Slow down smoothly for first 150-200 km after the brake pads replacement. Avoid unnecessary and sharp braking to a stop.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE PADS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.