



How to change coolant
expansion tank on
NISSAN Interstar Van
(X70) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

NISSAN INTERSTAR Box (X70) 1.9 dCi 80, NISSAN INTERSTAR Box (X70) 2.2 dCi 90, NISSAN INTERSTAR Box (X70) dCi 115, NISSAN INTERSTAR Box (X70) 3.0 dCi 140, NISSAN INTERSTAR Box (X70) 2.5 dCi 100, NISSAN INTERSTAR Box (X70) dCi 120, NISSAN INTERSTAR Box (X70) dCi 150, NISSAN INTERSTAR Box (X70) dCi 100

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT MASTER II Box (FD) 2.2 dCi

REPLACEMENT: COOLANT EXPANSION TANK – NISSAN INTERSTAR VAN (X70). TOOLS YOU MIGHT NEED:

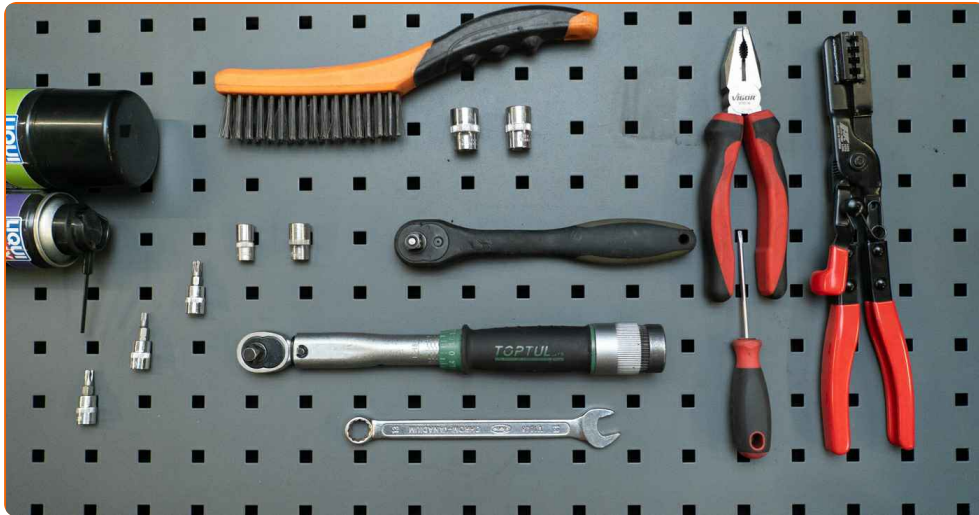

- Electronic spray
- Wire brush
- Nylon brush
- All-purpose cleaning spray
- Paper towels
- Torque wrench
- 13 mm combination spanner
- 7 mm socket
- 10 mm socket
- 12 mm socket
- 13 mm socket
- T20 Torx bit
- T30 Torx bit
- T40 Torx bit
- Ratchet wrench or power tool for removal/installation of threaded fasteners
- Ratchet screwdriver
- Combination pliers
- Slotted screwdriver
- Hose clamp pliers
- Hose removal pliers
- Funnel
- Fluid drain pan
- Cable ties

Buy tools

Replacement: coolant expansion tank – NISSAN Interstar Van (X70). AUTODOC recommends:

- Follow the recommendations and requirements for part operation provided by the manufacturer.
- All the work should be carried out with the engine cooled down and ignition switched off.

REPLACEMENT: COOLANT EXPANSION TANK – NISSAN INTERSTAR VAN (X70). TAKE THE FOLLOWING STEPS:

1 Open the bonnet.

2 Use a fender protection cover to avoid damaging the paintwork and plastic parts of the car.

3 Lift the vehicle using a vehicle lift or place it over an inspection pit.

4 Prepare a fluid drain pan.




5 Clean the area where the hose is connected to the oil cooler. Use a nylon brush. Use an all-purpose cleaning spray.



6

Disconnect the hose from the oil cooler after releasing the hose clamp. Use combination pliers.

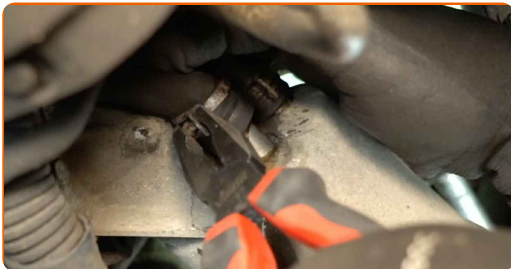

7

Unscrew the coolant expansion tank cap.



Replacement: coolant expansion tank – NISSAN Interstar Van (X70). Tip from AUTODOC experts:

- Wait until the coolant has completely flowed out of the hose.

8

Clean the tip of the oil cooler where the hose attaches. Use an all-purpose cleaning spray.




- 9 Connect the hose to the oil cooler. Use combination pliers.



- 10 Lower the vehicle.


- 11 Disconnect the hoses from the expansion tank. Use hose clamp pliers. Use hose removal pliers.

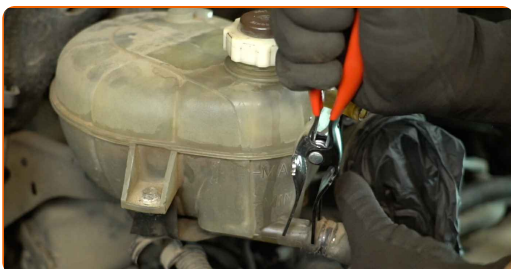


Caution!

- Block the hoses to stop contaminants from getting in.
- Use paper towels.

- 12 Unscrew the coolant expansion tank fastener. Use a 10 mm socket. Use a ratchet wrench.

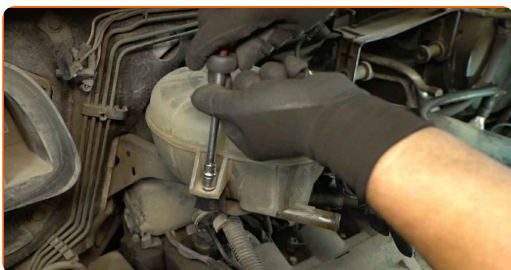

13 Remove the fastening bolt.

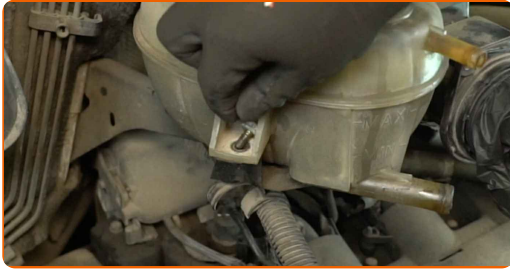

14 Remove the coolant expansion tank, releasing it from its bracket.




15 Install the new coolant expansion tank on its bracket until it clicks on.



16 Install the fastening bolt.



17 Tighten the expansion tank fastener. Use a 10 mm socket. Use a ratchet wrench.

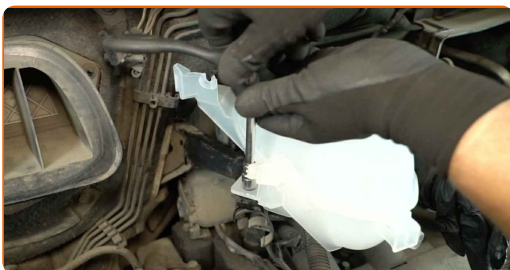

18

Clean the expansion tank hoses. Use an all-purpose cleaning spray. Remove the paper towels.



19

Connect the hoses to the expansion tank. Use hose clamp pliers.



20

Remove the coolant reservoir cap.




21

Insert the funnel.



22

Pour coolant into the reservoir.

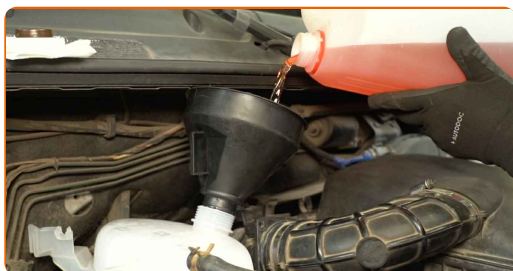

Replacement: coolant expansion tank – NISSAN Interstar Van (X70). AUTODOC recommends:

- Only use the coolant recommended by the manufacturer.

23

Loosen the coolant bleed screw. Use a slotted screwdriver.




Important!

- Wait until the air goes out of the system.

24

Tighten the coolant bleed screw.

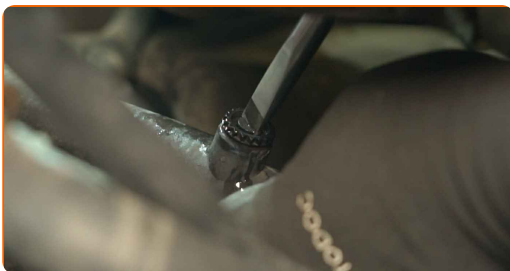

25

Clean the screw and the area around it to remove any coolant. Use an all-purpose cleaning spray.




26 Top up the coolant in the expansion tank.

Replacement: coolant expansion tank – NISSAN Interstar Van (X70). Tip:

- The coolant level should be at the MAX mark on the reservoir.

27 Put the coolant reservoir cap back on and tighten it.

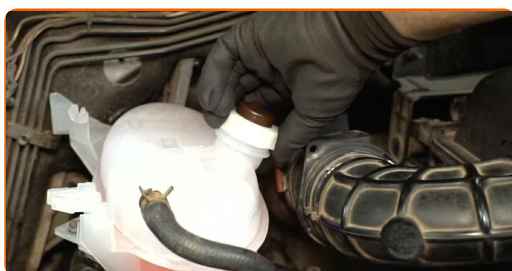

28 Run the engine for a few minutes. This should be done in order to remove residual air from the cooling system and to check that the components are operating correctly and there are no leaks.



29 Shut off the engine and let it cool down.

30 Top up the coolant to the MAX mark without exceeding it.



31 Remove the fender cover.

32


Close the bonnet.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

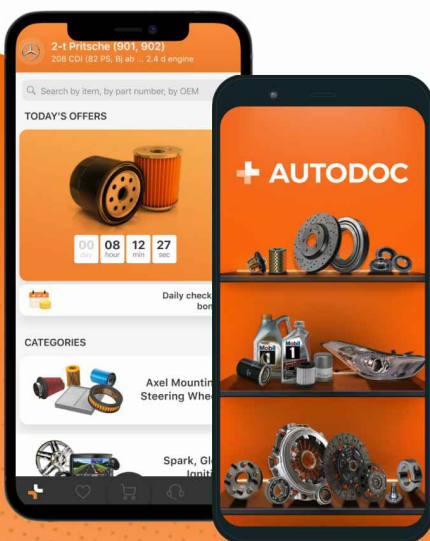

+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

COOLANT EXPANSION TANK: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2025 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.