



How to change rear coil  
springs on **Skoda**  
**Octavia 1U** –  
replacement guide

## VIDEO TUTORIAL



### **i Important!**

This replacement procedure can be used for:

SKODA OCTAVIA (1U2) 1.6, SKODA OCTAVIA (1U2) 1.8, SKODA OCTAVIA (1U2) 1.9 TDI, SKODA OCTAVIA (1U2) 1.9 SDI, SKODA OCTAVIA (1U2) 1.8 T, SKODA OCTAVIA (1U2) 2.0, SKODA OCTAVIA (1U2) 1.4, SKODA OCTAVIA (1U2) 1.4 16V

The steps may slightly vary depending on the car design.

## REPLACEMENT: COIL SPRINGS – SKODA OCTAVIA 1U. TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- High-temperature ceramic grease
- Torque wrench
- Combination spanner #16
- Drive socket # 16
- Wheel impact socket #17
- Ratchet wrench
- Hydraulic transmission jack
- Crow bar
- Hammer
- Wheel chock

[BUY TOOLS](#)


### Replacement: coil springs – Skoda Octavia 1U. AUTODOC recommends:

- Both coil springs of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the rear suspension.
- Please note: all work on the car – Skoda Octavia 1U – should be done with the engine switched off.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Secure the wheels with chocks.

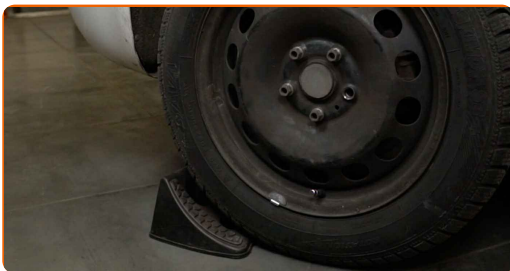

2

Loosen the wheel mounting bolts. Use wheel impact socket #17.

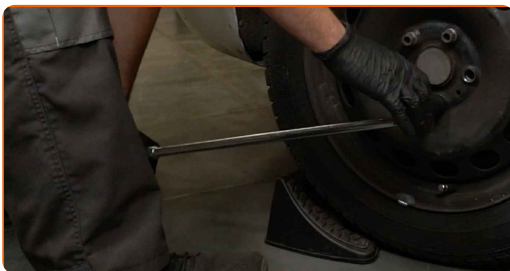

3

Raise the rear of the car and secure on supports.



4

Unscrew the wheel bolts.




### AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.  
Skoda Octavia 1U


5

Remove the wheel.

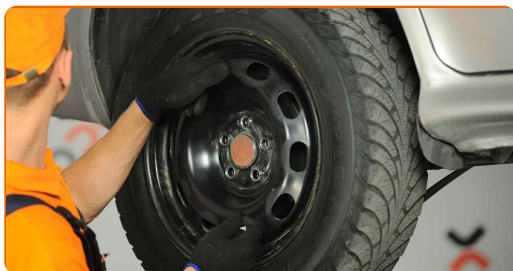

6


Support the rear suspension beam. Use a hydraulic transmission jack.

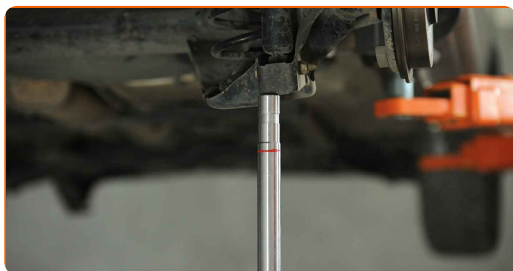

7

Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.

- 8 Unscrew the lower fastener of the shock absorber. Use a combination spanner #16. Use a drive socket #16. Use a ratchet wrench.

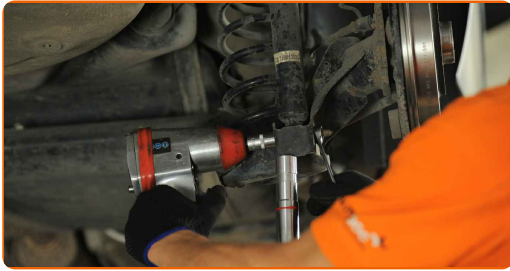

- 9 Remove the fastening bolt.


- 10 Remove the mounting from under the rear axle beam.

### AUTODOC recommends:


- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.

- 11 Pull down the rear suspension beam. Use a crowbar.

- 12 Take out the spring.

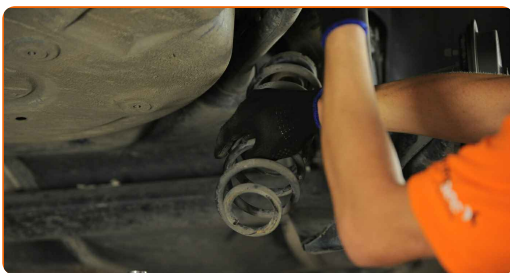

- 13 Remove the rubber spring spacer.

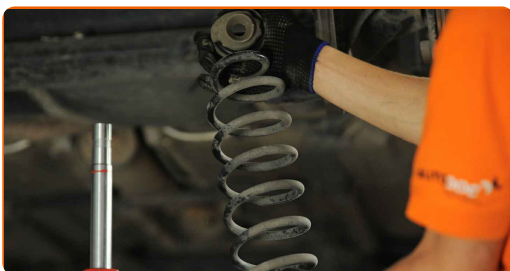


## Replacement: coil springs – Skoda Octavia 1U. Professionals recommend:

- Inspect the rubber mounts of the suspension spring. Replace if necessary.

14

Install the rubber spacer on the new coil spring.

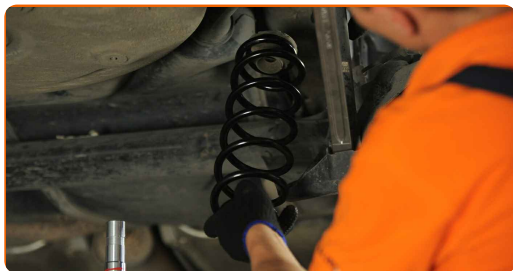


15

Pull down the rear suspension beam. Use a crowbar.


16

Install the coil spring together with the rubber mounts into the mounting seats.

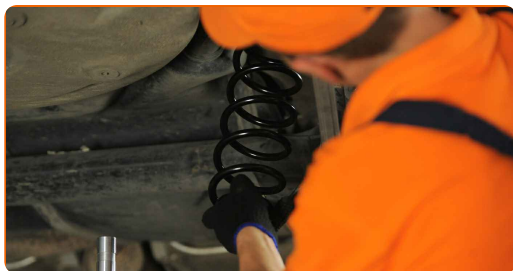

17


Support the rear suspension beam. Use a hydraulic transmission jack.

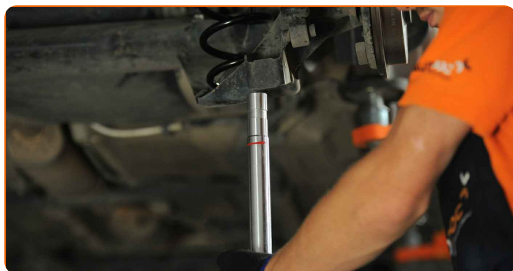


18

Install the fastening bolt. Use a hammer.

19 Raise the hydraulic transmission jack by 10-15 cm.

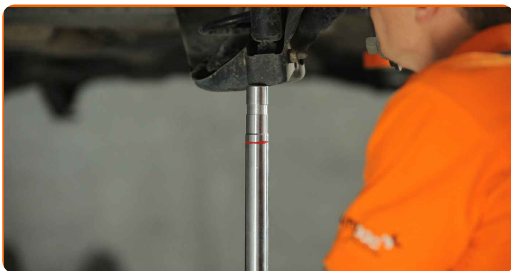

20 Tighten the lower fastener of the shock absorber. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 40 Nm torque. +90°

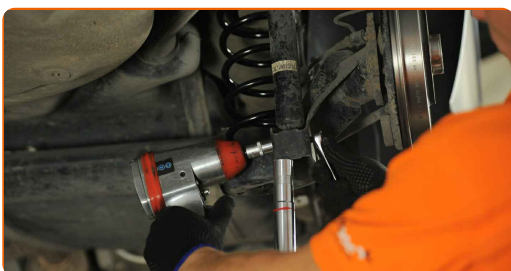


21 Remove the mounting from under the rear axle beam.

### Replacement: coil springs – Skoda Octavia 1U. Tip from AUTODOC experts:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.

22 Treat the shock absorber fasteners. Use copper grease.


23 Clean the wheel rim mounting seat. Use a wire brush.

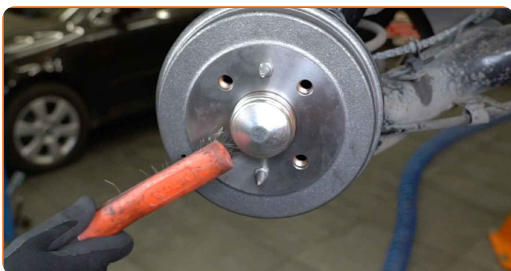




24

Treat the surface where the wheel rim contacts the brake drum. Use high-temperature ceramic grease.

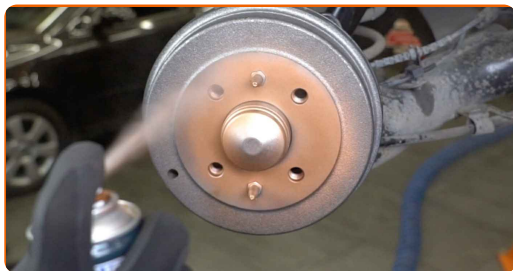

25

Install the wheel.

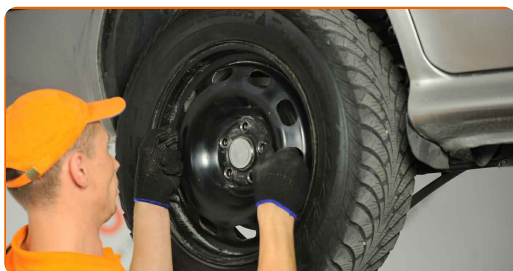


### AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. Skoda Octavia 1U


26

Screw in the wheel bolts. Use wheel impact socket #17.

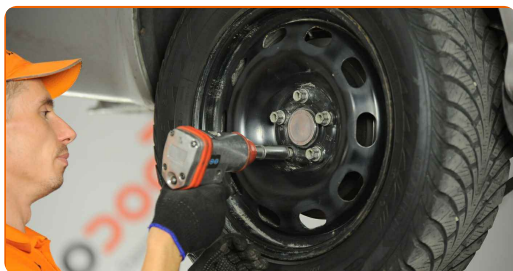


**27**

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.

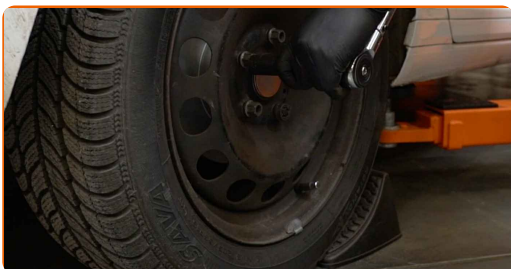**28**

Remove the jacks and chocks.

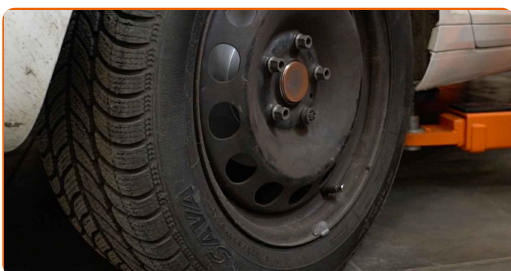

**WELL DONE!** 

**VIEW MORE TUTORIALS**

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR SKODA**

**COIL SPRINGS: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR SKODA OCTAVIA 1U**

**COIL SPRINGS FOR SKODA: BUY NOW**

**COIL SPRINGS FOR SKODA OCTAVIA 1U: THE BEST DEALS & OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.