



How to change front
brake pads on **Volvo V70**
BW – replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

VOLVO V60 (155, 157) 2.0 T, VOLVO V60 (155, 157) 2.0 D3 / D4, VOLVO V60 (155, 157) 2.4 D5, VOLVO V60 (155, 157) 2.4 D5 AWD, VOLVO V60 (155, 157) 1.6 T3, VOLVO V60 (155, 157) 1.6 T4, VOLVO V60 (155, 157) 2.0 T5, VOLVO V60 (155, 157) 3.0 T6 AWD, VOLVO V70 III (135) 1.6 T4, VOLVO S80 II (124) 1.6 T4, VOLVO S80 II (124) 2.0 T5, VOLVO S80 II (124) 3.0 T6 AWD, VOLVO S80 II (124) 2.0 D3 / D4, VOLVO XC70 II Estate (136) 3.2 AWD, VOLVO XC70 II Estate (136) 3.0 T6 AWD, (+ 89)

The steps may slightly vary depending on the car design.

REPLACEMENT: BRAKE PADS – VOLVO V70 BW. TOOLS YOU MIGHT NEED:



- Wire brush
- Nylon cleaning brush
- WD-40 spray
- Brake cleaner
- Anti-squeal paste
- Ceramic grease
- Torque wrench
- Drive socket # 18
- HEX bit No.H7
- Torx bit T50
- Wheel impact socket #19
- Ratchet wrench
- Tap wrench
- Brake caliper wind back tool
- Hammer
- Crow bar
- Impact screwdriver
- Wheel chock

BUY TOOLS


Replacement: brake pads – Volvo V70 BW. Tip:

- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- All work should be done with the engine stopped.


REPLACEMENT: BRAKE PADS – VOLVO V70 BW. RECOMMENDED SEQUENCE OF STEPS:

1

Open the bonnet.

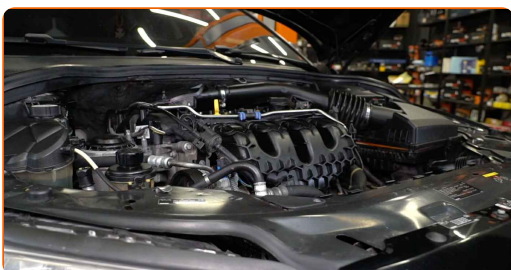**2**

Unscrew the brake fluid reservoir cap.

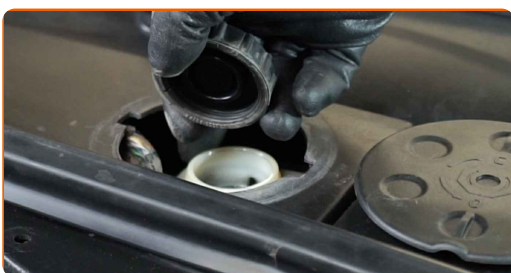**3**

Secure the wheels with chocks.

4

Loosen the wheel bolts. Use wheel impact socket #19. Use a tap wrench.



5

Raise the car.




AUTODOC recommends:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

6

Unscrew the wheel bolts.

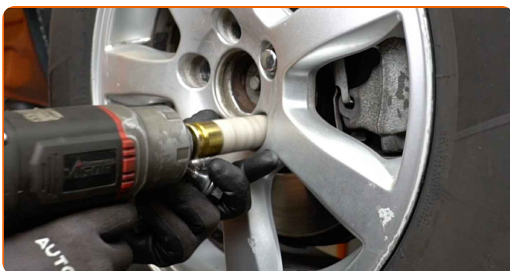


AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. Volvo V70 BW

7

Remove the wheel.

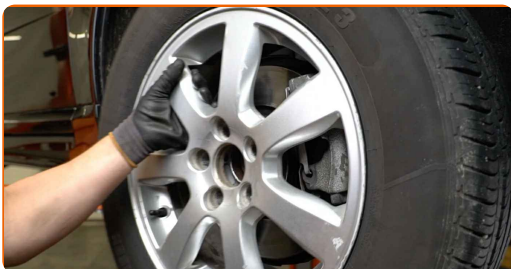


8

Spread the brake pads. Use a crowbar.




9

Detach the brake caliper retaining spring. Use a crowbar.

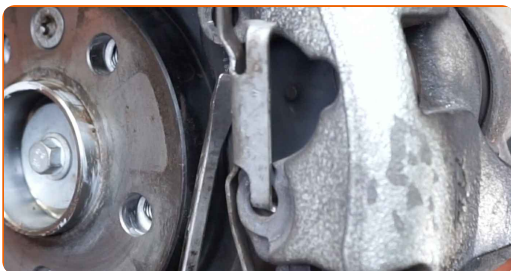

10

Remove the caps from the brake caliper guide pin boots. Use a crowbar.

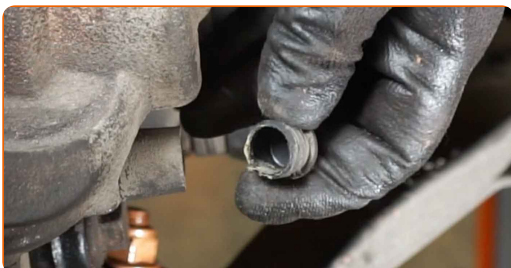


11

Unscrew the brake caliper fasteners. Use HEX No.H7. Use a ratchet wrench.



12

Remove the brake caliper.

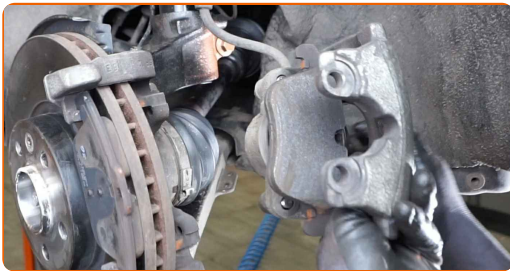

Replacement: brake pads – Volvo V70 BW. AUTODOC recommends:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

13

Remove the brake pads.



AUTODOC recommends:

- Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

14


Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.

AUTODOC recommends:


- After applying the spray, wait a few minutes.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

15


Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.

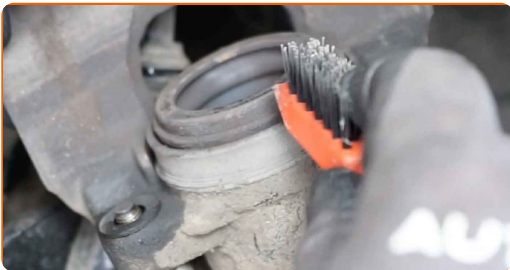

16 Press in the brake caliper piston. Use brake caliper wind back tool.

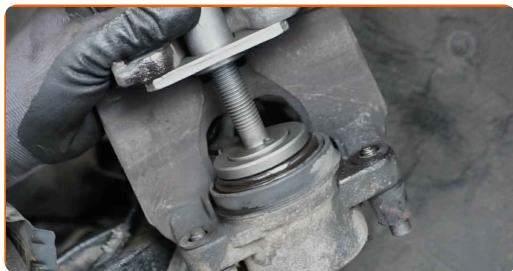

17 Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.

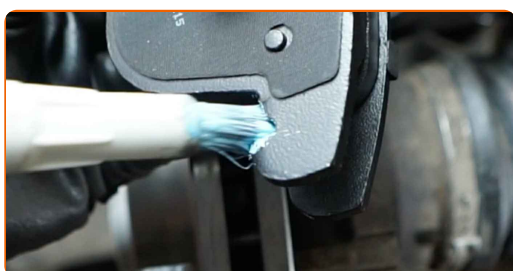


AUTODOC recommends:

- Make sure the disc surface is clean before installing the pads.


18 Install new brake pads.




19 Install the brake caliper and fasten it.

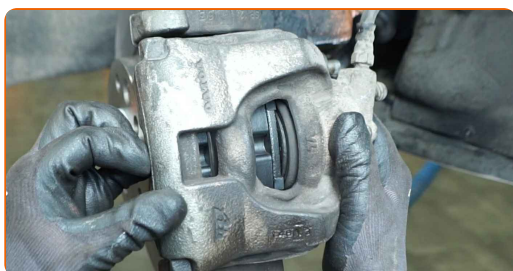


20 Tighten the brake caliper fasteners. Use HEX No.H7. Use a torque wrench. Tighten it to 28 Nm torque.

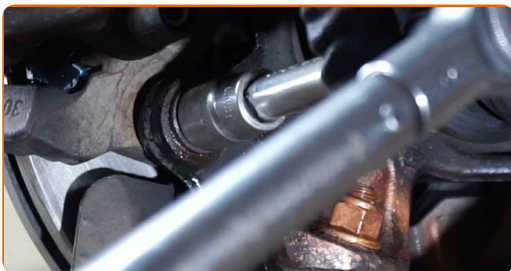

21 Install the caps on the brake caliper guide pin boots.

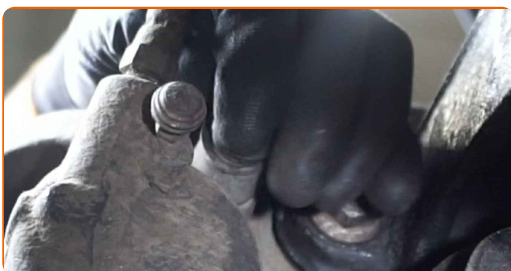

22 Install the brake pad retaining clip.

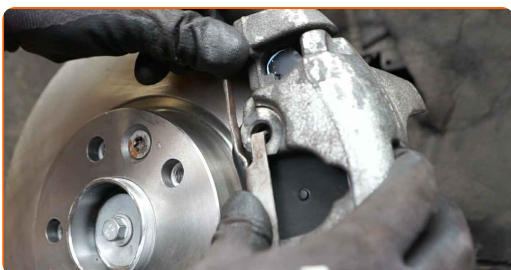


23 Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.

24 Clean the brake disk surface. Use a brake cleaner.




25 Install the wheel.

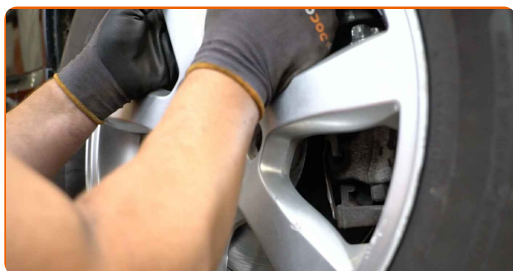

Replacement: brake pads – Volvo V70 BW. AUTODOC experts recommend:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

26 Screw in the wheel bolts. Use wheel impact socket #19. Use a ratchet wrench.

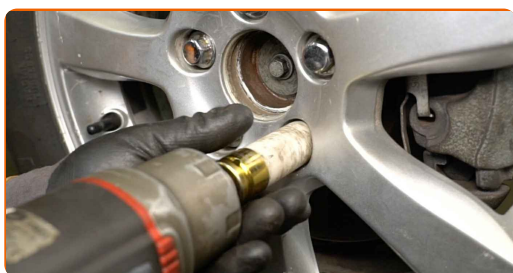


27 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 140 Nm torque.



28

Remove the jacks and chocks.

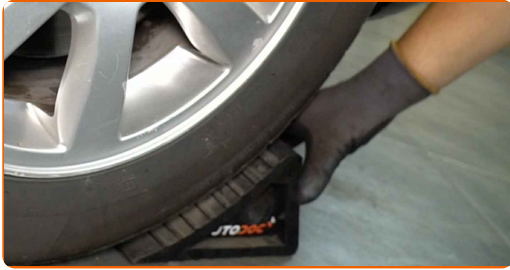

AUTODOC recommends:

- Volvo V70 BW – Press the brake pedal several times with the engine shut down until you feel the resistance built up.
- Check the brake fluid level in the expansion tank and top up if necessary.


29

Tighten the brake fluid reservoir cap.



30

Close the bonnet.

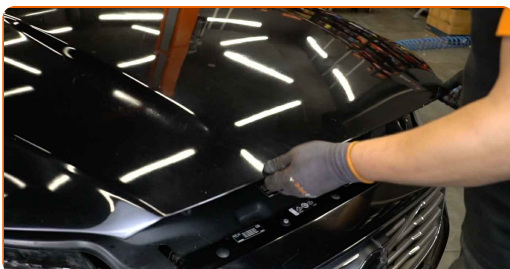

Replacement: brake pads – Volvo V70 BW. Tip from AUTODOC:

- Slow down smoothly for first 150-200 km after the brake pads replacement. Avoid unnecessary and sharp braking to a stop.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VOLVO

BRAKE PADS: A WIDE SELECTION

CHOOSE CAR PARTS FOR VOLVO V70 BW

BRAKE PADS FOR VOLVO: BUY NOW

BRAKE PADS FOR VOLVO V70 BW: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.