# **+** AUTODOC CLUB

How to change fuel filter on **VOLVO S40 I (VS, 644)** – replacement guide







#### SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### (i) Important!

This replacement procedure can be used for:

VOLVO S40 I (VS, 644) 1.8, VOLVO S40 I (VS, 644) 2.0, VOLVO S40 I (VS, 644) 1.6, VOLVO S40 I (VS, 644) 1.9 T4, VOLVO S40 I (VS, 644) 2.0 T, VOLVO S40 I (VS, 644) 1.8 i, VOLVO S40 I (VS, 644) 2.0 T4

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VOLVO V70 II (SW, 285) 2.0 T


CLUB.AUTODOC.CO.UK 1–9







## REPLACEMENT: FUEL FILTER - VOLVO S40 I (VS, 644). TOOLS YOU'LL NEED:

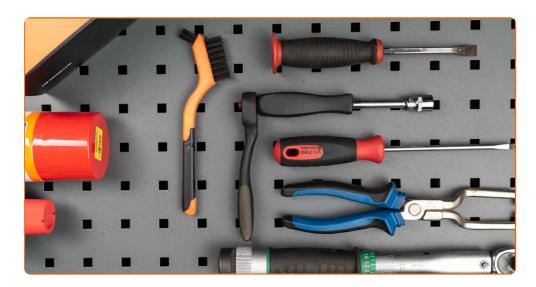

- Wire brush
- WD-40 spray
- All-purpose cleaning spray
- Drive socket # 12
- Ratchet wrench

- Torque wrench
- Fluid container
- Fuel line pliers
- Flat Screwdriver
- Crow bar

**Buy tools** 

CLUB.AUTODOC.CO.UK 2-9







#### Replacement: fuel filter – VOLVO S40 I (VS, 644). AUTODOC recommends:

- Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.
- All work should be done with the engine stopped.

# REPLACEMENT: FUEL FILTER – VOLVO S40 I (VS, 644). RECOMMENDED SEQUENCE OF STEPS:

- 1 Open the fuel door.
- 2 Unscrew the fuel filler cap.
- Lift the car using a jack or place it over an inspection pit.
- Prepare a container for fluids.

5



Clean the fasteners of the fuel supply lines. Use a wire brush. Use all-purpose cleaning spray.



CLUB.AUTODOC.CO.UK 3–9







6 Clean the fuel filter bracket. Use a wire brush. Use WD-40 spray.



7 Unscrew the cap of the pressure control valve.



Press on the pressure control valve. Use a flat screwdriver.



Squeeze the clips and detach the fuel supply lines from the fuel filter housing. Use fuel line pliers. Use a crowbar.



9

Replacement: fuel filter – VOLVO S40 I (VS, 644). Professionals recommend:

• Be careful! Fuel may leak from the filter housing and hoses.

CLUB.AUTODOC.CO.UK 4–9







Unscrew the fuel filter bracket fixing bolts. Use a drive socket #12. Use a ratchet wrench.



Remove the fuel filter together with its bracket.



Remove the fuel filter.



- Put the old filter cartridge in the container.
- 14 Install a new fuel filter.



CLUB.AUTODOC.CO.UK 5–9







15 Install the new fuel filter together with its bracket.



Screw the fixing bolts of the fuel filter bracket. Use a drive socket #12. Use a ratchet wrench.



## Replacement: fuel filter – VOLVO S40 I (VS, 644). AUTODOC experts recommend:

- Make sure that the fuel filter is positioned correctly. Consider the fuel flow direction mark.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- Take care to only use quality filters.
- Connect the fuel lines to the fuel filter and lock the fastening clips.
- Tighten the fuel filter fasteners. Use a drive socket #12. Use a torque wrench. Tighten it to 25 Nm torque.



CLUB.AUTODOC.CO.UK 6–9







Screw on the cap of the pressure control valve.



Take the fluid container away from under the fuel filter.



- Lower the car.
- Tighten the fuel filler cap.
- Close the fuel door.

### Replacement: fuel filter – VOLVO S40 I (VS, 644). AUTODOC recommends:

- Before starting off, switch the ignition on and off several times. This should be done to activate the fuel pump to make it pump fuel through the fuel system.
- Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.
- 25 Shut off the engine.

CLUB.AUTODOC.CO.UK 7–9







### Replacement: fuel filter - VOLVO S40 I (VS, 644). Tip:

• To protect the environment from pollution, be sure to dispose of the used filters at special collection points.






**VIEW MORE TUTORIALS** 

CLUB.AUTODOC.CO.UK 8-9





## AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

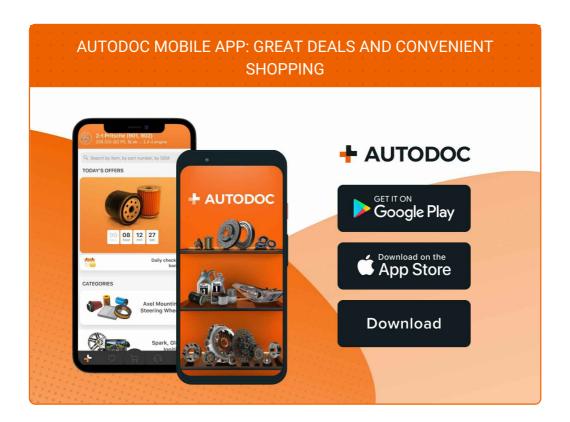

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

**FUEL FILTER: A WIDE SELECTION** 

### **① DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

CLUB.AUTODOC.CO.UK 9–9