## **+** AUTODOC CLUB

How to change front ABS sensor on VW

Transporter T6 Minibus
(SGB, SGG, SGJ) –
replacement guide







#### SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### i Important!

This replacement procedure can be used for:

VW Transporter T6 Minibus (SGB, SGG, SGJ) 2.0 TDI, VW Transporter T6 Minibus (SGB, SGG, SGJ) 2.0 TDI 4motion, VW Transporter T6 Minibus (SGB, SGG, SGJ) 2.0 TSI, VW Transporter T6 Minibus (SGB, SGG, SGJ) 2.0 TSI 4motion

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Passat B7 Saloon (362) 2.0 TDI

CLUB.AUTODOC.CO.UK 1-9







# REPLACEMENT: ABS SENSOR – VW TRANSPORTER T6 MINIBUS (SGB, SGG, SGJ). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- Nylon cleaning brush
- WD-40 spray
- Brake cleaner
- Electronic spray
- Multipurpose grease
- Copper grease

- Torque wrench
- HEX bit No.H5
- Wheel impact socket #17
- Ratchet wrench
- Flat screwdriver
- Wheel chock

**Buy tools** 

CLUB.AUTODOC.CO.UK 2–9







Replacement: ABS sensor – VW Transporter T6 Minibus (SGB, SGG, SGJ).

AUTODOC experts recommend:

• All work should be done with the engine stopped.

# REPLACEMENT: ABS SENSOR – VW TRANSPORTER T6 MINIBUS (SGB, SGG, SGJ). USE THE FOLLOWING PROCEDURE:

- Secure the wheels with chocks.
- Loosen the wheel mounting bolts. Use wheel impact socket #17.



- Raise the front of the car and secure on supports.
- 4 Unscrew the wheel bolts.



#### **AUTODOC** recommends:

 Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. VW Transporter T6 Minibus (SGB, SGG, SGJ)

CLUB.AUTODOC.CO.UK 3-9







Remove the wheel.



6 Detach the ABS sensor connector.



Clean the ABS sensor fastener. Use a wire brush. Use WD-40 spray.



8 Unscrew the ABS sensor fastener. Use HEX No.H5. Use a ratchet wrench.



Disconnect the ABS sensor.



CLUB.AUTODOC.CO.UK 4–9








Clean the ABS sensor mounting seat. Use a wire brush. Use WD-40 spray.



Treat the ABS sensor fastener. Use a multipurpose grease. Use a flat screwdriver.



Connect the ABS sensor.

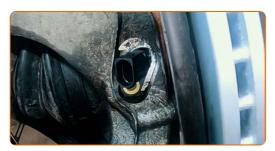

Tighten the fastener that connects the ABS sensor to the steering knuckle. Use HEX No.H5. Use a torque wrench. Tighten it to 7 Nm torque.



CLUB.AUTODOC.CO.UK 5–9







Treat the ABS sensor connector. Use a nylon cleaning brush. Use dielectric grease.



15 Attach the ABS sensor connector.



Clean the wheel rim mounting seat. Use a wire brush.



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



CLUB.AUTODOC.CO.UK 6-9







Clean the brake disk surface. Use a brake cleaner.



#### **AUTODOC** recommends:

 Replacement: ABS sensor – VW Transporter T6 Minibus (SGB, SGG, SGJ). After applying the spray, wait a few minutes.

19

18

Install the wheel.



#### AUTODOC recommends:

 Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. VW Transporter T6 Minibus (SGB, SGG, SGJ)

20

Screw in the wheel bolts. Use wheel impact socket #17.



CLUB.AUTODOC.CO.UK 7–9







- Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.
- Remove the jacks and chocks.





**VIEW MORE TUTORIALS** 

CLUB.AUTODOC.CO.UK 8-9





### AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

**ABS SENSOR: A WIDE SELECTION** 

### **① DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

CLUB.AUTODOC.CO.UK 9-9