AUTODOC CLUB

How to change track rod end on **VW Touran 1T1 1T2** – replacement guide

VIDEO TUTORIAL

Important!

This replacement procedure can be used for:
VW Passat B7 Saloon (362) 1.4 TSI, VW Passat B7 Saloon (362) 1.8 TSI, VW Passat B7 Saloon (362) 2.0 TSI, VW Passat B7 Saloon (362) 1.6 TDI, VW Passat B7 Saloon (362) 2.0 TDI, VW Passat B7 Saloon (362) 2.0 TDI 4motion, VW Passat B7 Saloon (362) 1.4 TSI EcoFuel, VW Passat B7 Variant (365) 1.4 TSI, VW Passat B7 Variant (365) 1.8 TSI, VW Passat B7 Variant (365) 1.6 TDI, VW Passat B7 Variant (365) 2.0 TSI, VW Passat B7 Variant (365) 2.0 TDI, VW Passat B7 Variant (365) 2.0 TDI 4motion, VW Passat B7 Variant (365) 1.4 TSI EcoFuel, VW Touran I (1T3) 1.2 TSI, (+ 461)

The steps may slightly vary depending on the car design.

REPLACEMENT: TRACK ROD END – VW TOURAN 1T1 1T2. TOOLS YOU MIGHT NEED:

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #23
- Combination spanner #24
- Drive socket # 18
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Vernier caliper
- Ball joint puller
- Wheel chock

BUY TOOLS

Replacement: track rod end – VW Touran 1T1 1T2. AUTODOC recommends:

- Replace tie rod ends in pairs.
- The replacement procedure is identical for the right and left tie rod ends.
- All work should be done with the engine stopped.

REPLACEMENT: TRACK ROD END – VW TOURAN 1T1 1T2. TAKE THE FOLLOWING STEPS:

1 Secure the wheels with chocks.

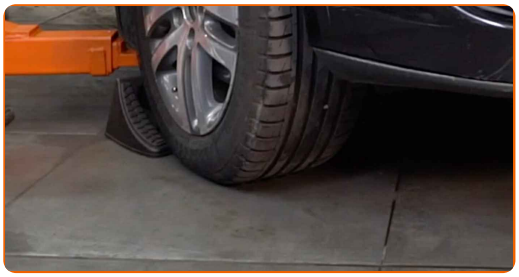

2 Loosen the wheel mounting bolts. Use wheel impact socket #17.

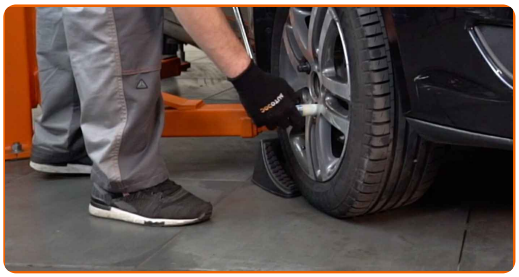

3 Raise the front of the car and secure on supports.

4 Unscrew the wheel bolts.

AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. VW Touran 1T1 1T2

5 Remove the wheel.

6 Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.

7 Unscrew the end fastening nut to the steering knuckle. Use a drive socket #18. Use a tap wrench.

8 When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.

9 Loosen the lock nut securing the tie rod end to the tie rod. Use a combination spanner #24.

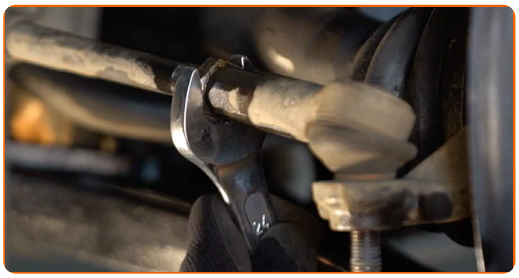

10 Disconnect the tie rod end from the steering knuckle. Use a ball joint puller.

11 Screw the end out of the tie rod.

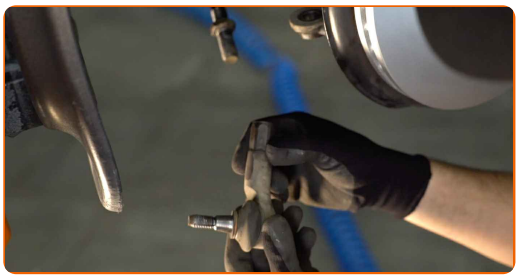

12 Clean the mounting seats of the tie rod end. Use a wire brush. Use WD-40 spray.

13 Screw on a new tie rod end.

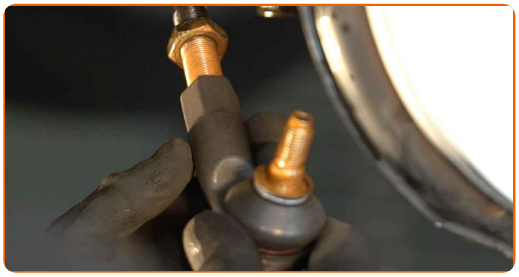

Replacement: track rod end – VW Touran 1T1 1T2. Professionals recommend:

- While installing the steering rod end remember to make the same number of turns or to leave the same length of thread showing as per your measurements.

14 Connect the tie rod end to the steering knuckle.

15 Screw on the fastening nut that connects the tie rod end to the steering knuckle. Use a drive socket #18. Use a ratchet wrench.

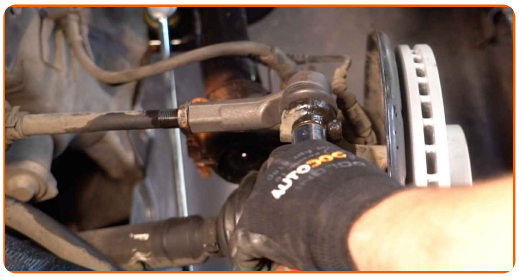

16 When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.

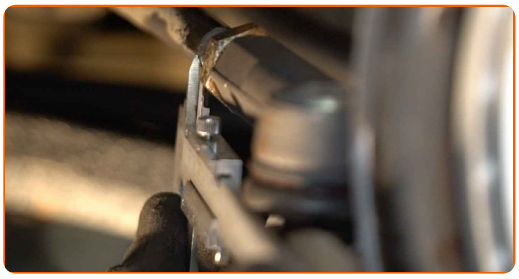

17 Tighten the tie rod end locknut. Use a combination spanner #23. Use a combination spanner #24. Use a torque wrench. Tighten it to 50 nm torque.

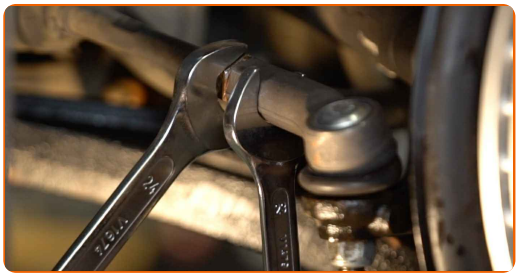

18 Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #18. Use a torque wrench. Tighten it to 20 Nm torque.+90°

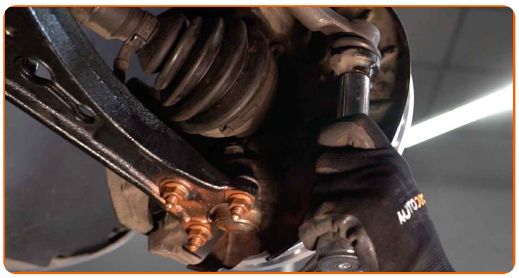

AUTODOC recommends:

- Important! Be sure to use new fasteners.

19 Treat the fastener connecting the tie rod end to the steering knuckle. Use copper grease.

20 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

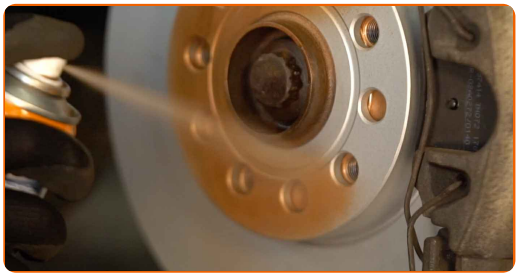

21 Clean the brake disk surface. Use a brake cleaner.

AUTODOC recommends:

- Replacement: track rod end – VW Touran 1T1 1T2. After applying the spray, wait a few minutes.

22 Install the wheel.

Replacement: track rod end – VW Touran 1T1 1T2. Tip from AUTODOC experts:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

23 Screw in the wheel bolts. Use wheel impact socket #17.

24 Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 nm torque.

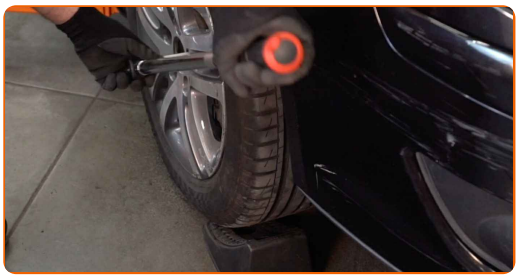

Replacement: track rod end – VW Touran 1T1 1T2. Tip from AUTODOC:

- Check and adjust wheel alignment if necessary.

25

Remove the jacks and chocks.

WELL DONE!

VIEW MORE TUTORIALS

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VW

TRACK ROD END: A WIDE SELECTION

CHOOSE CAR PARTS FOR VW TOURAN 1T1 1T2

TRACK ROD END FOR VW: BUY NOW

TRACK ROD END FOR VW TOURAN 1T1 1T2: THE BEST DEALS & OFFERS

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.