VIDEO TUTORIAL

Important!

This replacement procedure can be used for:
BMW 3 (E90) 318 i, BMW 3 (E90) 320 i, BMW 3 Touring (E91) 318 i, BMW 3 Touring (E91) 320 i, BMW X1 (E84) sDrive 18 i, BMW X3 (E83) 2.0 i, BMW Z4 Roadster (E85) 2.0 i

---

The steps may slightly vary depending on the car design.

REPLACEMENT: SPARK PLUGS – BMW E90. LIST OF THE TOOLS YOU'LL NEED:

- Dielectric grease
- High-temperature anti-seize lubricant
- Drive socket # 8
- Drive socket # E14
- Drive socket # E18
- Spark plug socket # 16
- Ratchet wrench
- Torque wrench
- Flat Screwdriver
- Fender cover

Replacement: spark plugs – BMW E90. Tip from AUTODOC:

- The replacement procedure is the same for all spark plugs.
- All work should be done with the engine stopped.

REPLACEMENT: SPARK PLUGS – BMW E90. USE THE FOLLOWING PROCEDURE:

1

Open the hood.

2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3

Remove the clips of the plastic cowl grille. Use a flat screwdriver.

4

Remove the wiper cowl grille located on the left side. Use a flat screwdriver.

5

Detach the electrical wiring from the upper part of the microfilter housing.

6

Remove the clips of the plastic cowl grille. Use a flat screwdriver.

7

Remove the wiper cowl grille located on the right side. Use a flat screwdriver.

8

Unscrew the fasteners of the cowl grille. Use a drive socket #8. Use a ratchet wrench.

9

Raise the wiper plastic cowl grille.

10

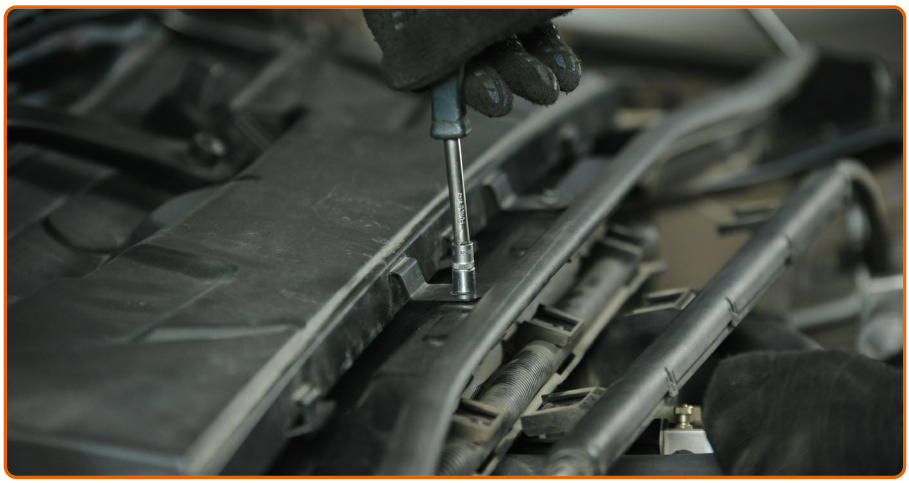

Unscrew the fasteners of the cabin filter housing cover. Use a drive socket #8. Use a ratchet wrench.

11

Remove the cabin filter housing cover.

12

Remove the clips of the plastic cowl grille.

13

Raise up and remove the cowl grille.

14

Unscrew the fasteners of the diagonal braces. Use a drive socket #E14. Use a ratchet wrench.

15

Take off the cover above the fastener that holds the diagonal braces. Use a flat screwdriver.

16

Unscrew the fasteners of the diagonal braces. Use a drive socket #E18. Use a ratchet wrench.

17

Remove the fastening bolt.

18

Remove the diagonal brace.

19

Unscrew the oil filler plug.

20

Remove the oil filler cap. Use a flat screwdriver.

21

Remove the engine cover.

AUTODOC recommends:

- Replacement: spark plugs – BMW E90. Do not use excessive force when removing the part as this may damage it.

22

Install the oil filler cap.

23

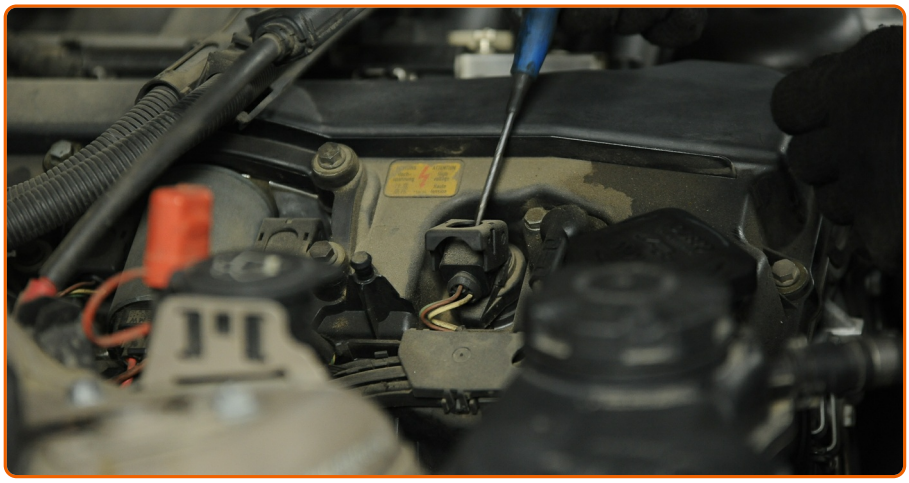

Unplug the connectors from the ignition coils. Use a flat screwdriver.

24

Take out the ignition coils from the spark plug wells. Use a flat screwdriver.

Replacement: spark plugs – BMW E90. Professionals recommend:

- Remember the sequence of steps for ignition coil demounting.

25

Clean dirt, dust and debris from inside the spark plug wells.

26

Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.

27

Take out the spark plugs. Use the spark plug socket #16.

28

Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.

29

Install the new spark plugs into their mounting seats. Use the spark plug socket #16.

30

Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 27 nm torque.

Replacement: spark plugs – BMW E90. AUTODOC experts recommend:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

31

Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.

32

Install the ignition coils to the spark plug wells. Make sure you hear a click indicating that it is locked in place.

Replacement: spark plugs – BMW E90. Professionals recommend:

- Follow the installation sequence.

33

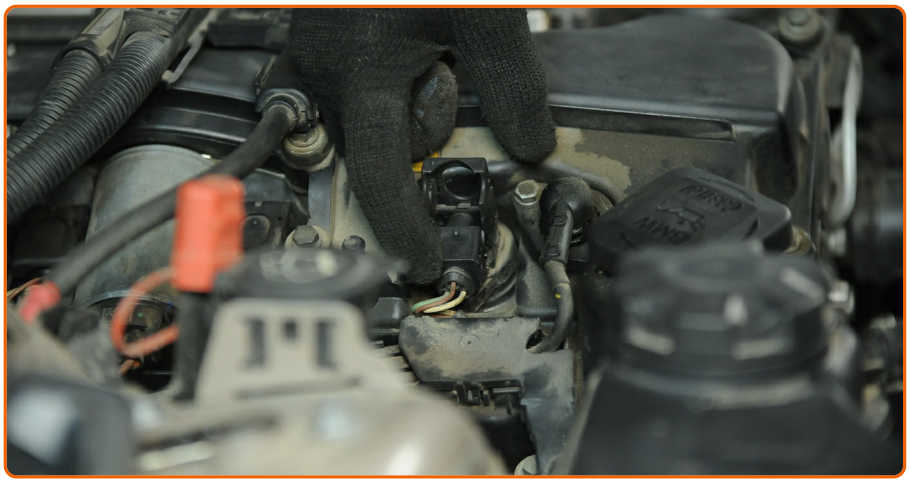

Plug in the connectors of the ignition coils.

34

Remove the oil filler cap.

35

Install the engine cover and secure it.

Replacement: spark plugs – BMW E90. AUTODOC recommends:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Do not apply excessive force when installing the part. Otherwise you may damage the fasteners.

36

Install the oil filler cap.

37

Tighten the oil filler cap.

38

Install the diagonal brace.

39

Screw in the fasteners of the diagonal braces.

40

Install the fastening bolt.

41

Tighten the fasteners of the diagonal braces. Use a drive socket #E18. Use a torque wrench. Tighten it to 65 nm torque.

42

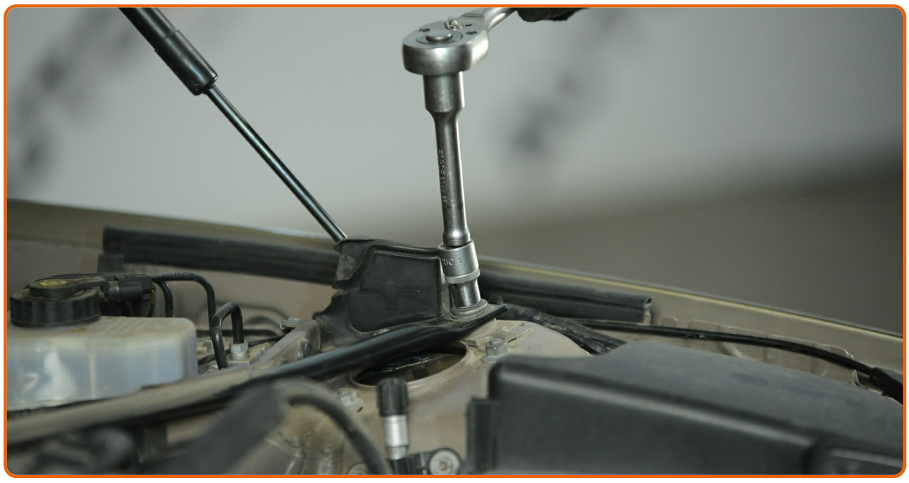

Tighten the fasteners of the diagonal braces. Use a drive socket #E14. Use a torque wrench. Tighten it to 55 nm torque.

43

Put the cover above the fastener that holds the diagonal braces back in place.

44

Install and secure the cowl grille.

45

Install the fasteners of the wiper plastic cowl grille.

46

Tighten the fasteners of the cowl grille. Use a drive socket #8. Use a torque wrench. Tighten it to 11 nm torque.

47

Attach the electrical wiring to the upper part of the microfilter housing.

48

Install the wiper cowl grille on the left side.

49

Install the fasteners of the wiper plastic cowl grille.

50

Install and secure the wiper cowl grille located on the right side.

51

Install the fasteners of the wiper plastic cowl grille.

52

Reinstall the cabin filter housing cover.

53

Screw in the fasteners of the cabin filter housing cover. Use a drive socket #8. Use a ratchet wrench.

54

Remove the fender protection cover.

55

Close the hood.

56

Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

57

Shut off the engine.

DID YOU FIND THESE INSTRUCTIONS HELPFUL?

YES NO

BECOME A MEMBER OF AUTODOC CLUB!

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

SPARK PLUGS: A WIDE SELECTION

CHOOSE CAR PARTS FOR BMW E90

SPARK PLUGS FOR BMW: BUY NOW

SPARK PLUGS FOR BMW E90: THE BEST DEALS & OFFERS

Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AutoDoc shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2018 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by Autodoc GmbH.