AUTODOC
Expert in auto parts!

How to replace front suspension shock absorbers on MERCEDES-BENZ C-CLASS W202

Carry out replacement in the following order:

Replace both shock absorbers at the repair of your car MERCEDES-BENZ C-CLASS W202 at the same time.

1

Tighten the parking brake lever.

2

Place wedge blocks under the rear wheels.

3

Loosen the wheel mounting bolts.

4

Raise the front of the car and secure on supports.

5

Remove the front wheels.

6

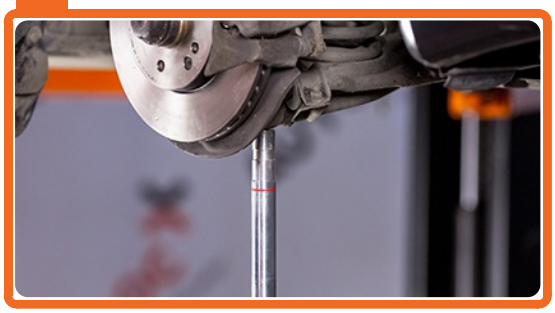

Prop up the steering knuckle.

7

Unscrew the lower fastener of the shock absorber.

8

Open the hood

9

Remove the upper seal from the firewall.

10

Remove the protective cover.

11

Unscrew the upper fastener of the shock absorber.

12

Remove the shock absorber.

AutoDoc recommends:

Before installing a new shock absorber you should pump it manually 3-5 times.

13.1

Place the shock absorber in the wheel arch and fasten it.

13.2

14

Tighten the top shock absorber fastening.

15

Install the protective cover.

16

Install the upper seal on the firewall

17

Close the hood

18

Tighten the lower fastener of the shock absorber.

19

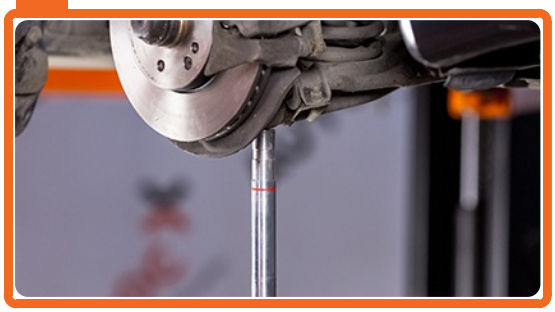

Remove the support from under the steering knuckle.

20

Install the wheel.

21

Lower the car and working in a cross order, tighten the wheel bolts

We hope that this information have been useful for you!

Video tutorials

Watch our detailed video guides about your MERCEDES-BENZ C-CLASS W202 repair on our youtube channel. Watch video guides.

AutoDoc online

Highest quality shock absorbers for your car MERCEDES-BENZ C-CLASS W202 are available on AutoDoc. Go to the website.

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

QUALITY AUTO PARTS

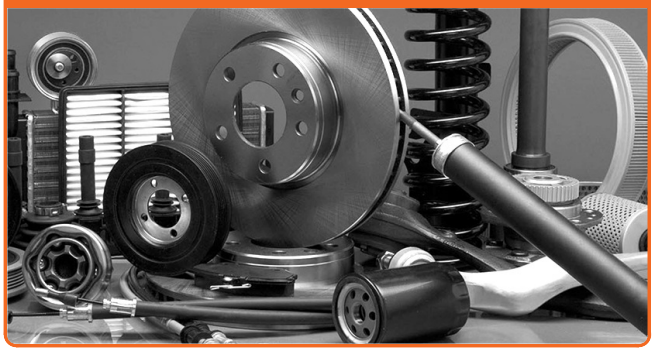

MERCEDES-BENZ

SHOCK ABSORBERS

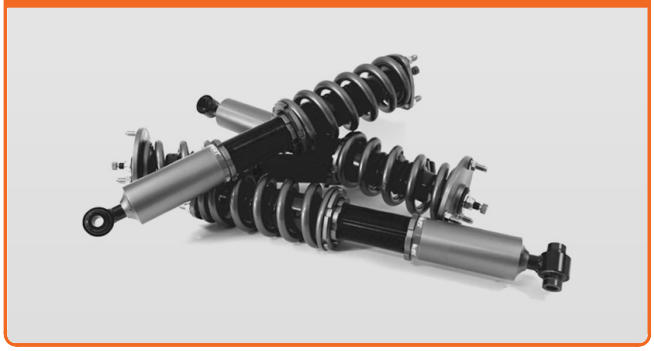

MERCEDES-BENZ C-CLASS W202

SHOCK ABSORBERS FOR MERCEDES-BENZ

SHOCK ABSORBERS FOR MERCEDES-BENZ C-CLASS W202

Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement works. AutoDoc shall not be liable for any loss, injury, damage of property, acquired in the repair or replacement process due to incorrect usage or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for informative purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

AUTODOC IN SOCIAL MEDIA