- AUTODOC CLUB

How to change fuel filter on **SEAT Toledo IV Hatchback (KG3)** – replacement guide



SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!


This replacement procedure can be used for: SEAT Toledo IV Hatchback (KG3) 1.2, SEAT Toledo IV Hatchback (KG3) 1.2 TSI, SEAT Toledo IV Hatchback (KG3) 1.4 TSI, SEAT Toledo IV Hatchback (KG3) 1.6 (CFNA), SEAT Toledo IV Hatchback (KG3) 1.6, SEAT Toledo IV Hatchback (KG3) 1.0 TSI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A3 Sportback (8PA) 1.2 TSI



REPLACEMENT: FUEL FILTER – SEAT TOLEDO IV HATCHBACK (KG3). LIST OF THE TOOLS YOU'LL NEED:

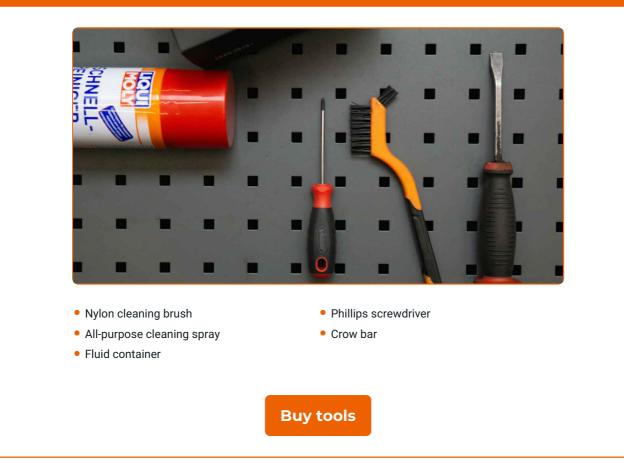



Replacement: fuel filter – SEAT Toledo IV Hatchback (KG3). Professionals recommend:

• Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.

• All work should be done with the engine stopped.

REPLACEMENT: FUEL FILTER – SEAT TOLEDO IV HATCHBACK (KG3). RECOMMENDED SEQUENCE OF STEPS:



Open the fuel door.

Unscrew the fuel filler cap.

Lift the car using a jack or place it over an inspection pit.



Prepare a container for fluids.





Clean the fasteners of the fuel supply lines. Use a nylon cleaning brush. Use all-purpose cleaning spray.







Disconnect the fuel supply lines from the fuel filter. Use a crowbar.



Replacement: fuel filter – SEAT Toledo IV Hatchback (KG3). AUTODOC experts recommend:

• Be careful! Fuel may leak from the filter housing and hoses.



Loosen the fuel filter mounting. Use a Phillips screwdriver.



8

Remove the fuel filter.



9

Disconnect the fuel supply lines from the fuel filter.



+ AUTODOC CLUB





Put the old filter cartridge in the container.

11

Connect the fuel supply lines to the fuel filter.



12

Install a new fuel filter.



Replacement: fuel filter – SEAT Toledo IV Hatchback (KG3). AUTODOC recommends:

- Make sure that the fuel filter is positioned correctly. Consider the fuel flow direction mark.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- Attention! Use quality filters SEAT Toledo IV Hatchback (KG3).

13

Screw in the fuel filter mounting bracket. Use a Phillips screwdriver.



+ AUTODOC CLUB



14

Connect the fuel supply lines to the fuel filter.



15

Take the fluid container away from under the fuel filter.



Lower the car.

18

17 Tighten the fuel filler cap.

Close the fuel door.



- Before starting off, switch the ignition on and off several times. This should be done to activate the fuel pump to make it pump fuel through the fuel system.
- 19

20

Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

Shut off the engine.



Replacement: fuel filter – SEAT Toledo IV Hatchback (KG3). Professionals recommend:

• To protect the environment from pollution, be sure to dispose of the used filters at special collection points.



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

FUEL FILTER: A WIDE SELECTION

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.