



How to change rear ABS
sensor on **VW Golf IV**
Variant (1J5) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

VW Golf IV Variant (1J5) 1.4 16V, VW Golf IV Variant (1J5) 1.6, VW Golf IV Variant (1J5) 2.0, VW Golf IV Variant (1J5) 1.9 SDI, VW Golf IV Variant (1J5) 1.9 TDI, VW Golf IV Variant (1J5) 2.3 V5, VW Golf IV Variant (1J5) 1.6 16V, VW Golf IV Variant (1J5) 2.0 Bi-Fuel, VW Golf IV Variant (1J5) 1.6 FSI, VW Golf IV Variant (1J5) 1.8 T

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Golf IV Hatchback (1J1) 1.6

REPLACEMENT: ABS SENSOR – VW GOLF IV VARIANT (1J5). TOOLS YOU MIGHT NEED:

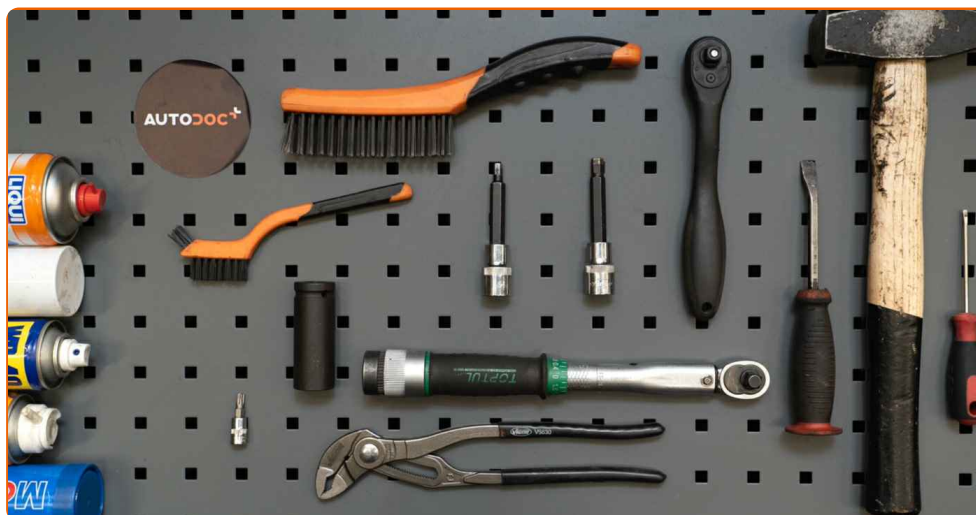

- Wire brush
- WD-40 spray
- Brake cleaner
- Electronic spray
- Copper grease
- Multipurpose grease
- Torque wrench
- Torx bit T30
- HEX bit No.H5
- HEX bit No.H8
- Wheel impact socket #17
- Ratchet wrench
- Flat screwdriver
- Water pump pliers
- Pin punch
- Tap wrench
- Hammer
- Crow bar
- Wheel chock

Buy tools

Replacement: ABS sensor – VW Golf IV Variant (1J5). Tip from AUTODOC:

- All work should be done with the engine stopped.

REPLACEMENT: ABS SENSOR – VW GOLF IV VARIANT (1J5). USE THE FOLLOWING PROCEDURE:

1 Secure the wheels with chocks.

2 Loosen the wheel mounting bolts. Use wheel impact socket #17.



3 Raise the rear of the car and secure on supports.


4 Unscrew the wheel bolts.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. VW Golf IV Variant (1J5)


5 Remove the wheel.

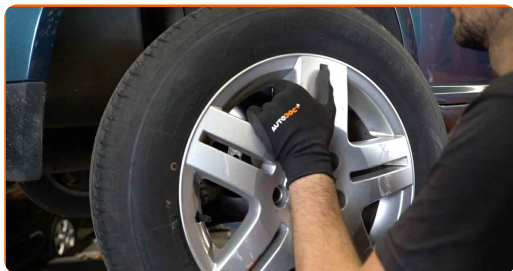


6 Clean the ABS sensor fastener. Use a nylon cleaning brush. Use WD-40 spray.

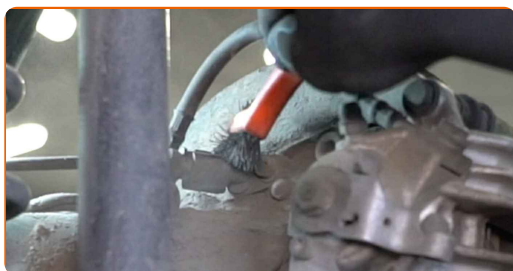

7 Detach the ABS sensor connector. Use a flat screwdriver.

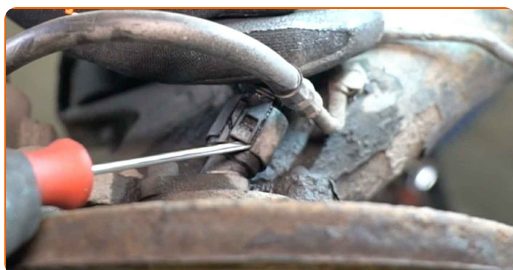

8 Unscrew the ABS sensor fastener. Use HEX No.H5. Use a ratchet wrench.

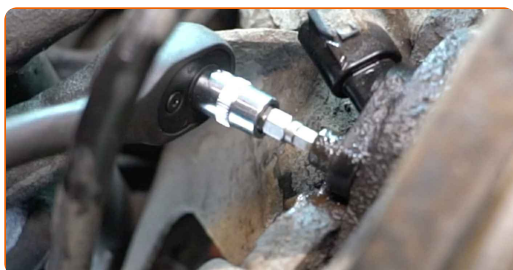


9

Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.




10

Unscrew the brake caliper bracket fasteners. Use HEX No.H8. Use a ratchet wrench. Use a tap wrench.

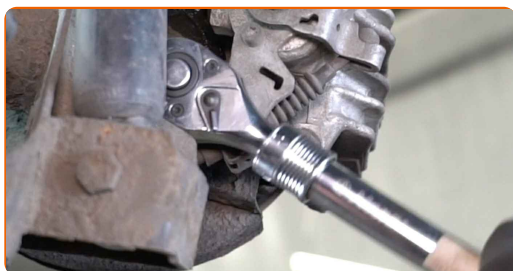


11

Release the parking brake cable. Use water pump pliers. Use a crowbar.

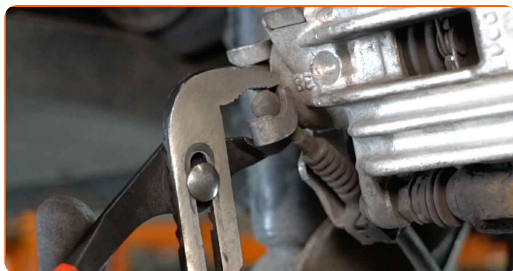

12

Remove the brake caliper together with its bracket.

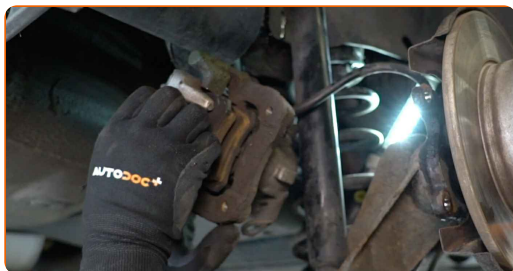

Replacement: ABS sensor – VW Golf IV Variant (1J5). AUTODOC experts recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

13

Clean the brake disc fastener. Use a wire brush. Use WD-40 spray.

14

Unscrew the brake disc fastening. Use Torx T30. Use a ratchet wrench.




15

Remove the brake disc.




16


Disconnect the ABS sensor. Use a pin punch. Use a hammer. Use a crowbar.

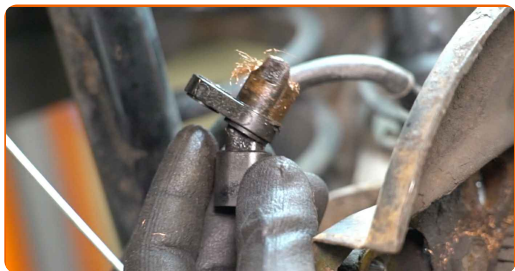**17**


Clean the ABS sensor mounting seat. Use a wire brush. Use WD-40 spray.

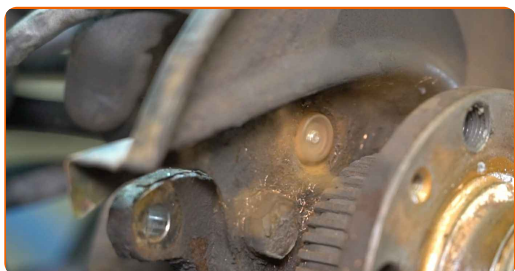**18**

Treat the ABS sensor fastener. Use a multipurpose grease.

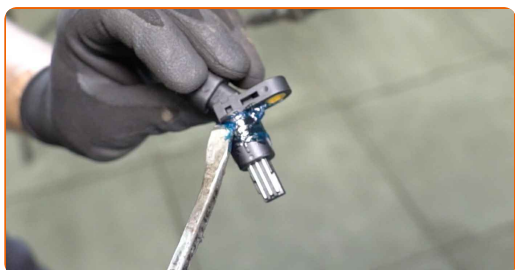**19**


Connect the ABS sensor.

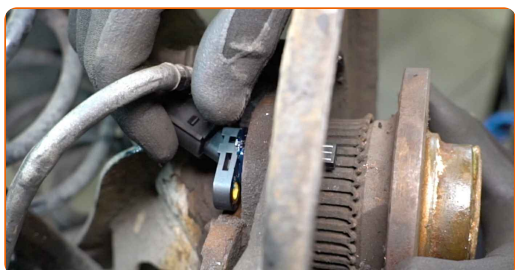

- 20 Tighten the fastener connecting the ABS sensor to the stub axle. Use HEX No.H5. Use a torque wrench. Tighten it to 6 Nm torque.




- 21 Treat the ABS sensor connector. Use dielectric grease.

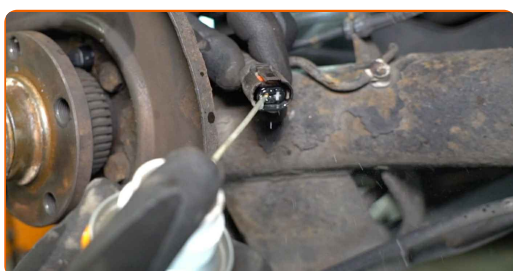


- 22 Attach the ABS sensor connector.



- 23 Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.

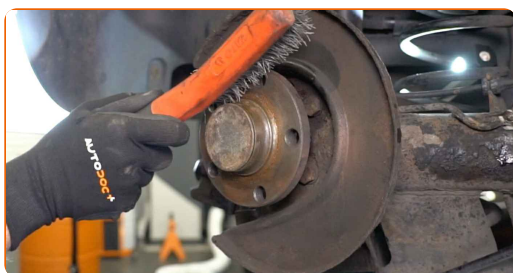

- 24 Install the brake disc.

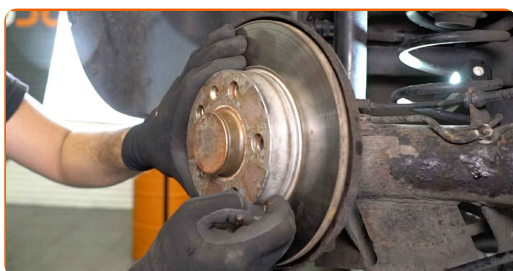


25 Tighten the brake disc fastening. Use Torx T30. Use a torque wrench. Tighten it to 6 Nm torque.



26 Install the brake caliper together with its bracket.




27 Tighten the brake caliper bracket. Use HEX No.H8. Use a torque wrench. Tighten it to 45 Nm torque.

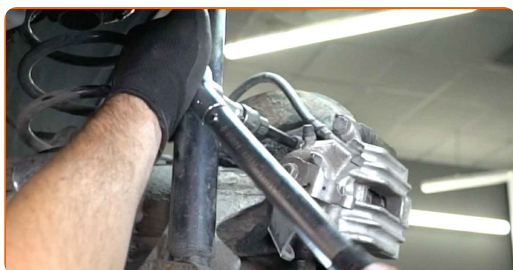


28 Install the parking brake cable into the brake caliper bracket. Use water pump pliers. Use a crowbar.



29 Clean the wheel rim mounting seat. Use a wire brush.

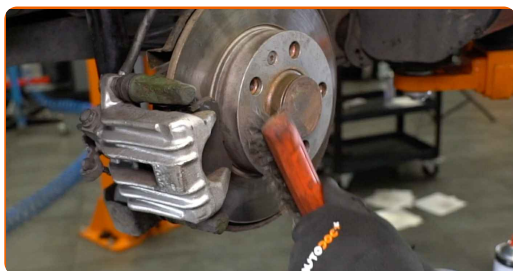

30 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

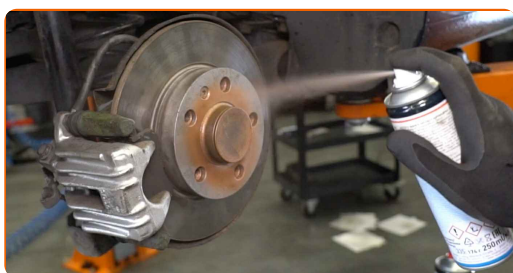

31 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: ABS sensor – VW Golf IV Variant (1J5). After applying the spray, wait a few minutes.

32 Install the wheel.



AUTODOC recommends:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.


33

Screw in the wheel bolts. Use wheel impact socket #17.



34

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.

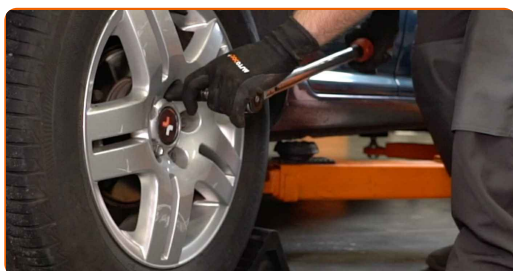

35

Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

ABS SENSOR: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.