- AUTODOC CLUB

How to change air filter on **VW POLO VIVO Hatchback** – replacement guide



SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: VW POLO VIVO Hatchback 1.6 16V, VW POLO VIVO Hatchback 1.4

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW POLO (9N_) 1.4 16V

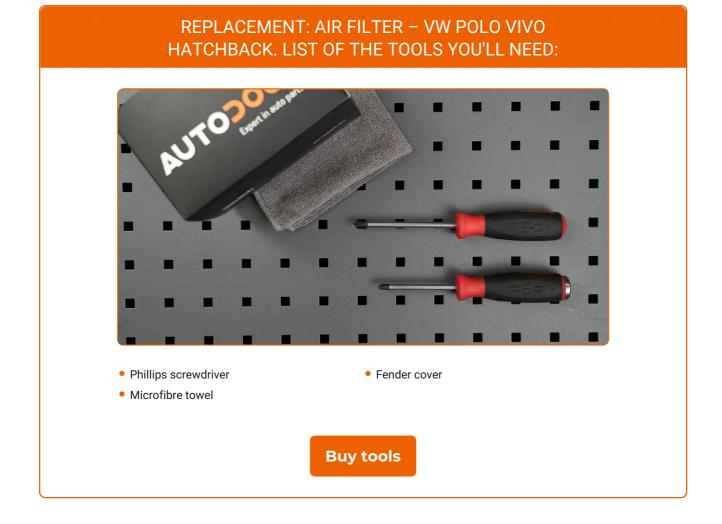

ß

O

+ AUTODOC CLUB



Replacement: air filter – VW POLO VIVO Hatchback. Tip from AUTODOC experts:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- All work should be done with the engine stopped.

REPLACEMENT: AIR FILTER – VW POLO VIVO HATCHBACK. TAKE THE FOLLOWING STEPS:



Open the bonnet.

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Detach the crankcase ventilation hose from the engine cover at the left.





Remove the engine cover. The air filter housing is integrated into the engine cover.





Replacement: air filter - VW POLO VIVO Hatchback. Tip from AUTODOC:

• Raise the engine cover, holding it on two sides simultaneously.

5

Cover the throttle body with a microfibre towel to prevent dust and dirt from getting into the system.



6

Undo the fastening screws of the air filter cover. Use a Phillips screwdriver.



7

Take off the filter lid.



8

Remove the filter element from the filter housing.





9

Clean the air filter cover and housing.



Replacement: air filter - VW POLO VIVO Hatchback. Tip:

• Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

10

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



AUTODOC recommends:

- Replacement: air filter VW POLO VIVO Hatchback. Be sure to position the filtering element correctly. Avoid misalignment.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

+ AUTODOC CLUB



11

Reinstall the air filter cover. Fasten it.



12

Screw in the fastening screws of the air filter cover. Use a Phillips screwdriver.



13

Remove the microfibre towel from the throttle body.



14

Install the engine cover and secure it. Make sure you hear a click indicating that it is locked in place.

AUTODOC recommends:

• Replacement: air filter – VW POLO VIVO Hatchback. Do not use excessive force during installation. This may damage the fasteners.

+ AUTODOC CLUB





Attach the crankcase ventilation hose to the engine cover at the left.





Remove the fender protection cover.

17

Close the hood.



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

AIR FILTER: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.