# **+** AUTODOC CLUB


How to change rear brake shoes on **Toyota Yaris P1** – replacement guide







#### **VIDEO TUTORIAL**

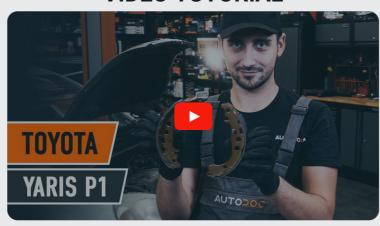

#### (i) Important!

This replacement procedure can be used for:

TOYOTA Yaris Hatchback (\_P1\_) 1.0 (SCP10\_), TOYOTA Yaris Hatchback (\_P1\_) 1.5 (NCP13\_), TOYOTA Yaris Hatchback (\_P1\_) 1.4 D-4D (NLP10\_), TOYOTA Yaris Hatchback (\_P1\_) 1.3 (SCP12\_), TOYOTA AYGO (WNB1\_, KGB1\_) 1, TOYOTA AYGO (WNB1\_, KGB1\_) 1.0 GPL (KGB10\_), TOYOTA AYGO (PAB4\_, KGB4\_) 1.0 (KGB40\_), TOYOTA AYGO (PAB4\_, KGB4\_) 1.2 (PAB40\_), TOYOTA AYGO (PAB4\_, KGB4\_) 1.0 VVTi (KGB40)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1–16







## REPLACEMENT: BRAKE SHOES - TOYOTA YARIS P1. TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- All-purpose cleaning spray
- Copper grease
- Torque wrench
- Drive socket # 10
- Wheel impact socket #21

- Ratchet wrench
- Flat Screwdriver
- Crow bar
- Round-nose pliers
- Water pump pliers
- Brake shoe retaining spring compressor
- Wheel chock

**BUY TOOLS** 

CLUB.AUTODOC.CO.UK 2-16







#### Replacement: brake shoes – Toyota Yaris P1. AUTODOC recommends:

- Replace brake shoes as a set on an axle. This will ensure efficient braking.
- The replacement procedure is identical for brake shoes on the same axle.
- Please note: all work on the car Toyota Yaris P1 should be done with the engine switched off.

#### CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

Open the bonnet. Unscrew the brake fluid reservoir cap.



- 2 Secure the wheels with chocks.
- Loosen the wheel mounting bolts. Use wheel impact socket #21.



CLUB.AUTODOC.CO.UK 3-16







A Raise the rear of the car and secure on supports.



5 Unscrew the wheel bolts.



#### **AUTODOC** recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
   Toyota Yaris P1
- 6 Remove the wheel.



Clean the brake drum fasteners. Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 4–16







Remove the cap of the parking brake cable fastener.



Loosen the parking brake cable. Use a drive socket #10. Use a ratchet wrench.



10 Remove the brake drum.

11



Remove the lower return spring of brake shoes. Use a crowbar. Use round-nose pliers.



CLUB.AUTODOC.CO.UK 5-16








Remove the hold-down spring. Use a flat screwdriver.



Move the parking brake shoes against the drum. Use a crowbar. Use a flat screwdriver.

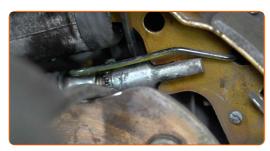

Remove the hold-down pins of the brake shoes. Use a brake shoe retaining spring compressor.



15

Remove the upper return spring of the brake shoes. Use round-nose pliers.



CLUB.AUTODOC.CO.UK 6-16

16

18







Pull both brake shoes with the adjuster from the working brake cylinder, avoiding damage to the boots.




#### Replacement: brake shoes – Toyota Yaris P1. Tip from AUTODOC experts:

Don't press the brake pedal after removing the rear brake drum shoes. This will
cause the piston to fall out of the brake cylinder, leakage of brake fluid and
depressurization of the system.

Disconnect the parking brake cable.



Perform further demounting of the upper retaining spring and the adjuster mechanism.

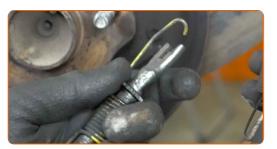

CLUB.AUTODOC.CO.UK 7–16







Place the brake shoes into the vice.



Remove the brake shoe hold-down cup.



Remove the brake shoe adjuster lever. Use a flat screwdriver.



- Loosen the vice and remove the brake shoes.
- Place the new brake shoes into the vice.



CLUB.AUTODOC.CO.UK 8-16







Install the brake shoe adjuster lever.



Reinstall the brake shoe hold-down cup. Use water pump pliers.



Clean the mounting seats of the brake shoes. Use a wire brush. Use all-purpose cleaning spray.



Loosen the vice and remove the brake shoes.

29

Install the brake shoe together with the upper return spring.



Reinstall the brake shoe hold-down pin. Use a brake shoe retaining spring compressor.

CLUB.AUTODOC.CO.UK 9-16







Connect the parking brake cable to the parking brake lever.



Install the brake shoe. Use a flat screwdriver.



Reinstall the brake shoe hold-down pin. Use a brake shoe retaining spring compressor.



Install the upper return spring. Use a flat screwdriver.



Install the lower return spring. Use a flat screwdriver.

34



CLUB.AUTODOC.CO.UK 10-16







Install the hold-down spring. Use round-nose pliers.



Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.



Move the parking brake shoes against the drum.



38 Install a brake drum.

39



Adjust the parking brake cable tension. Use a combination spanner #10. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 11-16







Reinstall the cap of the parking brake cable fastener.



Clean the wheel rim mounting seat. Use a wire brush.



Treat the surface where the wheel rim contacts the brake drum. Use copper grease.



43 Install the wheel.



#### AUTODOC recommends:

 Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Toyota Yaris P1

CLUB.AUTODOC.CO.UK 12-16







Screw in the wheel bolts. Use wheel impact socket #21.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #21. Use a torque wrench. Tighten it to 103 Nm torque.



Remove the jacks and chocks.

47



Tighten the brake fluid reservoir cap. Close the hood.



CLUB.AUTODOC.CO.UK 13-16





### Replacement: brake shoes – Toyota Yaris P1. Professionals recommend:

• Slow down gently for the first 150–200 km after replacing the brake shoes. Avoid excessive and abrupt braking during that time.



**VIEW MORE TUTORIALS** 

CLUB.AUTODOC.CO.UK 14-16





# AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

**BUY SPARE PARTS FOR TOYOTA** 

**BRAKE SHOES: A WIDE SELECTION** 

CLUB.AUTODOC.CO.UK 15-16







**BRAKE SHOES FOR TOYOTA: BUY NOW** 

BRAKE SHOES FOR TOYOTA YARIS P1: THE BEST DEALS & OFFERS

#### **i** DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

CLUB.AUTODOC.CO.UK 16-16