+ AUTODOC CLUB

How to change pollen filter on **Mercedes W210**– replacement guide







VIDEO TUTORIAL



important!

This replacement procedure can be used for:

MERCEDES-BENZ C-Class Saloon (W202) C 200 D (202.120), MERCEDES-BENZ C-Class Saloon (W202) C 220 D (202.121), MERCEDES-BENZ C-Class Saloon (W202) C 250 D (202.125), MERCEDES-BENZ C-Class Saloon (W202) C 180 (202.018), MERCEDES-BENZ C-Class Saloon (W202) C 220 (202.022), MERCEDES-BENZ C-Class Saloon (W202) C 280 (202.028), MERCEDES-BENZ C-Class Saloon (W202) C 200 (202.020), MERCEDES-BENZ C-Class Saloon (W202) C 36 AMG (202.028), MERCEDES-BENZ E-Class Saloon (W210) E 220 D (210.004), MERCEDES-BENZ E-Class Saloon (W210) E 250 D (210.010), MERCEDES-BENZ E-Class Saloon (W210) E 200 (210.035), MERCEDES-BENZ E-Class Saloon (W210) E 300 D (210.020), MERCEDES-BENZ E-Class Saloon (W210) E 230 (210.037), MERCEDES-BENZ E-Class Saloon (W210) E 320 (210.055), MERCEDES-BENZ C-Class Saloon (W202) C 230 Kompressor (202.024), (+ 93)

The steps may slightly vary depending on the car design.


CLUB.AUTODOC.CO.UK 1-9







REPLACEMENT: POLLEN FILTER – MERCEDES W210. TOOLS YOU MIGHT NEED:

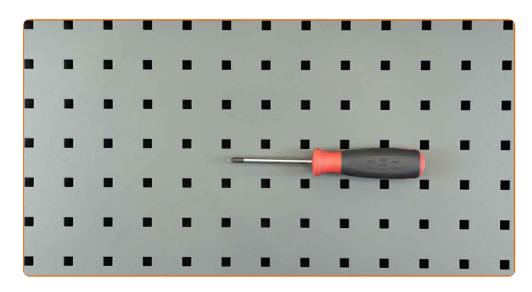

Phillips screwdriver

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-9







Replacement: pollen filter – Mercedes W210. Tip from AUTODOC experts:

- Replace the cabin filter at least once every six months, in early spring and autumn seasons.
- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- If the air flow into the cabin has sharply reduced, replace the filter before a scheduled maintenance.
- All work should be done with the engine stopped.

REPLACEMENT: POLLEN FILTER – MERCEDES W210. TAKE THE FOLLOWING STEPS:

1

Open the car door.



2

Remove the air vent. Use a Phillips screwdriver.



CLUB.AUTODOC.CO.UK 3–9







Remove the lower cover.



A Remove the light.



Slide off the cabin filter cover retainers.



Remove the cabin filter cover.



Remove the cabin filter.



CLUB.AUTODOC.CO.UK 4–9







8 Install the new pollen filter.



Replacement: pollen filter – Mercedes W210. AUTODOC recommends:

• Take care to only use quality filters.

9 Install the cabin filter cover.



Reinstall the cabin filter cover retainers.



11 Reinstall the light.



CLUB.AUTODOC.CO.UK 5–9







Reinstall the lower cover.



Install the air vent. Use a Phillips screwdriver.



- Switch on the ignition.
- Switch on the air conditioning system. This is necessary in order to make sure that the component operates properly.



Switch off the ignition.

CLUB.AUTODOC.CO.UK 6-9







17

Close the car door.








CLUB.AUTODOC.CO.UK 7–9





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

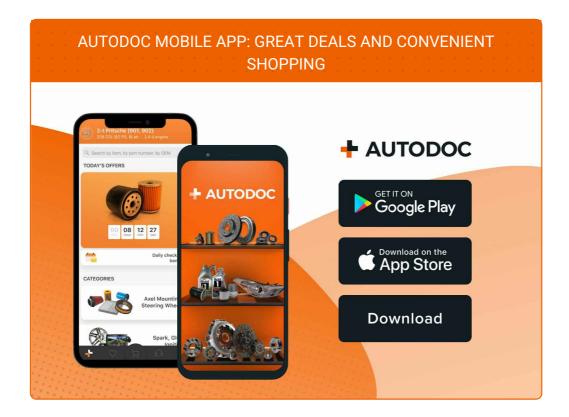

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR MERCEDES

POLLEN FILTER: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 8-9





CHOOSE CAR PARTS FOR MERCEDES W210

POLLEN FILTER FOR MERCEDES: BUY NOW

POLLEN FILTER FOR MERCEDES W210: THE BEST DEALS & OFFERS

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

CLUB.AUTODOC.CO.UK 9-9