



How to change ignition  
coil on **Peugeot 207**  
**hatchback** –  
replacement guide

## VIDEO TUTORIAL




### **i Important!**

This replacement procedure can be used for:

PEUGEOT 508 I (8D\_) Saloon 1.6 VTi, PEUGEOT 508 I SW (8E\_) 1.6 VTi, PEUGEOT 207 Hatchback 1.6 16V Turbo, PEUGEOT 207 CC 1.6 16V, PEUGEOT 207 CC 1.6 16V Turbo, PEUGEOT 207 Hatchback 1.6 16V VTi, PEUGEOT 207 Hatchback 1.6 16V RC, PEUGEOT 308 I Hatchback (4A, 4C) 1.4 16V, PEUGEOT 308 I Hatchback (4A, 4C) 1.6 16V, PEUGEOT 207 SW 1.4 16V, PEUGEOT 207 SW 1.6 16V, PEUGEOT 308 I SW (4E, 4H) 1.4 16V, PEUGEOT 308 I SW (4E, 4H) 1.6 16V, PEUGEOT 207 Hatchback 1.4 16V, PEUGEOT 308 I (0U\_) 1.6 VTi, (+ 2)

The steps may slightly vary depending on the car design.

## REPLACEMENT: IGNITION COIL – PEUGEOT 207 HATCHBACK. LIST OF THE TOOLS YOU'LL NEED:

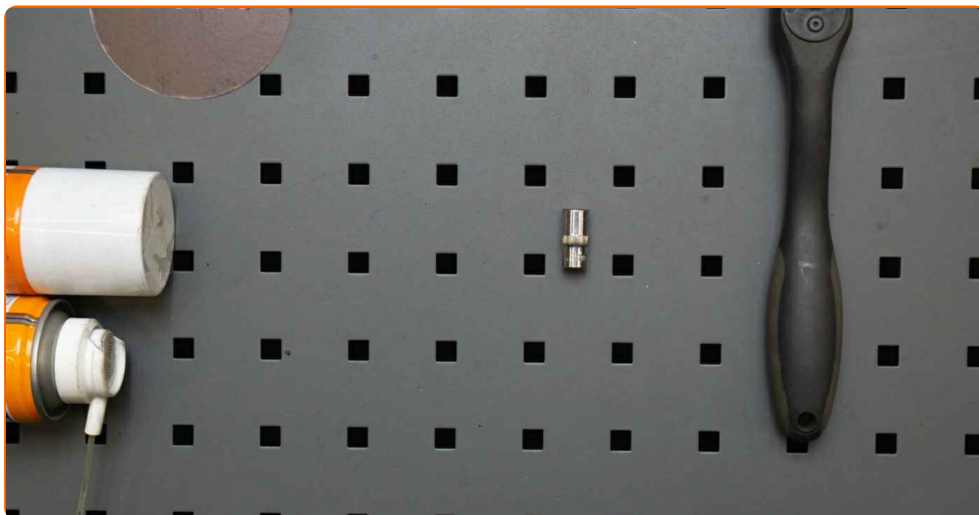

- Electronic spray
- Drive socket # 8
- Ratchet wrench
- Fender cover

**BUY TOOLS**


Replacement: ignition coil – Peugeot 207 hatchback. Tip from AUTODOC experts:

- The replacement procedure is the same for the ignition coils of all cylinders.
- Please note: all work on the car – Peugeot 207 hatchback – should be done with the engine switched off.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Open the hood.

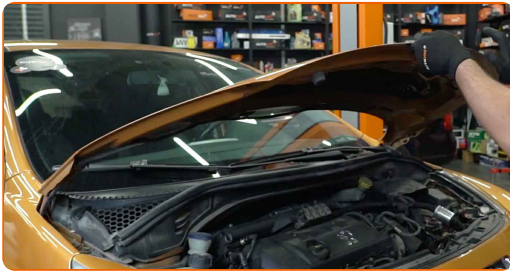

2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

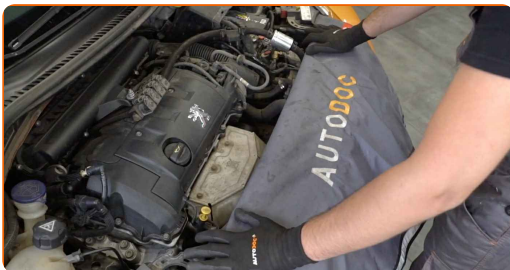


3

Unscrew the engine cover fastener. Use a drive socket #8. Use a ratchet wrench.



4

Remove the engine cover.

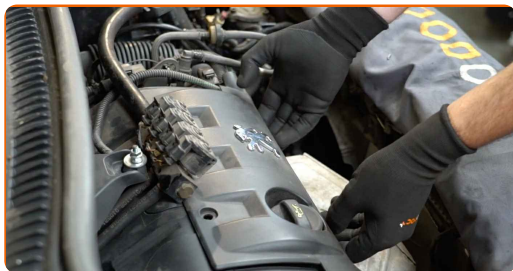

### AUTODOC recommends:

- Replacement: ignition coil – Peugeot 207 hatchback. To avoid damaging the part when removing it, do not use excessive force.

5

Detach the connector from the ignition coil.



6

Take out the ignition coil from the spark plug well.



7

Clean dirt, dust and debris from inside the spark plug wells.




- 8 Install the new ignition coil to the spark plug well. Make sure you hear a click indicating that it is locked in place.



- 9 Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.



- 10 Plug in the ignition coil connector. Make sure you hear a click indicating that it is locked in place.

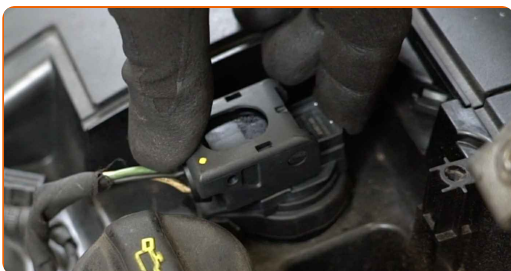

- 11 Install the engine cover and secure it.



### Replacement: ignition coil – Peugeot 207 hatchback. Tip:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- When installing, do not use excessive force to avoid damage to the part.

12

Screw in the engine cover fasteners. Use a drive socket #8. Use a ratchet wrench.



13

Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

14

Shut off the engine.

15

Remove the fender protection cover.



16

Close the hood.



**WELL DONE!** 

**VIEW MORE TUTORIALS**



## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR PEUGEOT**

**IGNITION COIL: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR PEUGEOT 207**

**IGNITION COIL FOR PEUGEOT: BUY NOW**

**IGNITION COIL FOR PEUGEOT 207: THE BEST DEALS & OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.